

本書の読み方

A トラップリスト概要

トラップリストの表の見方、トラップの画面表示例について説明しています。

B トラップリスト

トラップリストを分類別に説明しています。

■ 商標

Microsoft、Windows、MS、Windows Server は、米国 Microsoft Corporation の米国およびその他の国における登録商標または商標です。

インテル、Intel、Pentium は、アメリカ合衆国およびその他の国における Intel Corporation またはその子会社の商標または登録商標です。

その他の各製品名は、各社の商標、または登録商標です。

その他の各製品は、各社の著作物です。

All Rights Reserved, Copyright[®] FUJITSU LIMITED 2005

目 次

A ト ラッ プ リ スト概要	5
A.1 注意事項	5
A.2 ト ラッ プ リ ストの見方	5
A.3 画 面 表 示 例	6
B ト ラッ プ リ スト	9
B.1 SNI-TRAP-MIB (trap.mib)	9
B.2 SNI-MYLEX-MIB (mylex.mib)	14
B.3 SNI-SERVER-CONTROL-MIB (sc.mib)	22
B.4 SNI-SERVERVIEW-MIB (serverview.mib)	31
B.5 SNI-HD-MIB (hd.mib)	32
B.6 SNI-NT-CLUSTER-MIB (ntcluster.mib)	32
B.7 PCI-HOTPLUG-MIB (pcihotplug.mib)	34
B.8 SERVERVIEW-STATUS-MIB (status.mib)	35
B.9 SIEMENS-MULTIPATH-MIB (mp.mib)	35
B.10 SERVERVIEW-DUPLEXDATAMANAGER-MIB (ddm.mib)	36
B.11 FSC-SERVERCONTROL2-MIB (sc2.mib)	39
B.12 BLADE-MIB (S31.mib)	42
B.13 AdaptecArrayController-MIB (aac.mib)	45
B.14 DESKTRAP-MIB (desktrap.mib)	49
B.15 DPT-SCSI-MIB (dptscsi.mib)	54
B.16 MYLEXRAID-MIB (Mlxraid.mib)	55
B.17 MYLEXRAID-FJ-MIB (Mlxraidoj.mib)	55
B.18 FASTTRAK-MIB (promisev1.mib)	56
B.19 PROMISE-UNIFIED-MIB (promiseraid.mib)	58
B.20 RAID-Adapter-MIB (megaraid.mib)	60
B.21 UPSMAN (Upsman.mib)	62
B.22 UPS-MIB (RFC1628.mib)	64
B.23 PowerNet-MIB (powernet.mib)	64
B.24 Alert-Definition-Originator-MIB (F5emt2o.mib)	86
B.25 LDSM-MIB (ldsm.mib)	86
B.26 LDCM-MIB (Ldcm.mib)	87
B.27 FUJITSU-SERVERVISOR-MIB (Servervi.mib)	88
B.28 RFC1157 (RFC1157.mib)	88
B.29 ROMPILOT-MIB (ROMPILOT.MIB)	88
B.30 SW-MIB (fcswitch.mib)	90

B.31 ADAPTECDURALINK-MIB (duralink.mib)	90
B.32 TapeAlert-MIB (tapealrt.mib)	91
B.33 IOMMIB (iommib.mib)	94
B.34 BRIDGE-MIB (trap1493.mib)	95
B.35 RMON-MIB (trap1757.mib)	96
B.36 INTEL-WFM-MIB (WFM.mib)	96
B.37 EM4513-MIB (unicorn-trap.mib)	121
B.38 NET-SNMP-MIB (net-snmp.mib)	121
B.39 FSC-THRESHOLD-REPORT-MIB (Threshold.mib)	122

A トランプリスト概要

ServerView アラームサービスで表示可能な SNMP トランプ一覧の概要、本書で記載のトランプリストの表の見方について説明します。

A.1 注意事項

- マニュアル中「未サポート」と記載、または記載されていないトランプは未サポートです(UNKNOWN とならないトランプ、「A.2 トランプリストの見方」(→ P.5) に記載の分類「4」、「5」のアラーム一覧に表示されるトランプも含みます)。
- I/O コンポーネントのトランプは Agent が異なるため、各ベンダより提供されています。Agent のバージョンによりメッセージが変更されている場合があります。メッセージの詳細については、ご利用の装置に添付の説明書を参照してください。
- 「ENTERPRISE OID」が「enterprises.231」以外の場合は、各ベンダより提供されているため、問い合わせ先が異なります。

A.2 トランプリストの見方

トランプのメッセージ表示内容は、以下のように分類されます。

1. ポップアップメッセージの表示内容
2. OS のイベントログの内容
3. AlarmService のアラーム一覧の表示内容
4. AlarmService のアラーム設定のアラーム一覧の表示内容
5. MIB ファイルの Help のアラーム一覧のアラームタイプ

トランプリストの表は以下のように表記しています。

TRAP-TYPE/ アラーム タイプ	Specific	重要度	詳細メッセージ (%d: 任意の数字 %s: システム変数)	備考
(上段) A			(上段) E	
(下段) B	C	D	(下段) F	G

A : トランプの名称について説明しています。

『5. MIB ファイルの Help のアラーム一覧のアラームタイプ』に対応しています。

B : トランプの名称について説明しています。

『3. AlarmService のアラーム一覧の表示内容』、『4. AlarmService のアラーム設定のアラーム一覧の表示内容』に対応しています。

C : トランプのリスト No. です。

D : トランプの重要度(エラーのクラス)を示しています。

E : 『1. Pop Up メッセージの表示内容』、『2. OS のイベントログの内容』を記載しています。

F : 上記**E** の内容を、和訳して説明しています。

G : トランプに対する説明の補足、またはトランプに対する対処方法を説明しています。

A.3 画面表示例

各画面表示例を以下に示します。

● ポップアップ



● OS イベントログ



● AlarmService（アラームモニタ）のアラーム一覧

The screenshot shows the 'Alarm Monitor' page of the ServerView software. At the top, there are input fields for 'アラーム数一覧上の数' (Number of alarms in the list) and '受信数' (Received number), both set to 3. Below these are checkboxes for '自動更新' (Automatic update) and '最初の表示' (First display). There are also buttons for '複数選択' (Multiple selection) and '複数選択解除' (Multiple selection cancel).

受信時間	アラームタイプ	重要度	リード	アラーム	受信	印
<input type="checkbox"/> 06/26/04 17:40:02	Link up		HIGH			
<input checked="" type="checkbox"/> 06/26/04 17:40:01	Link up		HIGH			
<input type="checkbox"/> 06/26/04 17:40:40	Cold start		HIGH			
受信時間	アラームタイプ	重要度	リード	アラーム	受信	印

Below the table are several buttons: フルスクリーン, 印, 印刷, 別窓, 全て選択, 隔外, 除外アラーム一覧. A message box displays 'Communication link restored at the station 1.'.

● AlarmService のアラーム設定のアラーム一覧

The screenshot shows the 'Alarm Group Creation / Edit' page. The title bar says 'アラームグループの作成 / 編集'. The main area has tabs: グループの選択, サーバの選択, アラームの選択. The 'アラームの選択' tab is selected. It contains radio buttons for '重要度別' (Priority), '名前順' (Name order), 'ファイル別' (File), and '種類別' (Type). A dropdown menu shows 'RFC1157.mib'. On the left, a list of alarms is shown with 'Link up' highlighted by a red rectangle. On the right, a panel titled 'グループに属するアラーム' (Alarms belonging to the group) is empty.

アラームの一覧	>>>	<<<	全て>	<全て	情報
Authentication failure Cold start EGP neighbor lost Link down Link up Warm start	>>>	<<<	全て>	<全て	情報

At the bottom are buttons: 次へ, 戻る, 適用, 別窓, 終了, 印刷プレビュー, ヘルプ. A copyright notice at the bottom reads '© 1999-2004 Fujitsu Siemens Computers All rights reserved'.

● MIB ファイルの Help のアラーム一覧

アラーム タイプ	アラームID	重要度	サマリ
rfc1157ColdStart	0	■	Station reinitialized.
rfc1157WarmStart	0	■	Station reinitialized.
rfc1157LinkDown	0	■	Communication link failed at the station %d.
rfc1157LinkUp	0	■	Communication link restored at the station %d.
rfc1157AuthenticationFailure	0	■	Unauthorized message received.
rfc1157EGPNeighborLost	0	■	Neighboring station down.

[他のトラップ定義MIBファイルを参照する](#)

閉じる 印刷 ヘルプ

上記画面を表示するには、以下の操作を行います。

1. ServerView AlarmService を起動します。
2. AlarmService の [ヘルプ] をクリックします。
3. 「目次」から「エージェントアラーム情報」をクリックします。
4. 「アラーム Mib」の「RFC1157.mib」をクリックします。

■ mib ファイル中の記載例

以下に mib ファイル中の記載例を示します。

```

testTrap TRAP-TYPE
ENTERPRISE sniServerMgmt
VARIABLES {
trapServerName,
trapTime
}
DESCRIPTION
"Test trap to verify trap connection."
--#TYPE      "Test trap"
--#SUMMARY   "Test trap from server %s (no error)."
--#ARGUMENTS { 0 }
--#SEVERITY   INFORMATIONAL
--#TIMEINDEX  1
--#HELP      "Note: This is no error condition."
--#HELIPTAG
--#STATE     OPERATIONAL
 ::= 600

```

B ト ラッ プ リ スト

B.1 SNI-TRAP-MIB (trap.mib)

ServerView コンソールからのト ラップです。

表 : SNI-TRAP-MIB ト ラップ (ENTERPRISE : enterprises.231)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sniNWVolSysMounted Volume SYS is mounted	0	INFORMATIONAL	Volume SYS is mounted on server %s サーバ %s で、システムボリュームがマウントされました。	Netware 監視の Trap です。サポートしていません。
sniNWSysVolumeDismounted Volume SYS is dismounted	1	CRITICAL	Volume SYS is dismounted on server %s サーバ %s で、システムボリュームがディスマウントされました。	↑
sniNWVolumeMounted Volume is mounted	2	INFORMATIONAL	Volume %s is mounted on server %s サーバ %s で、ボリューム %s がマウントされました。	↑
sniNWVolumeDismounted Volume is dismounted	3	INFORMATIONAL	Volume %s is dismounted on server %s サーバ %s で、ボリューム %s がディスマウントされました。	↑
sniNWDownServer Server is going down (NetWare)	4	CRITICAL	Server is going down: %s サーバをダウンします : %s	↑
sniNWExitToDos Server exits to DOS	7	CRITICAL	Server exits to DOS : %s サーバは DOS に抜けました : %s	↑
sniNWModuleUnloaded Module is unloaded	8	INFORMATIONAL	Module %s is unloaded on server %s サーバ %s で、モジュール (NLM)%s がロードされていません。	↑
sniNWClearConnection Connection is cleared	9	INFORMATIONAL	A connection is cleared on server %s サーバ %s の接続がクリアされました。	↑
sniNWLoginUser User logged into server	10	INFORMATIONAL	A user logged into server %s サーバ %s に、ユーザがログインしました。	↑
sniNWCreateBinderyObj Bindery object created	11	INFORMATIONAL	A bindery object is created on server %s サーバ %s で、バインダリオブジェクトが作成されました。	↑
sniNWDeleteBinderyObj Bindery object deleted	12	INFORMATIONAL	A bindery object is deleted on server %s サーバ %s で、バインダリオブジェクトが削除されました。	↑
sniNWChangeSecurity Security changed (NetWare)	13	INFORMATIONAL	Security change has occurred on server %s サーバ %s で、セキュリティが変更されました。	↑
sniNWActivateScreen Screen activated	14	INFORMATIONAL	A screen is activated on server %s サーバ %s で、画面が活性化されました。	↑
sniNWUpdateScreen Screen updated	15	INFORMATIONAL	A screen is updated on server %s サーバ %s で、画面が更新されました。	↑

表 : SNI-TRAP-MIB トラブル (ENTERPRISE : enterprises.231)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sniNWUpdateCursor Cursor position updated	16	INFORMATIONAL	The cursor position is updated on server %s サーバ %s で、カーソル位置が更新されました。	↑
sniNWKeyWasPressed Key pressed	17	INFORMATIONAL	A key is pressed on server %s サーバ %s で、キーが押下されました。	↑
sniNWDeactivateScreen Screen deactivated	18	INFORMATIONAL	A screen is deactivated on server %s サーバ %s 上のスクリーンが非活性化されました。	↑
sniNWTrusteeChange Trustee changed (NetWare)	19	INFORMATIONAL	Trustee is changed on server %s サーバ %s で、トラスティが変更されました。	↑
sniNWOpenScreen Screen opened	20	INFORMATIONAL	A Screen is opened on server %s サーバ %s で、画面が開かれました。	↑
sniNWCloseScreen Screen closed	21	INFORMATIONAL	A Screen is closed on server %s サーバ %s で、画面が閉じられました。	↑
sniNWModifyDirEntry Directory entry changed	22	INFORMATIONAL	Directory entry is changed on server %s サーバ %s で、ディレクトリエントリが変更されました。	↑
sniNWNoRelinquishControl NLM has not relinquished control	23	CRITICAL	The NLM %s has not relinquished control on server %s サーバ %s で、NLM %s が制御を放棄していません。	↑
sniNWThreadSwitch Thread switch has occurred	25	INFORMATIONAL	A thread switch has occurred on server %s サーバ %s で、スレッドが切り替えられました。	↑
sniNWModuleLoaded Module loaded	27	INFORMATIONAL	Module %s is loaded on server %s サーバ %s で、モジュール (NLM)%s がロードされました。	↑
sniNWCreateProcess Process created	28	INFORMATIONAL	A Process is created on server %s サーバ %s で、プロセスが生成されました。	↑
sniNWDestroyProcess Process destroyed	29	INFORMATIONAL	A Process is destroyed on server %s サーバ %s で、プロセスが破棄されました。	↑
sniNWNewPublic New public symbol	32	INFORMATIONAL	A new public symbol is registered on server %s サーバ %s で、新規パブリックシンボルが登録されました。	↑
sniNWProtocolBind Protocol bound	33	INFORMATIONAL	A protocol is bound to a MLID on server %s サーバ %s で、MLID にプロトコルがバインドされました。	↑
sniNWProtocolUnbind Protocol unbound	34	MAJOR	A protocol is unbound from a MLID on server %s サーバ %s で、MLID からプロトコルがアンバインドされました。	↑

表 : SNI-TRAP-MIB ト ラッ プ (ENTERPRISE : enterprises.231)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sniNWAllocateConnection Connection allocated	37	INFORMATIONAL	A connection is allocated on server %s サーバ %s で、接続が割り当てられました。	↑
sniNWLogoutConnection User logged out	38	INFORMATIONAL	A user has logged out of server %s サーバ %s で、ユーザがログアウトしました。	↑
sniNWMLIDRegister MLID registered	39	INFORMATIONAL	A MLID is registered on server %s サーバ %s で、MLID が登録されました。	↑
sniNWMLIDDeRegister MLID deregistered	40	INFORMATIONAL	A MLID is deregistered on server %s サーバ %s から、MLID の登録が抹消されました。	↑
sniNWDataMigration File data migrated	41	INFORMATIONAL	A files data has been migrated on server %s サーバ %s で、ファイルデータが移動されました。	↑
sniNWDataDeMigration File data demigrated	42	INFORMATIONAL	A files data has been demigrated on server %s サーバ %s で、ファイルデータが復元されました。	↑
sniNWQueueAction Queue status changed	43	INFORMATIONAL	A queue is activated, deactivated, created or deleted on server %s サーバ %s で、キューが活性、非活性、作成、または削除されました。	↑
sniNWAlert Alert written	44	INFORMATIONAL	A Netware Alert message is written to the console on server %s. Module %s: %s サーバ %s で、NetWare アラートメッセージがコンソールに書き込まれました。モジュール %s : %s	↑
sniNWCreateObject DS object created	46	INFORMATIONAL	A Directory Service object is created on server %s サーバ %s で、Directory Service オブジェクトが生成されました。	↑
sniNWDeleteObject DS object deleted	47	INFORMATIONAL	A Directory Service object is deleted on server %s サーバ %s で、Directory Service オブジェクトが削除されました。	↑
sniNWRenameObject DS object renamed	48	INFORMATIONAL	A Directory Service object is renamed on server %s サーバ %s で、Directory Service オブジェクトが変名されました。	↑
sniNWValueChanged DS object value changed	49	INFORMATIONAL	A Directory Service object's value changed on server %s サーバ %s で、Directory Service オブジェクトの値が変更されました。	↑
sniNWCloseFile File closed	50	INFORMATIONAL	A file is closed on server %s サーバ %s で、ファイルがクローズされました。	↑
sniNWChangeTime Time changed (NetWare)	51	INFORMATIONAL	Time has changed or a nonuniform time adjustment has occurred on server %s サーバ %s で、時刻の変更、あるいは、時刻の調整が行われました。	↑

表 : SNI-TRAP-MIB トラブル (ENTERPRISE : enterprises.231)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sniInvPollTrapExceeded Threshold exceeded	128	INFORMATIONAL	Threshold exceeded : %s, on Server %s サーバ %s で、しきい値を超過しました。 : %s	しきい値マネージャで設定した設定値を越えたメッセージです。
sniInvPollTrapUnderflow Threshold underflow	129	INFORMATIONAL	Threshold underflow : %s, on Server %s サーバ %s で、しきい値の下限を超えるました。 : %s	↑
sniInvPollDeltaExceeded DELTA-Threshold exceeded	130	INFORMATIONAL	DELTA-Threshold exceeded : %s, on Server %s サーバ %s で、相対しきい値を超過しました。 : %s	↑
sniInvDeltaTrapUnderflow DELTA-Threshold underflow	131	INFORMATIONAL	DELTA-Threshold underflow : %s, on Server %s サーバ %s で、相対しきい値の下限を超えるました。 : %s	↑
sniInvTrapInvalid Threshold invalid	132	INFORMATIONAL	Threshold Invalid: %s, on Server %s サーバ %s で、しきい値が無効です。 : %s	しきい値マネージャの設定値に対するメッセージです。
sniInvTrapValid Threshold valid	133	INFORMATIONAL	Threshold Valid: %s, on Server %s サーバ %s で、しきい値有効です。 : %s	↑
sniNTDownServer Server is going down (NT)	300	INFORMATIONAL	Server is going down : %s サーバをダウンします : %s	
sniNTLoginUser User logged in	301	INFORMATIONAL	A user logged into server %s サーバ %s に、ユーザがログインしました。	
sniNTChangeSecurity Security changed (NT)	302	INFORMATIONAL	Security change has occurred on server %s サーバ %s で、セキュリティが変更されました。	
sniNTTrusteeChange Trustee changed (NT)	303	INFORMATIONAL	A trustee is changed on server %s サーバ %s で、トラスティが変更されました。	
sniNTAlert NT Alert written	304	INFORMATIONAL	An NT Alert message is written to the eventlog (Control String: %s) on server %s. サーバ %s で、NT アラートメッセージがイベントログに書き込まれました。(制御文字 : %s)	
sniNTChangeTime Time changed (NT)	305	INFORMATIONAL	Time has changed or a nonuniform time adjustment has occurred on server %s サーバ %s で、時刻の変更または時刻の調整が行われました。	
sniNTRegChangeName Keyname changed	310	INFORMATIONAL	Keyname in registry has been changed on server %s サーバ %s で、レジストリのキー名が変更されました。	
sniNTRegChangeAttr Registry key attributes changed	311	INFORMATIONAL	Attributes for a key or its subtree in registry has been changed on server %s サーバ %s で、レジストリのキーまたはそのサブツリーの属性が変更されました。	

表 : SNI-TRAP-MIB ト ラッ プ (ENTERPRISE : enterprises.231)

TRAP-TYPE / アラームタイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sniNTRegChangeLastWrite Registry last write time changed	312	INFORMA TIONAL	Last write time for a key or its subtree in registry has been changed on server %s サーバ %s で、レジストリのキーま たはサブツリーへの更新時刻が変更 されました。	
sniNTRegChangeSecurity Registry key security changed	313	INFORMA TIONAL	Security for a key or its subtree in registry has been changed on server %s サーバ %s で、レジストリのキーま たはそのサブツリーのセキュリティ が変更されました。	
sniNTFileChangeName File name modified	320	INFORMA TIONAL	A file name has been changed, created or deleted on server %s サーバ %s で、ファイル名が変更、 作成、または削除されました。	
sniNTFileChangeDirName Directory name modified	321	INFORMA TIONAL	A directory name has been changed, created or deleted on server %s サーバ %s で、ディレクトリ名が変 更、作成、または削除されました。	
sniNTFileChangeAttr File attributes changed	322	INFORMA TIONAL	File or directory attributes have been changed on server %s サーバ %s で、ファイルまたはディ レクトリの属性が変更されました。	
sniNTFileChangeSize File size changed	323	INFORMA TIONAL	File size has been changed on server %s サーバ %s で、ファイルサイズが変 更されました。	
sniNTFileChangeLastWrite File last write time changed	324	INFORMA TIONAL	Last write time on a file has been changed on server %s サーバ %s で、ファイルの更新時刻 が変更されました。	
sniNTFileChangeSecurity File security changed	325	INFORMA TIONAL	Security on a file has been changed on server %s サーバ %s で、ファイルのセキュリ ティが変更されました。	
sniNTEventLogError Eventlog entry: error	330	INFORMA TIONAL	Error entry written to eventlog on server %s サーバ %s のイベントログに、エ ラーエントリが書き込まれました。	
sniNTEventLogWarning Eventlog entry: warning	331	INFORMA TIONAL	Warning entry written to eventlog on server %s サーバ %s のイベントログに、警告 エントリが書き込まれました。	
sniNTEventLogInformation Eventlog entry: information	332	INFORMA TIONAL	Informational entry written to eventlog on server %s サーバ %s のイベントログに、情報 エントリが書き込まれました。	
sniNTEventLogSuccess Eventlog entry: success audit	333	INFORMA TIONAL	Audit success entry written to eventlog on server %s サーバ %s のイベントログに、監査 成功エントリが書き込まれました。	
sniNTEventLogFailure Eventlog entry: failure audit	334	INFORMA TIONAL	Failure audit entry written to eventlog on server %s サーバ %s のイベントログに、監査 失敗エントリが書き込まれました。	

B.2 SNI-MYLEX-MIB (mylex.mib)

Mylex Disk Array Controller からのトラップです。詳細については RAID コントローラ (RAID Manager (GAM:Global Array Manager)) の説明書を参照してください。

表 : SNI-MYLEX-MIB トラップ (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
mylexAutoRebuildStarted Automatic rebuild started	200	INFORMATIONAL	Automatic rebuild of device %d on channel %d was started at disk array adapter in slot %d. The standby device %d at channel %d will be used (Server %s). スロット %d のディスクアレイアダプタで、チャネル %d のデバイス %d の自動リビルドが開始されました。チャネル %d の待機デバイス %d が使用されます。(サーバ %s)	
mylexManualRebuildStarted Manual rebuild started	201	INFORMATIONAL	Manual rebuild was started at disk array adapter in slot %d at server %. サーバ %s の、スロット %d のディスクアレイアダプタで、手動リビルドを開始しました。	
mylexRebuildDone Rebuild done	202	INFORMATIONAL	Rebuild was successfully completed at disk array adapter in slot %d (Server %s). スロット %d のディスクアレイアダプタで、リビルドが正常に終了しました。(サーバ %s)	
mylexRebuildCanceled Rebuild cancelled	203	INFORMATIONAL	Rebuild was cancelled at disk array adapter in slot %d (Server %s). スロット %d のディスクアレイアダプタで、リビルドがキャンセルされました。(サーバ %s)	
mylexRebuildStatus Rebuild status	204	INFORMATIONAL	Rebuild status at disk array adapter in slot %d: current drive=%d, drive size=%d MBytes; %d MBytes remaining (Server %s). スロット %d のディスクアレイアダプタでのリビルドステータス : 現在のドライブ=%d、ドライブサイズ=%d MB ; 残り %d MB (サーバ %s)	
mylexRebuildError Rebuild error	205	MAJOR	Rebuild error at disk array adapter in slot %d: %d bad blocks detected (Server %s). スロット %d のディスクアレイアダプタでのリビルドエラー : %d の不良ブロックが検出されました。(サーバ %s)	
mylexRebuildNewDeviceFailed Rebuild device failed	206	MAJOR	Rebuild finished at disk array adapter in slot %d: new device failed (Server %s). スロット %d のディスクアレイアダプタでのリビルド終了 : 新規デバイスが故障しました。(サーバ %s)	

表 : SNI-MYLEX-MIB ト ラッ プ (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
mylexRebuildLogicalDriveFailed Rebuild drive failed	207	MAJOR	Rebuild finished at disk array adapter in slot %d: logical drive failed, %d bad blocks detected (Server %s). スロット %d のディスクアレイアダプタでのリビルド終了： 論理ドライブが故障し、%d の不良ブロックが検出されました。(サーバ %s)。	
mylexParityCheckStarted Parity check started	208	INFORMATIONAL	Parity check was started at disk array adapter in slot %d (Server %s). スロット %d のディスクアレイアダプタで、パリティチェックが開始されました。(サーバ %s)	
mylexParityCheckDone Parity check done	209	INFORMATIONAL	Parity check was successfully completed at disk array adapter in slot %d (Server %s). スロット %d のディスクアレイアダプタで、パリティチェックが正常に終了しました。(サーバ %s)	
mylexParityCheckCancelled Parity check cancelled	210	INFORMATIONAL	Parity check was cancelled at disk array adapter in slot %d (Server %s). スロット %d のディスクアレイアダプタで、パリティチェックがキャンセルされました。(サーバ %s)	
mylexParityCheckStatus Parity check status	211	INFORMATIONAL	Parity check status at disk array adapter in slot %d: current drive=%d, drive size=%d MB; %d MBytes remaining (Server %s). スロット %d のディスクアレイアダプタでのパリティチェックのステータス： 現在のドライブ=%d、ドライブサイズ=%d MB；残り %d MB (サーバ %s)	
mylexParityCheckError Parity check error	212	MAJOR	Parity check error at disk array adapter in slot %d: %d bad blocks detected (Server %s). スロット %d のディスクアレイアダプタでのパリティチェックエラー：%d の不良ブロックが検出されました。(サーバ %s)	
mylexParityCheckLogicalDriveFailed Parity check: drive failed	213	MAJOR	Parity check finished at disk array adapter in slot %d; logical drive failed: %d bad blocks detected (Server %s). スロット %d のディスクアレイアダプタでのパリティチェック終了； 論理ドライブが故障しました：%d の不良ブロックが検知されました。(サーバ %s)	

表：SNI-MYLEX-MIB トラップ (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
mylexLogicalDriveOffline Logical drive offline	214	CRITICAL	Logical drive %d at disk array adapter in slot %d is offline (Server %s). スロット %d のディスクアレイアダプタの論理ドライブ %d は、オフライン状態です。 (サーバ %s)	
mylexLogicalDriveCritical Logical drive critical	215	MAJOR	Logical drive %d at disk array adapter in slot %d is critical (Server %s). スロット %d のディスクアレイアダプタの論理ドライブ %d は、危険な状態です。 (サーバ %s)	
mylexLogicalDriveOnline Logical drive online	216	INFORMATIONAL	Logical drive %d at disk array adapter in slot %d is online (Server %s). スロット %d のディスクアレイアダプタの論理ドライブ %d は、オンライン状態です。 (サーバ %s)	
mylexPhysicalDeviceDied Physical device dead	217	CRITICAL	Physical device %d on channel %d at disk array adapter in slot %d is DEAD (Server %s). スロット %d のディスクアレイアダプタの、チャネル %d の物理デバイス %d は、停止しています。 (サーバ %s)	
mylexPhysicalDeviceAlive Physical device online	218	INFORMATIONAL	Physical device %d on channel %d at disk array adapter in slot %d is now ONLINE (Server %s). スロット %d のディスクアレイアダプタの、チャネル %d の物理デバイス %d は、オンライン状態です。 (サーバ %s)	
mylexWriteBackError Write back error	219	MAJOR	Controller cache write back error at disk array adapter in slot %d: %d bad blocks (Server %s). スロット %d のディスクアレイアダプタでの、コントローラキャッシュライトバックエラー : %d の不良ブロック。 (サーバ %s)	
mylexStateChangeTableFull Cache change table full	220	MAJOR	Cache state-change table full at disk array adapter in slot %d (Server %s). スロット %d のディスクアレイアダプタで、キャッシング状態変更テーブルが一杯です。 (サーバ %s)	
mylexAdapterDied Disk controller died	221	CRITICAL	Connection to disk array controller in slot %d on server %s lost. サーバ %s のスロット %d で、ディスクアレイコントローラとの接続が失われました。	

表 : SNI-MYLEX-MIB ト ラッ プ (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE／アラームタイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
mylexAutoRebuildStarted2 Automatic rebuild started	222	INFORMATIONAL	Automatic rebuild of system drive %d was started at disk array adapter in slot %d at server %s サーバ %s で、スロット %d のディスクアレイアダプタで、システムドライブ %d の自動リビルトが開始されました。	
mylexManualRebuildStarted2 Manual rebuild started	223	INFORMATIONAL	Manual rebuild of system drive %d was started at disk array adapter in slot %d at server %s. サーバ %s で、スロット %d のディスクアレイアダプタで、システムドライブ %d の手動リビルトが開始されました。	
mylexRebuildDone2 Rebuild done	224	INFORMATIONAL	Rebuild of system drive %d was successfully completed at disk array adapter in slot %d at server %s. サーバ %s で、スロット %d のディスクアレイアダプタで、システムドライブ %d のリビルトが正常に完了しました。	
mylexRebuildCancelled2 Rebuild cancelled	225	INFORMATIONAL	Rebuild of system drive %d was cancelled at disk array adapter in slot %d at server %s. サーバ %s で、スロット %d のディスクアレイアダプタで、システムドライブ %d のリビルトがキャンセルされました。	
mylexRebuildError2 Rebuild error	226	MAJOR	Rebuild error on system drive %d at disk array adapter in slot %d at server %s. サーバ %s で、スロット %d のディスクアレイアダプタで、システムドライブ %d にリビルトエラーが発生しました。	
mylexRebuildNewDeviceFailed2 Rebuild device failed	227	MAJOR	Rebuild of system drive %d finished at disk array adapter in slot %d: new device failed at server %s. スロット %d のディスクアレイアダプタでの、システムドライブ %d のリビルト終了：サーバ %s で新規デバイスが故障しました。	
mylexRebuildLogicalDriveFailed2 Rebuild drive failed	228	MAJOR	Rebuild of system drive %d finished at disk array adapter in slot %d: system drive failed at server %s. スロット %d のディスクアレイアダプタでの、システムドライブ %d のリビルトが終了：サーバ %s でシステムドライブが故障しました。	

表：SNI-MYLEX-MIB トラップ (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
mylexInitializationStarted Initialization started	229	INFORMATIONAL	Initialization of system drive %d started at disk array adapter in slot %d at server %s. サーバ %s で、スロット %d のディスクアレイアダプタで、システムドライブ %d の初期化が開始されました。	
mylexInitializationDone Initialization done	230	INFORMATIONAL	Initialization of system drive %d successfully finished at disk array adapter in slot %d at server %s. サーバ %s で、スロット %d のディスクアレイアダプタで、システムドライブ %d の初期化が正常に終了しました。	
mylexInitializationCanceled Initialization canceled	231	INFORMATIONAL	Initialization of system drive %d canceled at disk array adapter in slot %d at server %s. サーバ %s で、スロット %d のディスクアレイアダプタで、システムドライブ %d の初期化がキャンセルされました。	
mylexInitializationFailed Initialization failed	232	MAJOR	Initialization of system drive %d failed at disk array adapter in slot %d at server %s. サーバ %s で、スロット %d のディスクアレイアダプタで、システムドライブ %d の初期化に失敗しました。	
mylexSystemDriveCreated System drive created	233	INFORMATIONAL	New system drive %d created at disk array adapter in slot %d at server %s. サーバ %s で、スロット %d のディスクアレイアダプタで、新規システムドライブ %d が作成されました。	
mylexSystemDriveDeleted System drive deleted	234	INFORMATIONAL	System drive %d deleted at disk array adapter in slot %d at server %s. サーバ %s で、スロット %d のディスクアレイアダプタで、システムドライブ %d が削除されました。	
mylexRaidExpansionStarted RAID expansion started	235	INFORMATIONAL	RAID capacity expansion on system drive %d started at disk array adapter in slot %d at server %s. サーバ %s で、スロット %d のディスクアレイアダプタで、システムドライブ %d の RAID 容量拡張が開始されました。	
mylexRaidExpansionDone RAID expansion done	236	INFORMATIONAL	RAID capacity expansion on system drive %d successfully finished at disk array adapter in slot %d at server %s. サーバ %s で、スロット %d のディスクアレイアダプタで、システムドライブ %d の RAID 容量拡張が正常に終了しました。	

表 : SNI-MYLEX-MIB ト ラッ プ (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE／アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
mylexRaidExpansionFailed RAID expansion failed	237	MAJOR	RAID capacity expansion failed on system drive %d at disk array adapter in slot %d at server %s. サーバ %s で、スロット %d のディスクアレイアダプタで、システムドライブ %d の RAID 容量拡張が失敗しました。	
mylexSystemDriveBadBlock Bad block	238	MINOR	Bad block(s) detected on system drive %d at disk array adapter in slot %d at server %s. サーバ %s で、スロット %d のディスクアレイアダプタで、システムドライブ %d の不良ブロックが検知されました。	
mylexSystemDriveSizeChanged System drive size changed	239	INFORMATIONAL	Size of system drive %d was changed at disk array adapter in slot %d at server %s. サーバ %s で、スロット %d のディスクアレイアダプタで、システムドライブ %d のサイズが変更されました。	
mylexRaidTypeChanged RAID type changed	240	INFORMATIONAL	RAID type of system drive %d was changed at disk array adapter in slot %d at server %s. サーバ %s で、スロット %d のディスクアレイアダプタで、システムドライブ %d の RAID タイプが変更されました。	
mylexPhysicalDeviceHotspare Physical device hotspare	250	INFORMATIONAL	Physical device %d on channel %d at disk array adapter in slot %d is now HOTSPARE (Server %s). スロット %d のディスクアレイアダプタの、チャネル %d の物理デバイス %d は、現在ホットスペア状態です。(サーバ %s)	
mylexPhysicalDeviceHardError Physical device hard error	251	MINOR	Hard error occurred at physical device %d on channel %d at disk array adapter in slot %d (Server %s). スロット %d のディスクアレイアダプタの、チャネル %d の物理デバイス %d で、ハードエラーが発生しました。(サーバ %s)	
mylexPhysicalDeviceSoftError Physical device soft error	252	MINOR	Soft error occurred at physical device %d on channel %d at disk array adapter in slot %d (Server %s). スロット %d のディスクアレイアダプタの、チャネル %d の物理デバイス %d で、ソフトエラーが発生しました。(サーバ %s)。	

表 : SNI-MYLEX-MIB トラブル (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
mylexPhysicalDeviceParityEr ror Physical device parity error	253	MINOR	Parity error occurred at physical device %d on channel %d at disk array adapter in slot %d (Server %s). スロット %d のディスクアレイアダプタの、チャネル %d の物理デバイス %d で、パリティーエラーが発生しました。(サーバ %s)	
mylexPhysicalDeviceMiscErr or Physical device miscellaneous error	254	MINOR	Miscellaneous error occurred at physical device %d on channel %d at disk array adapter in slot %d (Server %s). スロット %d のディスクアレイアダプタの、チャネル %d の物理デバイス %d で、雑多のエラーが発生しました。(サーバ %s)	
mylexPhysicalDevicePrefailur e Physical device prefailure	255	MAJOR	Prefailure alert from physical device %d on channel %d at disk array adapter in slot %d (Server %s). Device will fail in near future! スロット %d のディスクアレイアダプタの、チャネル %d の物理デバイス %d で、障害予兆が報告されました。(サーバ %s)	
mylexPhysicalDeviceUnconfi gured Physical device unconfigured	256	MAJOR	Physical device %d on channel %d at disk array adapter in slot %d is unconfigured (Server %s). スロット %d のディスクアレイアダプタの、チャネル %d に物理デバイス %d が構成されていません。(サーバ %s)	
mylexPhysicalDeviceAdded Physical device added	257	MAJOR	Physical device %d on channel %d at disk array adapter in slot %d was added (Server %s). スロット %d のディスクアレイアダプタの、チャネル %d に物理デバイス %d が追加されました。(サーバ %s)	
mylexPhysicalDeviceRemove d Physical device removed	258	MAJOR	Physical device %d on channel %d at disk array adapter in slot %d was removed (Server %s). スロット %d のディスクアレイアダプタの、チャネル %d の物理デバイス %d が取り外されました。(サーバ %s)	
mylexWriteBackError2 Write back error	260	MAJOR	Controller cache write back error at disk array adapter in slot %d (Server %s). スロット %d のディスクアレイアダプタの、コントローラキャッシュライトバックエラーが発生しました。(サーバ %s)	

表 : SNI-MYLEX-MIB ト ラッ プ (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE／アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
mylexGamDriverMissing Missing GAM driver	261	MINOR	GAM driver is either not installed or has failed to start; required version: %s (server %s). GAM ドライバがインストールされてないか、起動に失敗しました；必要とされるバージョン : %s (サーバ %s)	
mylexGamDriverIncorrectVersion Incorrect GAM driver version	262	MINOR	Incorrect version of GAM driver installed (%s); required version: %s (server %s). 間違ったバージョンの GAM ドライバがインストールされています。 (%s) ; 必要とされるバージョン : %s (サーバ %s)	
mylexSMARTFailurePredicted SMART predicted disk failure	270	CRITICAL	SMART predicts failure for disk %d on channel %d at disk array adapter in slot %d (Server %s). スロット %d のディスクアレイアダプタの、チャネル %d のディスク %d について、SMART が故障の予兆をしました。(サーバ %s)	
mylexSMARTConfigurationChanged SMART configuration changed	271	INFORMATIONAL	SMART configuration has been changed for disk %d on channel %d at disk array adapter in slot %d (Server %s). スロット %d のディスクアレイアダプタの、チャネル %d のディスク %d について SMART の構成が変更されました。(サーバ %s)	
mylexBBUFound BBU found	275	INFORMATIONAL	A Battery Backup Unit was found on SCSI controller in slot %d (Server %s). スロット %d の SCSI コントローラにバッテリバックアップユニットが見つかりました。(サーバ %s)	
mylexBBUPowerLow BBU power low	276	CRITICAL	The Battery Backup Unit power on SCSI controller in slot %d is low (Server %s). If this messages happens without power failure, replace the BBU. スロット %d の SCSI コントローラで、バッテリバックアップユニットの電源が低下しています。(サーバ %s)	
mylexBBUPowerOK BBU power OK	277	INFORMATIONAL	The Battery Backup Unit power on SCSI controller in slot %d is OK (Server %s). スロット %d の SCSI コントローラで、バッテリバックアップユニットの電源は正常です。(サーバ %s)	

B.3 SNI-SERVER-CONTROL-MIB (sc.mib)

ServerView エージェント、または RSB からのトラップです。

表 : SNI-SERVER-CONTROL-MIB トラップ (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
testTrap Test trap	600	INFORMATIONAL	Test trap from server %s (no error). サーバ %s からのテストトラップ。 (エラーではありません)	エラーではありません。
fanError Fan failed	601	CRITICAL	Fan %d failed in cabinet %d of server %s. サーバ %s のキャビネット %d で、 ファン %d が故障しました。	FAN 異常です。 担当保守員に連絡してください。
tempOk Temperature normal	602	INFORMATIONAL	Temperature at sensor %d in cabinet %d of server %s is within normal range. サーバ %s のキャビネット %d で、温 度センサ %d が正常範囲内に下がり ました。	筐体内温度が正常範 囲内です。エラーで はありません。
tempWarn Temperature warning	603	MAJOR	Temperature at sensor %d in cabinet %d of server %s has reached the warning level. サーバ %s のキャビネット %d で、温 度センサ %d が警告レベルに達しま した。	筐体内温度異常です。 室温の確認を行って ください。 問題ない場合、FAN の故障が発生してい ないか確認してく ださい。
tempCritical Temperature critical	604	CRITICAL	Temperature at sensor %d in cabinet %d of server %s has reached the critical level. サーバ %s のキャビネット %d で、温 度センサ %d が危険レベルに達しま した。	その他ハード異常が 考えられます。担当 保守員に連絡してく ださい。
trapOnBattery AC failed, on battery	606	CRITICAL	AC failure. Cabinet %d is running on battery power since %d seconds. In %d minutes server %s will shutdown. AC に異常があります。キャビネット %d は、%d 秒間バッテリ電源で作動 しています。サーバ %s は %d 分後に シャットダウンします。	UPS のバッテリで運 転しています。 停電、または UPS の電源ケーブル等が 抜けていないか確認 してください。
trapOnMains AC OK	607	INFORMATIONAL	Mains returned after power failure in cabinet %d at server %s. AC は正常です。サーバ %s のキャ ビネット %d が停電後、主電源が回復し ました。	UPS のバッテリ運転 が解除されました。
selftestWarning Controller selftest warning	608	MINOR	The Server Management controller in cabinet %d has detected an minor problem during selftest of server %s. キャビネット %d のサーバ管理コン トローラが、サーバ %s のセルフテ スト中、軽度の問題を検知しました。	特に問題ではありま せん。メッセージが 多数検出される場 合、サーバ管理コン トローラの障害が考 えられます。担当保 守員に連絡してく ださい。
selftestError Controller selftest error	609	CRITICAL	The Server Management controller in cabinet %d of server %s failed. サーバ %s のキャビネット %d で、 サーバ管理コントローラが故障しま した。	担当保守員に連絡して ください。

表 : SNI-SERVER-CONTROL-MIB ト ラッ プ (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
svCommunicationFailure Communication lost	610	MINOR	Communication with the Server Management controller in cabinet %d of server %s lost. サーバ %s のキャビネット %d で、サーバ管理コントローラとの通信が失われました。	イベント ID:10636 で復旧している場合、問題ありません。 復旧されない場合、担当保守員に連絡してください。
scbUnconfiguredUPSDetected UPS not configured	611	INFORMATIONAL	UPS detected by server %s, but no UPS is configured. サーバ %s で UPS を検知しましたが、UPS は構成されていません。	設定ミスの可能性があります。再度確認してください。 設定に誤りがない場合、UPS の異常が考えられます。担当保守員に連絡してください。
scbUPSNotdetected UPS not detected	612	MAJOR	A UPS is configured but no UPS detected by server %s. UPS が構成されていますが、サーバ %s では検知されませんでした。	
scbUnconfiguredBBUDetected BBU not configured	613	INFORMATIONAL	BBU detected by server %s, but no BBU is configured. サーバ %s で BBU を検知しましたが、BBU は構成されていません。	
scbBBUNotdetected BBU not detected	614	INFORMATIONAL	A BBU is configured but no BBU is detected by server %s. BBU が構成されていますが、サーバ %s では検知されませんでした。	
notEnoughCabinets SE's missing	615	MAJOR	The actual number of storage extensions at server %s is lower than the configured. サーバ %s の拡張記憶装置の実際数が、構成されている数を下回っています。	外部記憶装置の構成に誤りがあります。 再確認をお願いします。
tooManyCabinets Too many SE's	616	MINOR	The actual number of storage extensions at server %s is higher than the configured. サーバ %s の拡張記憶装置の実際数が、構成されている数を超えていました。	
cabinetSwitchedOff Cabinet switched off	617	INFORMATIONAL	Cabinet %d was switched off because of %s (server %s). サーバ %s のキャビネット %d が、電源切断 <%s> しました。	サーバ %s が電源切斷しました。
cabinetSwitchedOn Cabinet switched on	618	INFORMATIONAL	Cabinet %d was switched on because of %s (server %s). サーバ %s のキャビネット %d が、電源投入 <%s> しました。	サーバ %s が電源投入しました。
internalError Internal error	620	INFORMATIONAL	Internal error # %d in server management controller software. (module %s at server %s). サーバ %s のサーバ管理コントローラで内部エラー # %d が発生しました。(モジュール %s)	ソフトエラーです。 モジュール名を特定してサポートセンターに問い合わせをお願いします。
serverShutdown Server shutdown	621	INFORMATIONAL	The reason %s causes a shutdown at server %s. %s の理由により、サーバ %s をシャットダウンします。	シャットダウン指示によりサーバをシャットダウンします。

表 : SNI-SERVER-CONTROL-MIB トラブル (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
fanCriticalError Fan will fail	622	MAJOR	Fan %d will fail in near future in cabinet %d of server %s. サーバ %s のキャビネット %d で、ファン %d が近い将来故障の可能性があります。	fan 異常の予兆です。すぐに故障することはありません。担当保守員に相談してください。
cabinetNotConfigured Cabinet not configured	623	INFORMATIONAL	Cabinet %d at server %s is not configured. Depending on the system type, run Server Configuration Utility (SCU) or Storage Extension Manager (SEMAN) and configure the cabinet! サーバ %s のキャビネット %d が構成されていません。ハード添付の保守ツールを使用して再設定を実行してください。	キャビネット内の構成が正しく行われていません。再設定を行ってください。
powerSupplyRemoved Power supply removed	624	INFORMATIONAL	Power supply %d in cabinet %d at server %s was removed. サーバ %s のキャビネット %d から、電源装置 %d が取り外されました。	オペレータにより、電源ユニットが取り外されました。
powerSupplyAdded Power supply added	625	INFORMATIONAL	Power supply %d in cabinet %d at server %s was added. サーバ %s のキャビネット %d に、電源装置 %d が取り付けられました。	オペレータにより、電源ユニットが取り付けられました。
powerSupplyFailed Power supply failed	626	MAJOR	Power supply %d in cabinet %d at server %s failed. サーバ %s のキャビネット %d で、電源装置 %d が故障しました。	電源ユニットが故障しました。担当保守員に連絡してください。
powerSupplyOk Power supply OK	627	INFORMATIONAL	Power supply %d in cabinet %d at server %s is working again. サーバ %s のキャビネット %d で、電源装置 %d が動作を再開しました。	電源ユニットを取り付けた後に通知されるメッセージです。
powerSupplyStatusCritical Power supply critical	628	CRITICAL	Insufficient operating power supplies available in cabinet %d at server %s. サーバ %s のキャビネット %d で、使用できる電源装置の稼動が不十分です。	電源ユニットの搭載を行ってください。
fanOk Fan OK	629	INFORMATIONAL	Fan %d in cabinet %d of server %s is working again. サーバ %s のキャビネット %d で、ファン %d が正常に戻りました。	FAN が正常に戻ったメッセージです。FAN 交換を行った場合のメッセージです。
tempSensorBroken Temperature sensor broken	630	MAJOR	Temperature sensor %d in cabinet %d of server %s is broken or not connected. サーバ %s のキャビネット %d で、温度センサ %d が故障しているか接続されていません。	温度センサーが故障している可能性があります。担当保守員に連絡してください。
serverManagementDisabled Server management disabled	631	INFORMATIONAL	Server management BIOS on server %s is disabled. Enable it to have full server management functionality! サーバ %s のサーバ管理 BIOS が無効です。全サーバ管理機能を利用するためには、サーバ管理 BIOS を有効にしてください。	サーバ管理を有効にするためにハードに添付されている保守ツールを使用して設定を行ってください。

表 : SNI-SERVER-CONTROL-MIB トラップ (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
trapAcFail AC failed	632	CRITICAL	AC failure in cabinet %d of server %s. サーバ %s のキャビネット %d に、AC 異常があります。	UPS のスケジュール運転を行っている場合に格納されるメッセージです。この場合問題はありません。UPS のスケジュール運転を行っていない場合、電源異常の可能性がありますので担当保守員に連絡してください。
trapDuplicateCabinetId Duplicate cabinet ID	633	MAJOR	Two or more cabinets have the same ID %d on server %s. サーバ %s の 2つあるいはそれ以上のキャビネットが同じ ID%d を持っています。	システム構成に間違いがあります。 再設定をお願いします。
trapEventLog Error in event log	634	MAJOR	An error was recorded on server %s. See server management event / error log (Recovery) for detailed information. サーバ %s のエラーが記録されました。 詳細情報は、イベント／エラーログ(復旧)を参照してください。	post 中にエラーが発生しました。 ServerView の「アクション」「エラーパックア」に格納されている情報を参照してください。
tempSensorOk Temperature sensor OK	635	INFORMATIONAL	Temperature sensor %d in cabinet %d of server %s is working again. サーバ %s のキャビネット %d で、温度センサ %d が動作を再開しました。	温度センサーが復旧したメッセージです。
svCommunicationEstablished Communication established	636	INFORMATIONAL	Communication with the Server Management controller in cabinet %d of server %s established again. サーバ %s のキャビネット %d で、サーバ管理コントローラとの通信が再び確立されました。	サーバ管理コントローラとの通信が復旧したメッセージです。
correctableMemErrorAddr Correctable memory error	637	INFORMATIONAL	Correctable memory error at address %d in cabinet %d of server %s. サーバ %s のキャビネット %d で、アドレス %d に訂正可能なメモリエラーが発生しました。	SBE(メモリ 1 ピットエラー)が発生しました。 ECC メモリのため特に影響はありません。
uncorrectableMemErrorAddr Uncorrectable memory error	638	CRITICAL	Uncorrectable memory error at address %d in cabinet %d of server %s. サーバ %s のキャビネット %d で、アドレス %d に訂正不可能なメモリエラーが発生しました。	MBE(メモリマルチピットエラー)が発生しました。 担当保守員に連絡してください。
correctableMemErrorBank Correctable memory error #1	639	INFORMATIONAL	Correctable memory error at bank %d in cabinet %d of server %s. サーバ %s のキャビネット %d で、バンク %d に訂正可能なメモリエラーが発生しました。	SBE(メモリ 1 ピットエラー)が発生しました。 ECC メモリのため特に影響はありません。

表 : SNI-SERVER-CONTROL-MIB トラブル (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
uncorrectableMemErrorBank Uncorrectable memory error #1	640	CRITICAL	Uncorrectable memory error at bank %d in cabinet %d of server %. サーバ %s のキャビネット %d で、バ ンク %d に訂正不可能なメモリエ ラーが発生しました。	MBE(メモリマルチ ビットエラー) が発 生しました。 担当保守員に連絡し てください。
correctableMemErrorModule Correctable memory error #2	641	INFORMATI ONAL	Correctable memory error at module %d in cabinet %d of server %. サーバ %s のキャビネット %d で、モ ジュール %d に訂正可能なメモリエ ラーが発生しました。	SBE(メモリ 1 ビッ トエラー) が発生し ました。 ECC メモリのため 特に影響はありませ ん。
uncorrectableMemErrorModul e Uncorrectable memory error #2	642	CRITICAL	Uncorrectable memory error at module %d in cabinet %d of server %. サーバ %s のキャビネット %d で、モ ジュール %d に訂正不可能なメモリエ ラーが発生しました。	MBE(メモリマルチ ビットエラー) が発 生しました。 担当保守員に連絡し てください。
correctableMemError Correctable memory error #3	643	INFORMATI ONAL	Correctable memory error in cabinet %d of server %. サーバ %s のキャビネット %d で、訂 正可能なメモリエラーが発生しま した。	SBE(メモリ 1 ビッ トエラー) が発生し ました。 ECC メモリのため 特に影響はありませ ん。
uncorrectableMemError Uncorrectable memory error #3	644	CRITICAL	Uncorrectable memory error in cabinet %d of server %. サーバ %s のキャビネット %d で、訂 正不可能なメモリエラーが発生しま した。	MBE(メモリマルチ ビットエラー) が発 生しました。 担当保守員に連絡し てください。
powerOffTimeReached Power off time reached	645	INFORMATI ONAL	The power-off time is reached in cabinet %d on server %.! System shutdown in %d minutes. サーバ %s のキャビネット %d が、電 源切断時刻になりました。システム は %d 分後にシャットダウンされま す。	ServerView で指定し たスケジュール電源 OFF 、または、 ServerView コンソー ルよりシャットダウ ン指示が行われま した。
frontDoorStatusChanged Front door status changed	646	INFORMATI ONAL	The front door status of cabinet %d on server %s has changed. サーバ %s のキャビネット %d で、フ ロント扉の状態が変化しま した。	オペレータにより、 扉の開閉が行われま した。
housingOpenStatusChanged Housing open status changed	647	INFORMATI ONAL	The housing open status of cabinet %d on server %s has changed. サーバ %s のキャビネット %d で、筐 体カバーの状態が変化しま した。	オペレータにより、 筐体カバーの開閉が 行われました。
sniScRedundantFanFailed Redundant fan failed	648	MAJOR	The redundant fan %d failed in cabinet %d of server %. System can become critical if another fan in this group fails. サーバ %s のキャビネット %d で、冗 長ファン %d が故障しま した。この グループの別のファンが故障すると、 システムが危険な状態になる可能 性があります。	冗長 FAN の故障で す。 担当保守員に連絡し てください。

表 : SNI-SERVER-CONTROL-MIB ト ラッ プ (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sniScRedundantPowerSupplyFailed Redundant power supply failed	649	MAJOR	Redundant power supply %d in cabinet %d at server %s failed. System can become critical if another power supply fails. サーバ %s のキャビネット %d で、冗長電源 %d が故障しました。このグループの別の電源装置が故障すると、システムが危険な状態になる可能性があります。	冗長電源の故障です。 担当保守員に連絡してください。
sniScVoltageOk Voltage OK	650	INFORMATIONAL	Power supply voltage %d (%s) in cabinet %d at server %s is within normal range again. サーバ %s のキャビネット %d で、電源装置の電圧 %d (%s) が再び正常範囲に戻りました。	サーバの電圧が復旧しました。 問題ありません。
sniScVoltageTooLow Voltage too low	651	CRITICAL	Power supply voltage %d (%s) in cabinet %d at server %s is too low. サーバ %s のキャビネット %d で、電源装置の電圧 %d (%s) が低すぎます。	電源ユニット、AC 電源、ベースボード等に不具合がある場合があります。 担当保守員に相談してください。
sniScVoltageTooHigh Voltage too high	652	CRITICAL	Power supply voltage %d (%s) in cabinet %d at server %s is too high. サーバ %s のキャビネット %d で、電源装置の電圧 %d (%s) が高すぎます。	電源ユニット、AC 電源、ベースボード等に不具合がある場合があります。 担当保守員に相談してください。
sniScFanAdded Fan added	653	INFORMATIONAL	The fan %d was added into cabinet %d of server %s. サーバ %s のキャビネット %d に、ファン %d が取り付けられました。	オペレータにより、FAN が取り付けられました。
sniScFanRemoved Fan removed	654	INFORMATIONAL	The fan %d was removed from cabinet %d of server %s. サーバ %s のキャビネット %d から、ファン %d が取り外されました。	オペレータにより、FAN が取り外されました。
sniScShutdownCancelled Shutdown cancelled	655	INFORMATIONAL	Shutdown at server %s cancelled by the user. サーバ %s のシャットダウンがユーザによりキャンセルされました。	オペレーションです。
sniScCpuSpeedChanged CPU speed changed	656	INFORMATIONAL	CPU speed at server %s changed to %d percent of its maximum speed. The CPU speed can be changed by the server management because of temperature problems. サーバ %s の CPU スピードが、最大出力の %d パーセントに変更されました。 CPU スピードは温度の問題のために、サーバマネジメントによって変更された可能性があります。	CPU 温度が高温となつたため、CPU 速度を落として稼働しています。 CPU 温度の確認を行ってください。 fan の故障により、CPU 温度が上昇している可能性があります。

表 : SNI-SERVER-CONTROL-MIB トラブル (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sieScPowerOn Power on	657	INFORMATIONAL	The reason %s causes a power on at server %s. サーバ %s が要因 <%s> で PowerON しました。	電源が投入されたメッセージです。
sieScNoBootCpu No boot cpu	658	INFORMATIONAL	System boot of the server %s failed, because no valid boot cpu available. ブート CPU が存在しないため、サーバ %s のシステムブートに失敗しました。	システムの確認を行ってください。CPU 異常が発生している可能性があります。
sieScPostError Post error	659	INFORMATIONAL	The reason %s causes a power on at server %s. サーバ %s が要因 <%s> で PowerON しました。	頻発する場合、担当保守員に相談してください。
sieScSetupEntered Setup entered	660	INFORMATIONAL	The bios setup is entered at server %s. サーバ %s で BIOS セットアップになった。	オペレータにより、セットアップ処理が行われました。
sieScBootError Boot error	661	INFORMATIONAL	No bootable operation system found at server %s. サーバ %s にブート可能な OS が見つかりません。	システムの確認を行ってください。
sieScBootWatchdogExpired Boot watchdog expired	662	INFORMATIONAL	Boot watchdog of server %s expired. サーバ %s で、ブート時間監視が終了し、異常を検出しました。	設定されているリトライカウンタ分処理が行われました。 リトライカウンタの再設定を行ってください。
sieScSoftwareWatchdogExpired Software watchdog expired	663	INFORMATIONAL	Software watchdog of server %s expired. サーバ %s で、ソフトウェア時間監視が終了し、異常を検出しました。	設定されているリトライカウンタ分処理が行われました。 リトライカウンタの再設定を行ってください。
sieScUserAuthenticationFailure User authentication failure	664	MAJOR	User authentication failure detected at server %s, interface %d, performing protocol %s. サーバ %s でユーザー認証失敗を検出しました。 プロトコル : %s、管理チャネル番号 : %d。	認証処理の確認を行ってください。
sieScDiagnosticBoot Diagnostic boot	665	INFORMATIONAL	Server %s is performing a diagnostic boot. サーバ %s は診断ブートを実行しています。	オペレータにより、診断処理が実行されました。
sieScBootRetryCountZero Boot retry counter zero	666	MAJOR	Boot retry counter is zero on server %s. On next critical error shutdown the server will no longer try to reboot. System will run diagnostic system or switch off. サーバ %s のブートリトライカウンタがゼロになりました。次に重度のエラーでサーバがシャットダウンされた場合、サーバはブートしません。システムは診断システムを起動するか PowerOff します。	設定されているリトライカウンタ分処理が行われました。 リトライカウンタの再設定を行ってください。

表 : SNI-SERVER-CONTROL-MIB ト ラッ プ (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sieScMessageLogFull Message log full	667	MINOR	The System Event Log on server %s in cabinet %d is full. No more messages can be logged. Please clear unneeded log entries as soon as possible! サーバ %s のキャビネット %d で、System Event Log が一杯になりました。これ以上のメッセージは、ロギングできません。 できるだけ早く、不要な System Event Log をクリアしてください！	ハード添付の保守ツールを使用して不要な System Event Log のクリアを行ってください。
memErrorModulePrefailure Memory module prefailure	668	MAJOR	Memory module failure is predicted for module %d in cabinet %d of server %s. サーバ %s のキャビネット %d で、モジュール %d のメモリモジュールエラーが予測されます。	メモリエラーの予兆です。 担当保守員に相談してください。
memErrorModuleFailing Memory module failing	669	MAJOR	Memory module %d in cabinet %d of server %s is failing. Too many errors have occurred. サーバ %s のキャビネット %d で、メモリモジュール %d に多くのエラーが発生しました。	メモリエラーの予兆警告です。 担当保守員に連絡してください。
memErrorModuleReplaced Memory module replaced	670	MAJOR	Memory module module %d in cabinet %d of server %s had failed and was replaced by a hot-spare module. サーバ %s のキャビネット %d で、メモリモジュール %d にエラーが発生し、ホットスペアメモリに切り替わりました。	メモリエラーです。 担当保守員に連絡してください。
sniScPowerSupplyRedundancyLost Power supply redundancy lost	671	MINOR	Power supply redundancy in cabinet %d at server %s lost. System will become critical if a power supply fails. サーバ %s のキャビネット %d で、電源の冗長性が失われました。もし電源が故障した場合、システムに異常をきたします。	電源ユニットのエラーです。 担当保守員に相談してください。
sieScMessageLogWarning Message log warning	672	MINOR	The System Event Log for cabinet %d at server %s has exceeded %d%% of its capacity. サーバ %s のキャビネット %d で、System Event Log が、その容量の %d % を超えました。	System Event Log の予兆です。 ハード添付の保守ツールを使用して不要な System Event Log をクリアしてください。
sieScCpuPrefailure CPU prefailure	673	MAJOR	CPU failure is predicted for CPU %d in cabinet %d of server %s. サーバ %s のキャビネット %d で、CPU%d の故障が予測されます。	CPU 異常の予兆警告です。 担当保守員に連絡してください。
sieScPowerFail Power failed	674	CRITICAL	DC power failure in cabinet %d of server %s. サーバ %s のキャビネット %d で、DC 電源異常です。	電源ユニットのエラーです。 担当保守員に相談してください。

表 : SNI-SERVER-CONTROL-MIB トラブル (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sieScBiosSelftestError Critical BIOS selftest error	675	CRITICAL	A critical error happened while BIOS selftest in cabinet %d of server %s. See server management message log (recovery log) for detailed information. サーバ %s のキャビネット %d で、 BIOS セルフテスト中に CriticalError を検出しました。	BIOS セルフテスト中のエラー検出です。 詳細は SEL を参照し担当保守員に連絡してください。
sieScBiosSelftestWatchdogExpired BIOS selftest watchdog expired	676	MAJOR	BIOS selftest watchdog of server %s expired. サーバ %s で、 BIOS セルフテスト中に watchdog により切断されました。	BIOS セルフテスト中のエラー検出です。 詳細は SEL を参照し担当保守員に連絡してください。
sniScVoltageFailure Voltage out of range	677	CRITICAL	Power supply voltage %d (%s) in cabinet %d at server %s is out of range. サーバ %s のキャビネット %d で、 電源電圧 %d(%s) が規定値外です。	電源ユニットのエラーです。 担当保守員に連絡してください。
sniScBatteryVoltagePrefailure Battery failure predicted	678	MAJOR	Battery voltage %d (%s) in cabinet %d at server %s: Battery is predicted to fail in near future. サーバ %s のキャビネット %d の、 バッテリー電圧 %d(%s) : バッテリー故障が予測されます。	電源ユニットの予兆エラーです。 担当保守員に連絡してください。
sieScSevereSystemError The system was restarted after a severe problem	679	CRITICAL	The system was restarted after a severe problem at cabinet %d of server %s. See server management message log (recovery log) for detailed information. サーバ %s のキャビネット %d で重要な問題が発生後、システムが再開されました。	システムで重要な問題が発生しました。 担当保守員に連絡してください。

B.4 SNI-SERVERVIEW-MIB (serverview.mib)

ServerView 管理コンソールのトラップです。

表 : SNI-SERVERVIEW-MIB トラップ (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE／アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sniSvGenericTrapForward ServerView alarm received	700	INFORMATIONAL	The server %s sent the trap <%s> to ServerView application at station %s サーバ %s が、トラップ <%s> をステーション %s の ServerView アプリケーションに送信しました。	アラームサービスによって転送された Trap です。
sniSvPagerOff Pager turn off	701	INFORMATIONAL	Pager number %d should be turned off. 番号 %d のページャが電源切断されています。	
sniSvServerStateChanged Server changed state	702	INFORMATIONAL	The server %s has changed its state to %s サーバ %s の状態が、%s に変更されました。	
sniSvPassThroughTrapForward ServerView alarm passed through	703	INFORMATIONAL	%s	アラームサービスによって転送された Trap です。
sieSvAlarmServiceCommand Alarm Service Command	704	INFORMATIONAL	Command %d from server %s. サーバ %s からのコマンド %d	
fscSvServerAdded Server added	705	INFORMATIONAL	Server %s was added. サーバ %s が追加された。	
fscSvServerRemoved Server removed	706	INFORMATIONAL	Server %s was removed. サーバ %s が削除された。	
fscSvServerChanged Server changed	707	INFORMATIONAL	Server %s was changed. サーバ %s が変更された。	
fscSvServerStatusChanged Server status changed	708	INFORMATIONAL	Server status %s was changed. サーバのステータス %s が変更された。	
fscSvGroupAdded Group added	709	INFORMATIONAL	Group (%s, %d) was added. Group (%s, %d) が追加された。	
fscSvGroupRemoved Group removed	710	INFORMATIONAL	Group (%s, %d) was removed. Group (%s, %d) が削除された。	
fscSvGroupChanged Group changed	711	INFORMATIONAL	Group (%s, %d) was changed. Group (%s, %d) が変更された。	
fscSvExploreServer Explore server	712	INFORMATIONAL	Explore server %s. サーバ %s を調査。	
fscAsTestMail Alarm Service Test Mail	747	INFORMATIONAL	The Alarm Service on server %s sends a test mail. サーバ %s のアラームサービスがテスト mail を送出しました。	
fscAsTestPager Alarm Service Test Pager	748	INFORMATIONAL	The Alarm Service on server %s tests a pager. サーバ %s のアラームサービスがページャをテストしました。	
fscAsStopTrapListenService Alarm Service Stop Trap Listen Service	749	INFORMATIONAL	The ServerView Alarm Service Trap Listen Service on server %s stops. サーバ %s のアラームサービスのトラップサービスが停止しました。	

B.5 SNI-HD-MIB (hd.mib)

FSC HD SMARTMonitoring からのトラップです。

表 : SNI-HD-MIB トラップ (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sniSMARTFailurePredicted SMART predicted disk failure	750	CRITICAL	SMART predicts failure on disk %d (%s), adapter %d (%s), on Server %s. サーバ %s で、SMART がアダプタ %d (%s) のディスク %d (%s) の故障を予測しました。	DISK エラーの予兆警告です。 担当保守員に連絡してください。
sniSMARTMonitoringDisable d SMART configuration changed	751	INFORMATIONAL	SMART configuration has been changed on hard disk %d (%s), adapter %d (%s), on Server %s. サーバ %s で、アダプタ %d (%s) のハードディスク %d (%s) で SMART の構成が変更されました。	SMART モードが変更されたメッセージです。

B.6 SNI-NT-CLUSTER-MIB (ntcluster.mib)

次の表は、SNI-NT-CLUSTER-MIB のトラップです。

表 : SNI-NT-CLUSTER-MIB トラップ (ENTERPRISE : enterprises.231)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sniWpChangeUnknown unknown notification type	801	INFORMATIONAL	The cluster has sent the unknown notification 0x%X.	未サポートアプリケーション(ClusterView) からのトラップです。 通常表示されません。
sniWpChangeClusterNotFound abnormal cluster status	810	CRITICAL	SNMP cannot access cluster software. Trap sent from server %s.	↑
sniWpChangeClusterActiveAgain normal cluster status	811	INFORMATIONAL	SNMP gained access to the cluster software. Trap sent from server %s.	↑
sniWpChangeClusterNoLongerActive abnormal cluster status	812	CRITICAL	SNMP lost access to the cluster software. Trap sent from server %s.	↑
sniWpChangeNodeDeleted node deleted	830	INFORMATIONAL	The node %s has been deleted.	↑
sniWpChangeNodeAdded node added	831	INFORMATIONAL	The node %s has been added.	↑
sniWpChangeNodeState node state change	832	MAJOR	The node %s has changed its state.	↑
sniWpChangeResourceTypeDeleted resource type deleted	840	INFORMATIONAL	Resource type %s has been deleted.	↑
sniWpChangeResourceTypeAdded resource type created	841	INFORMATIONAL	Resource type %s has been created.	↑
sniWpChangeGroupDeleted group deleted	850	INFORMATIONAL	Group %s has been deleted.	↑

表 : SNI-NT-CLUSTER-MIB ト ラッ プ (ENTERPRISE : enterprises.231)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sniWpChangeGroupAdded group created	851	INFORMA TIONAL	Group %s has been created.	↑
sniWpChangeGroupState group state change	852	MAJOR	Group %s has changed its state.	↑
sniWpChangeGroupProperty group properties change	853	INFORMA TIONAL	The properties of group %s have changed.	↑
sniWpChangeResourceDeleted resource deleted	860	INFORMA TIONAL	Resource %s has been deleted.	↑
sniWpChangeResourceAdded resource added	861	INFORMA TIONAL	Resource %s has been added.	↑
sniWpChangeResourceState resource state change	862	MAJOR	Resource %s has changed its state.	↑
sniWpChangeResourcePropert y resource properties change	863	INFORMA TIONAL	The properties of resource %s have changed.	↑
sniWpChangeRegistryAttribut es cluster attributes change	895	INFORMA TIONAL	The attributes of registry key %s have been changed.	↑
sniWpChangeRegistryKey registry namespace change	896	INFORMA TIONAL	Registry key %s has been created or deleted.	↑
sniWpChangeRegistryValue registry value change	897	INFORMA TIONAL	A value of registry key %s has been changed.	↑
sniWpChangeNetworkDeleted network deleted	910	INFORMA TIONAL	Network %s has been deleted.	↑
sniWpChangeNetworkAdded network created	911	INFORMA TIONAL	Network %s has been created.	↑
sniWpChangeNetworkState network state change	912	MAJOR	Network %s has changed its state.	↑
sniWpChangeNetworkPropert y network properties change	913	INFORMA TIONAL	The properties of Network %s have changed.	↑
sniWpChangeNetInterfaceDel eted network interface deleted	920	INFORMA TIONAL	Network interface %s has been deleted.	↑
sniWpChangeNetInterfaceAd ded network interface created	921	INFORMA TIONAL	Network interface %s has been created.	↑
sniWpChangeNetInterfaceStat e network interface state change	922	MAJOR	Network interface %s has changed its state.	↑
sniWpChangeNetInterfacePro perty network interface properties change	923	INFORMA TIONAL	The properties of network interface %s have changed.	↑
sniWpNodeUp Cluster node online	924	INFORMA TIONAL	Cluster node %s is online.	↑
sniWpNodeDown Cluster node offline	925	INFORMA TIONAL	Cluster node %s is offline.	↑
sniWpNodePaused Cluster node paused	926	INFORMA TIONAL	Cluster node %s has been paused.	↑
sniWpNodeJoining Cluster node joining	927	INFORMA TIONAL	Cluster node %s is joining.	↑

表 : SNI-NT-CLUSTER-MIB トラブル (ENTERPRISE : enterprises.231)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sniWpGroupOnline Cluster group online	928	INFORMATIONAL	Cluster group %s is online.	↑
sniWpGroupPartialOnline Cluster group partially online	929	INFORMATIONAL	Cluster group %s is partially online.	↑
sniWpGroupPending Cluster group pending	930	INFORMATIONAL	Cluster group %s is pending.	↑
sniWpGroupOffline Cluster group offline	931	INFORMATIONAL	Cluster group %s is offline.	↑
sniWpGroupFailed Cluster group failed	932	MAJOR	Cluster group %s has failed.	↑
sniWpResourceOnline Cluster resource online	933	INFORMATIONAL	Cluster resource %s is online.	↑
sniWpResourceOffline Cluster resource offline	934	INFORMATIONAL	Cluster resource %s is offline.	↑
sniWpResourceFailed Cluster resource failed	935	MAJOR	Cluster resource %s has failed.	↑
sniWpNetworkUp Network reactivated	936	INFORMATIONAL	Cluster network %s reactivated.	↑
sniWpNetworkDown Cluster network down	937	INFORMATIONAL	Cluster network %s down.	↑
sniWpNetworkUnavailable Cluster network unavailable	938	MAJOR	Cluster network %s unavailable.	↑
sniWpNetInterfaceUp Cluster network interface reactivated	939	INFORMATIONAL	Cluster network interface %s reactivated.	↑
sniWpNetInterfaceFailed Cluster network interface failed	940	MAJOR	Cluster network interface %s has failed.	↑
sniWpNetInterfaceUnreachable Cluster network interface unreachable	941	MAJOR	Cluster network interface %s unreachable.	↑
sniWpNetInterfaceUnavailable Cluster network interface unavailable	942	MAJOR	Cluster network interface %s unavailable.	↑

B.7 PCI-HOTPLUG-MIB (pcihotplug.mib)

PCI HOTPLUG からの トラブルです。

表 : PCI-HOTPLUG-MIB トラブル (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
siePciHotPlugTrapHotRemoval Start of HotPlug action	1000	INFORMATIONAL	A Hot Removal action is started on physical slot %d (server %s).	未サポートアプリケーション(ClusterView) からの トラブルです。通常表示されません。
siePciHotPlugTrapHotReplace Start of HotPlug action	1001	INFORMATIONAL	A Hot Replace action is started on physical slot %d (Server %s).	↑

表 : PCI-HOTPLUG-MIB トラップ (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE／アラームタイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
siePciHotPlugTrapEndHotPlugAction End of HotPlug action	1002	INFORMATIONAL	The HotPlug action on physical slot %d is terminated %s (Server %s). The card state is : %s	↑
sieDeviceHotPlugTrapHotRemoval Device HotPlug action	1020	INFORMATIONAL	A SCSI device <%s> on SCSI adapter <%s> (PCI Bus Number %d, Device Number %d) has been removed (server %s).	↑
sieDeviceHotPlugTrapHotReplace Device HotPlug action	1021	INFORMATIONAL	A SCSI device <%s> on SCSI adapter <%s> (PCI Bus Number %d, Device Number %d) has been replaced (server %s).	↑
sieDeviceHotPlugTrapHotAdd Device HotPlug action	1022	INFORMATIONAL	A SCSI device <%s> on SCSI adapter <%s> (PCI Bus Number %d, Device Number %d) has been added (server %s).	↑

B.8 SERVERVIEW-STATUS-MIB (status.mib)

ServerView ステータスエージェントからのトラップです。

表 : SERVERVIEW-STATUS-MIB トラップ (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE／アラームタイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sieStTrapStatusChanged Status changed	1100	INFORMATIONAL	System status has changed at server %s. サーバ %s で、システムの状態が変化しました。	前後の Trap を確認してください。

B.9 SIEMENS-MULTIPATH-MIB (mp.mib)

FSC MultiPath SNMP agent's からのトラップです。

表 : SIEMENS-MULTIPATH-MIB トラップ (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE／アラームタイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sieMPSError MP: Last port failed	1200	CRITICAL	MultiPath group %d on server %s is down. サーバ %s で、MultiPath グループ %d がダウンしています。	
sieMPRetry MP: Port failed	1201	MAJOR	Port %d of MultiPath group %d on server %s is down. Error on ID %d, Lun %d. サーバ %s で、MultiPath グループ %d のポート %d がダウンしています。 ID %d, Lun %d にエラーがあります。	
sieMPActivePortChanged MP: Port activated	1202	INFORMATIONAL	Active port for MultiPath group %d changed on server %s. Port %d is now active port. サーバ %s で、MultiPath グループ %d のアクティブポートが変更されました。ポート %d が、現在のアクティブポートです。	

表 : SIEMENS-MULTIPATH-MIB トラブル (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sieMPReconfigured MP: Port added/removed	1203	INFORMATIONAL	MultiPath group %d reconfigured on server %s. Port %d was affected. サーバ %s で、MultiPath グループ %d が再構成されました。ポート %d に異常がありました。	
sieMPStatusChanged MP: Behavior changed	1204	INFORMATIONAL	MultiPath behavior for group %d was changed on server %s. サーバ %s で、グループ %d の MultiPath 動作が変更されました。	
sieMPAutoRecovered MP: Port alive again	1205	INFORMATIONAL	MultiPath group %d on server %s: Port %d recovered from error. サーバ %s の MultiPath グループ %d : ポート %d は、エラーから復旧しました。	
sieMPErrorCleared MP: Status cleared	1206	INFORMATIONAL	MultiPath group %d on server %s: Error for MultiPath port %d was cleared. サーバ %s の MultiPath グループ %d : MultiPath ポート %d のエラーは解消されました。	

B.10 SERVERVIEW-DUPLEXDATAMANAGER-MIB (ddm.mib)

DuplexDataManage からのトラブルです。詳細については S60 説明書を参照してください。

表 : SERVERVIEW-DUPLEXDATAMANAGER-MIB トラブル (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
fscDdmNewConfig DDM: New DuplexWrite configuration	1400	INFORMATIONAL	Configuration for DuplexWrite group %d/%d/%d/%d was created or updated on server %s. サーバ %s で、DuplexWrite グループ %d %d %d %d の構成が作成または更新されました。	
fscDdmPieceRemoved DDM: DuplexWrite piece removed	1401	INFORMATIONAL	DuplexWrite piece %d/%d/%d/%d was removed from group on server %s サーバ %s で、DuplexWrite %d %d %d %d が削除されました。	
fscDdmConfigRemoved DDM: DuplexWrite configuration removed	1402	INFORMATIONAL	DuplexWrite group %d/%d/%d/%d was removed on server %s. サーバ %s で、DuplexWrite グループ %d %d %d %d が削除されました。	
fscDdmStatusSet DDM: DuplexWrite status changed	1403	MINOR	Status of Duplex Write piece %d/%d/%d/%d on server %s has changed (user request). サーバ %s で、DuplexWrite %d %d %d %d のステータスが変更されました。(user request)	

表 : SERVERVIEW-DUPLEXDATAMANAGER-MIB トラブル (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラームタイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
fscDdmUpdateStatus DDM: DuplexWrite status updated	1404	MINOR	Status of DuplexWrite piece %d/%d/%d/%d on server %s has changed (driver request). サーバ %s で、DuplexWrite %d %d %d のステータスが変更されました。(driver request)	
fscDdmPieceRecovered DDM: DuplexWrite piece recovered	1405	INFORMATIONAL	DuplexWrite piece %d/%d/%d/%d successfully recovered on server %s. サーバ %s で、DuplexWrite %d %d %d が復旧しました。	
fscDdmRecoverAborted DDM: Recover aborted	1406	MINOR	DuplexWrite piece %d/%d/%d/%d aborted Recover process on server %s. サーバ %s で、DuplexWrite %d %d %d が復旧処理を中止しました。	
fscDdmReservationConflict DDM: reservation conflict	1407	INFORMATIONAL	Reservation conflict occurred on DuplexWrite group %d/%d/%d/%d on server %s - group is not accessible. サーバ %s で、DuplexWrite %d %d %d に Reservation conflict が発生しました。グループは利用できません。	
fscDdmConfigChanged DDM: DuplexWrite configuration changed	1408	INFORMATIONAL	DuplexWrite has found a new configuration on server %s. サーバ %s で、DuplexWrite が新しい構成を検出しました。	
fscDdmConfigInvalidated DDM: DuplexWrite configuration invalidated	1409	INFORMATIONAL	Configuration information was invalidated for DuplexWrite group %d/%d/%d/%d on server %s. サーバ %s で、DuplexWrite グループ %d %d %d %d の構成情報が無効です。	
fscDdmActiveLunChanged DDM: Active DuplexWrite piece changed	1410	INFORMATIONAL	DuplexWrite piece %d/%d/%d/%d is used for read commands on server %s. サーバ %s で、DuplexWrite %d %d %d がリードコマンドを使用した。	
fscDdmPieceFailed DDM: DuplexWrite piece failed	1411	CRITICAL	DuplexWrite piece %d/%d/%d/%d failed on server %s. サーバ %s で、DuplexWrite %d %d %d が異常です。	
fscDdmRootFlagChanged DDM: RootDisk flag changed	1412	INFORMATIONAL	RootDisk flag changed on DuplexWrite group %d/%d/%d/%d on server %s. サーバ %s で、DuplexWrite %d %d %d のルートディスクフラグが変更されました。	
fscDdmForceActive DDM: DuplexWrite piece forced active	1413	INFORMATIONAL	DuplexWrite piece %d/%d/%d/%d marked forced active on server %s (Snapshot). サーバ %s で、DuplexWrite %d %d %d の強制活性が行われます。(Snapshot)	

表 : SERVERVIEW-DUPLEXDATAMANAGER-MIB トラップ (ENTERPRISE : enterprises.231.2.10.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
fscDdmNameChanged DDM: DuplexWrite name changed	1414	INFORMATIONAL	Name of DuplexWrite group %d/%d/%d/%d has changed on server %s. サーバ %s で、DuplexWrite グループ %d %d %d %d の名前が変更されました。	
fscDdmPathFailed DDM: MultiPath path failed	1415	CRITICAL	MultiPath path %d/%d/%d/%d failed on server %s. サーバ %s で、MultiPath のパス %d %d %d %d が異常です。	
fscDdmRetry DDM: MultiPath path retried	1416	MAJOR	MultiPath path %d/%d/%d/%d failed on server %s - retry successful on other port. サーバ %s で、MultiPath のパス %d %d %d %d が異常がありました。他のポートで再試行が成功しました。	
fscDdmActivePortChanged DDM: Active MultiPath path changed	1417	INFORMATIONAL	MultiPath path %d/%d/%d/%d is active on server %s. サーバ %s で、MultiPath のパス %d %d %d %d が活性化しました。	
fscDdmReconfigured DDM: MultiPath reconfigured	1418	INFORMATIONAL	MultiPath configuration changed on server %s. サーバ %s で、MultiPath の構成が変更されました。	
fscDdmStatusChanged DDM: MultiPath status changed	1419	INFORMATIONAL	Status of MultiPath path %d/%d/%d/%d has changed on server %s. サーバ %s で、MultiPath のパス %d %d %d %d のステータスが変更されました。	
fscDdmAutoRecovered DDM: MultiPath path AutoRecovered	1420	INFORMATIONAL	MultiPath path %d/%d/%d/%d automatically recovered on server %s. サーバ %s で、MultiPath のパス %d %d %d %d が自動復旧しました。	
fscDdmErrorCleared DDM: MultiPath path error cleared	1421	INFORMATIONAL	Error cleared on MultiPath path %d/%d/%d/%d on server %s. サーバ %s で、MultiPath のパス %d %d %d %d のエラーが解消されました。	
fscDdmPnPRemove DDM: PnP Removal	1422	INFORMATIONAL	Plug and Play Removal occurred on server %s. サーバ %s で、Plug and Play Removal が発生しました。	
fscDdmPnPNew DDM: PnP Add	1423	INFORMATIONAL	Plug and Play Add occurred on server %s. サーバ %s で、Plug and Play Add が発生しました。	
fscDdmCluster DDM: Cluster configuration changed	1424	INFORMATIONAL	Cluster configuration changed on server %s. サーバ %s で、クラスター構成が変更されました。	

B.11 FSC-SERVERCONTROL2-MIB (sc2.mib)

ServerView エージェントからのトラップです。

表 : FSC-SERVERCONTROL2-MIB トラップ (ENTERPRISE : enterprises.231.2.10.2.2.10.20)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sc2TrapTest Test trap	2000	INFORMATIONAL	Test trap from server %s (no error).	
sc2TrapCommunicationFailure Communication lost	2001	MINOR	Communication with the Server Management controller in cabinet %d of server %s lost.	
sc2TrapCommunicationEstablished Communication established	2002	INFORMATIONAL	Communication with the Server Management controller in cabinet %d of server %s established again.	
sc2TrapControllerSelftestWarning Controller selftest warning	2003	MINOR	The Server Management controller in cabinet %d has detected an minor problem during selftest of server %s.	
sc2TrapControllerSelftestError Controller selftest error	2004	CRITICAL	The Server Management controller in cabinet %d of server %s failed.	
sc2TrapBiosSelftestError Critical BIOS selftest error	2005	CRITICAL	A critical error happend while BIOS selftest in cabinet %d of server %s. See server management message log (recovery log) for detailed information.	
sc2TrapSevereSystemError The system was restarted after a severe problem	2006	CRITICAL	The system was restarted after a severe problem at cabinet %d of server %s. See server management message log (recovery log) for detailed information.	
sc2TrapFanAdded Fan added	2010	INFORMATIONAL	Fan %s was added into cabinet %d of server %s.	
sc2TrapFanRemoved Fan removed	2011	INFORMATIONAL	Fan %s was removed from cabinet %d of server %s.	
sc2TrapFanOk Fan OK	2012	INFORMATIONAL	Fan %s in cabinet %d of server %s is working again.	
sc2TrapFanCritical Fan failure predicted	2013	MAJOR	Fan %s will fail in near future in cabinet %d of server %s.	
sc2TrapFanFailed Fan failed	2014	CRITICAL	Fan %s failed in cabinet %d of server %s.	
sc2TrapRedundantFanFailed Redundant fan failed	2015	MAJOR	The redundant fan %s failed in cabinet %d of server %s. System can become critical if another fan in this group fails.	
sc2TrapTempOk Temperature normal	2020	INFORMATIONAL	Temperature at sensor %s in cabinet %d of server %s is within normal range.	
sc2TrapTempWarning Temperature warning	2021	MAJOR	Temperature at sensor %s in cabinet %d of server %s has reached the warning level.	
sc2TrapTempCritical Temperature critical	2022	CRITICAL	Temperature at sensor %s in cabinet %d of server %s has reached the critical level.	
sc2TrapTempSensorOk Temperature sensor OK	2023	INFORMATIONAL	Temperature sensor %s in cabinet %d of server %s is working again.	
sc2TrapTempSensorBroken Temperature sensor broken	2024	MAJOR	Temperature sensor %s in cabinet %d of server %s is broken or not connected.	
sc2TrapPowerSupplyAdded Power supply added	2030	INFORMATIONAL	Power supply %s in cabinet %d at server %s was added.	

表 : FSC-SERVERCONTROL2-MIB トラブル (ENTERPRISE : enterprises.231.2.10.2.2.10.20)

TRAP-TYPE / アラームタイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sc2TrapPowerSupplyRemoved Power supply removed	2031	INFORMATIONAL	Power supply %s in cabinet %d at server %s was removed.	
sc2TrapPowerSupplyOk Power supply OK	2032	INFORMATIONAL	Power supply %s in cabinet %d at server %s is working again.	
sc2TrapPowerSupplyCritical Power supply critical	2033	CRITICAL	Insufficient operating power supplies available in cabinet %d at server %s.	
sc2TrapPowerSupplyFailed Power supply failed	2034	MAJOR	Power supply %s in cabinet %d at server %s failed.	
sc2TrapRedundantPowerSupplyFailed Redundant power supply failed	2035	MAJOR	Redundant power supply %s in cabinet %d at server %s failed. System can become critical if another power supply fails.	
sc2TrapPowerSupplyRedundancyLost Power supply redundancy lost	2036	MINOR	Power supply redundancy in cabinet %d at server %s lost. System will become critical if a power supply fails.	
sc2TrapAcFail AC failed	2040	CRITICAL	AC failure in cabinet %d of server %s.	
sc2TrapDcFail Power failed	2041	CRITICAL	DC power failure in cabinet %d of server %s.	
sc2TrapOnBattery AC failed, on battery	2042	CRITICAL	AC failure. Cabinet %d is running on battery power since %d seconds. In %d minutes server %s will shutdown.	
sc2TrapOnMains AC OK	2043	INFORMATIONAL	Mains returned after power failure in cabinet %d at server %s.	
sc2TrapVoltageOk Voltage OK	2050	INFORMATIONAL	Power supply voltage %s in cabinet %d at server %s is within normal range again.	
sc2TrapVoltageTooLow Voltage too low	2051	CRITICAL	Power supply voltage %s in cabinet %d at server %s is too low.	
sc2TrapVoltageTooHigh Voltage too high	2052	CRITICAL	Power supply voltage %s in cabinet %d at server %s is too high.	
sc2TrapVoltageFailed Voltage out of range	2053	CRITICAL	Power supply voltage %s in cabinet %d at server %s is out of range.	
sc2TrapBatteryVoltagePrefail Battery failure predicted	2054	MAJOR	Battery voltage %s in cabinet %d at server %s: Battery is predicted to fail in near future.	
sc2TrapCorrectableMemErrorAddr Correctable memory error	2060	INFORMATIONAL	Correctable memory error at address %d in cabinet %d of server %s.	
sc2TrapUncorrectableMemErrorAddr Uncorrectable memory error	2061	CRITICAL	Uncorrectable memory error at address %d in cabinet %d of server %s.	
sc2TrapCorrectableMemErrorBank Correctable memory error	2062	INFORMATIONAL	Correctable memory error at bank %s in cabinet %d of server %s.	
sc2TrapUncorrectableMemErrorBank Uncorrectable memory error	2063	CRITICAL	Uncorrectable memory error at bank %s in cabinet %d of server %s.	
sc2TrapCorrectableMemErrorModule Correctable memory error	2064	INFORMATIONAL	Correctable memory error at module %s in cabinet %d of server %s.	
sc2TrapUncorrectableMemErrorModule Uncorrectable memory error	2065	CRITICAL	Uncorrectable memory error at module %s in cabinet %d of server %s.	
sc2TrapCorrectableMemError Correctable memory error	2066	INFORMATIONAL	Correctable memory error in cabinet %d of server %s.	
sc2TrapUncorrectableMemError Uncorrectable memory error	2067	CRITICAL	Uncorrectable memory error in cabinet %d of server %s.	

表 : FSC-SERVERCONTROL2-MIB ト ラッ プ (ENTERPRISE : enterprises.231.2.10.2.2.10.20)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sc2TrapMemErrorModulePrefail Memory module prefailure	2068	MAJOR	Memory module failure is predicted for module %s in cabinet %d of server %s.	
sc2TrapMemErrorModuleFailing Memory module failing	2069	MAJOR	Memory module %s in cabinet %d of server %s is failing. Too many errors have occurred.	
sc2TrapMemErrorModuleReplaced Memory module replaced	2070	MAJOR	Memory module module %s in cabinet %d of server %s had failed and was replaced by a hot-spare module	
sc2TrapMemErrorLoggingDisabled Memory error logging disabled	2071	MINOR	Too many correctable memory errors at server %s. Error logging was disabled	
sc2TrapCpuSpeedChanged CPU speed changed	2080	INFORMATIONAL	CPU speed at server %s changed to %d percent of its maximum speed.	
sc2TrapCpuPrefail CPU prefailure	2081	MAJOR	CPU failure is predicted for CPU %s in cabinet %d of server %s.	
sc2TrapCabinetSwitchedOff Cabinet switched off	2090	INFORMATIONAL	Cabinet %d was switched off because of %s (server %s).	
sc2TrapCabinetSwitchedOn Cabinet switched on	2091	INFORMATIONAL	Cabinet %d was switched on because of %s (server %s).	
sc2TrapPowerOffTimeReached Power off time reached	2092	INFORMATIONAL	The power-off time is reached in cabinet %d on server %s! System shutdown in %d minutes.	
sc2TrapServerShutdown Server shutdown	2093	INFORMATIONAL	The reason %s causes a shutdown at server %s.	
sc2TrapShutdownCancelled Shutdown cancelled	2094	INFORMATIONAL	Shutdown at server %s cancelled by the user.	
sc2TrapBootRetryCountZero Boot retry counter zero	2095	MAJOR	Boot retry counter is zero on server %s.	
sc2TrapMessageLogFull Message log full	2100	MINOR	The System Event Log on server %s in cabinet %d is full. No more messages can be logged! Please clear unneeded log entries as soon as possible!	
sc2TrapMessageLogWarning Message log warning	2101	MINOR	The System Event Log for cabinet %d at server %s has exceeded %d%% of its capacity.	
sc2TrapBootMessageLogEntry Error in message log	2102	MAJOR	An error was recorded on server %s before the management agents were started (boot phase). See server management message log (Recovery log) for detailed information.	
sc2TrapIntrusionAssertion Front door or housing opened	2110	MAJOR	The front door or housing of cabinet %d was opened on server %s.	
sc2TrapIntrusionDeassertion Front door or housing closed	2111	INFORMATIONAL	The front door or housing of cabinet %d was closed on server %s.	
sc2TrapIntrusionChanged Front door or housing opened/closed	2112	MAJOR	The front door or housing of cabinet %d was opened or closed on server %s.	

B.12 BLADE-MIB (S31.mib)

ブレードサーバ (BX300 / BX600) からのトラップです。詳細についてはブレードサーバのマニュアルを参照してください。

表 : BLADE-MIB トラップ (ENTERPRISE : enterprises.7244.1.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
s31TestTrap Test trap	1600	INFORMATIONAL	Test trap from blade chassis %s (no error).	
s31MgmtBladeAdded Management blade added	1601	INFORMATIONAL	Management blade %d at blade chassis %s was added.	
s31MgmtBladeRemoved Management blade removed	1602	INFORMATIONAL	Management blade %d at blade chassis %s was removed.	
s31MgmtBladeOk Status of management blade is OK	1603	INFORMATIONAL	Management blade %d at blade chassis %s status is ok.	
s31MgmtBladeError Status of management blade is error	1604	MAJOR	Management blade %d at blade chassis %s status is error.	
s31MgmtBladeCriticalError Status of management blade is critical	1605	CRITICAL	Management blade %d at blade chassis %s status is critical.	
s31ServerBladeAdded Server blade added	1606	INFORMATIONAL	Server blade %d at blade chassis %s was added.	
s31ServerBladeRemoved Server blade removed	1607	INFORMATIONAL	Server blade %d at blade chassis %s was removed.	
s31ServerBladeOk Status of server blade is OK	1608	INFORMATIONAL	Server blade %d at blade chassis %s status is OK.	
s31ServerBladeError Status of server blade is error	1609	MAJOR	Server blade %d at blade chassis %s status is error.	
s31ServerBladeCriticalError Status of server blade is critical	1610	CRITICAL	Server blade %d at blade chassis %s status is critical.	
s31SwitchBladeAdded Switch blade added	1611	INFORMATIONAL	Switch blade %d at blade chassis %s was added.	
s31SwitchBladeRemoved Switch blade removed	1612	INFORMATIONAL	Switch blade %d at blade chassis %s was removed.	
s31SwitchBladeOk Status of switch blade is OK	1613	INFORMATIONAL	Switch blade %d at blade chassis %s status is OK.	
s31SwitchBladeError Status of switch blade is error	1614	MAJOR	Switch blade %d at blade chassis %s status is error.	
s31SwitchBladeCriticalError Status of switch blade is critical	1615	CRITICAL	Switch blade %d at blade chassis %s status is critical.	
s31SysFanAdded System fan added	1616	INFORMATIONAL	System fan %d at blade chassis %s was added.	
s31SysFanRemoved System fan removed	1617	INFORMATIONAL	System fan %d at blade chassis %s was removed.	
s31SysFanOk Status of system fan is OK	1618	INFORMATIONAL	System fan %d at blade chassis %s status is OK.	
s31SysFanError Status of system fan is error	1619	MAJOR	System fan %d at blade chassis %s status is error.	

表 : BLADE-MIB ト ラッ プ (ENTERPRISE : enterprises.7244.1.1.1)

TRAP-TYPE / アラームタイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
s31SysFanCriticalError Status of system fan is critical	1620	CRITICAL	System fan %d at blade chassis %s status is critical.	
s31SysTempOk Temperature normal	1621	INFORMATIONAL	Temperature at system temperature sensor %d of blade chassis %s is within normal range.	
s31SysTempError Temperature abnormal	1622	MAJOR	Temperature at system temperature sensor %d of blade chassis %s is out of normal range.	
s31SysTempCriticalError Temperature critical	1623	CRITICAL	Temperature at system temperature sensor %d of blade chassis %s has reached the critical level.	
s31SysTempSensorOk System temperature sensor OK	1624	INFORMATIONAL	System temperature sensor %d of blade chassis %s is working again.	
s31SysTempSensorBroken System temperature sensor broken	1625	MAJOR	System temperature sensor %d of blade chassis %s is broken or not connected.	
s31SysPowerSupplyAdded Power supply added	1626	INFORMATIONAL	Power supply unit %d at blade chassis %s was added.	
s31SysPowerSupplyRemoved Power supply removed	1627	INFORMATIONAL	Power supply unit %d at blade chassis %s was removed.	
s31SysPowerSupplyOk Power supply OK	1628	INFORMATIONAL	Power supply unit %d at blade chassis %s is working again.	
s31SysPowerSupplyError Power supply failed	1629	MAJOR	Power supply unit %d at blade chassis %s failed.	
s31SysPowerSupplyCriticalError Power supply critical	1630	CRITICAL	Insufficient operating power supplies unit available in power supply unit %d at blade chassis %s.	
s31ServerPowerOn Power on	1631	INFORMATIONAL	Server blade %d at blade chassis %s is powered on.	
s31ServerPostError Post error	1632	INFORMATIONAL	Server blade %d at blade chassis %s is posted error.	
s31ServerBootError Boot error	1633	INFORMATIONAL	No bootable operation system found at server blade %d of blade chassis %s.	
s31ServerShutdown Server shutdown	1634	INFORMATIONAL	Server blade %d at blade chassis %s is shutdowned.	
s31ServerSoftwareWatchdogExpired Software watchdog expired	1635	INFORMATIONAL	Software watchdog at server blade %d of blade chassis %s expired.	
s31ServerBootWatchdogExpired Boot watchdog expired	1636	INFORMATIONAL	Boot watchdog at server blade %d of blade chassis %s expired.	
s31UserAuthenticationFailure User authentication failure	1637	MAJOR	User authentication failure detected at blade chassis %s, performing protocol %s.	
s31TrapEventLog Error in event log	1638	MAJOR	An error was recorded on blade chassis %s. See server management event error log (Recovery) for detailed information.	
s31ServerBladeNewAdd Server blade was added on a empty slot	1639	INFORMATIONAL	Server blade %d at blade chassis %s is added on a empty slot.	

表 : BLADE-MIB トラップ (ENTERPRISE : enterprises.7244.1.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
s31ServerBladeHotReplace Server blade was added on a marked for hot replacement slot	1640	INFORMATIONAL	Server blade %d at blade chassis %s is added on a marked for hot replacement slot.	
s31ServerPowerOff Power off	1641	INFORMATIONAL	Server blade %d at blade chassis %s is powered off.	
s31SysTempSensorAdded System temperature sensor added	1642	INFORMATIONAL	System temperature sensor %d of blade chassis %s is added.	
s31SysTempSensorRemoved System temperature sensor removed	1643	INFORMATIONAL	System temperature sensor %d of blade chassis %s is removed.	
s31LivetimeError System live time has exceeded the limited count	1644	INFORMATIONAL	Server %s live time has exceeded the limited count.	
s31PowerOverBudget Server blade power on failed	1645	INFORMATIONAL	Server blade %d at blade chassis %s power on failed because of over power budget.	
s31NicDetectionFail Nic detection failed	1646	INFORMATIONAL	Management blade %d at blade chassis %s NIC detection failed.	
s31SysPowerSupplyOvpFail Power supply OVP fail	1647	INFORMATIONAL	Power supply unit %d OVP fail.	
s31SysPowerSupplyOcpFail Power supply OCP fail	1648	INFORMATIONAL	Power supply unit %d OCP fail.	
s31FiberChannelAdded Fiber channel pass through card added	1649	INFORMATIONAL	Fiber channel pass through card %d at blade chassis %s was added.	
s31FiberChannelRemoved Fiber channel pass through card removed	1650	INFORMATIONAL	Fiber channel pass through card %d at blade chassis %s was removed.	
s31SysPowerSupplyOverallStatusOk System power supply overall status	1651	INFORMATIONAL	System power supply overall status = OK	
s31SysPowerSupplyOverallStatusDegraded System power supply overall status	1652	INFORMATIONAL	System power supply overall status = degraded	
s31SysPowerSupplyOverallStatusCritical System power supply overall status	1653	INFORMATIONAL	System power supply overall status = critical	
s31SysFanOverallStatusOk System fan overall status	1654	INFORMATIONAL	System fan overall status = OK	
s31SysFanOverallStatusDegraded System fan overall status	1655	INFORMATIONAL	System fan overall status = degraded	
s31SysFanOverallStatusCritical System fan overall status	1656	INFORMATIONAL	System fan overall status = critical	

表 : BLADE-MIB トラップ (ENTERPRISE : enterprises.7244.1.1.1)

TRAP-TYPE／アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
s31SysTemperatureOverallStatusOk System temperature overall status	1657	INFORMATIONAL	System temperature overall status = OK	
s31SysTemperatureOverallStatusDegraded System temperature overall status	1658	INFORMATIONAL	System temperature overall status = degraded	
s31SysTemperatureOverallStatusCritical System temperature overall status	1659	INFORMATIONAL	System temperature overall status = critical	

B.13 AdaptecArrayController-MIB (aac.mib)

ブレードサーバ (PRIMERGY BX600) 用の HostRAID Adaptec Array Controller のトラップです。詳細についてはブレードサーバの説明書を参照してください。

表 : AdaptecArrayController-MIB トラップ (ENTERPRISE : enterprises.795.10.1.1)

TRAP-TYPE／アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
aacDriveLetterChange A Drive Letter Changed	1	INFORMATIONAL	A Drive Letter Changed on controller %s for container %d.	
aacFailoverChange A change in failover assignments occurred	2	INFORMATIONAL	A change in failover assignments occurred on controller %s.	
aacContainerStateChange A container changed its state	3	MINOR	A container changed its state on controller %. Container : %d.	
aacFileSystemChange A file system change has occurred	4	INFORMATIONAL	A file system change has occurred on container %d on controller %s.	
aacGeneralContainerFailure An unknown error occurred on container	6	MAJOR	An unknown error occurred on container %d on adapter %s.	
aacMirrorNotMirroring Container no longer mirroring	7	MAJOR	The container %d on controller %s is no longer in the mirroring state.	
aacMirrorFailureNoSpace Not enough failover space for mirror	8	CRITICAL	A failover operation for controller %s container %d failed because there was not enough space available on the failover device.	
aacMirrorFailureNoUnmirror Container could not be unmirrored	9	CRITICAL	The container %d on controller %s could not be unmirrored.	
aacMirrorFailoverStarted Mirror failover started	10	INFORMATIONAL	A mirror failover operation started on controller %s for container %d.	
aacMirrorFailoverFailed Mirror failover failed	11	CRITICAL	A failover operation on controller %s failed for container %d.	
aacMirrorNoFailoverAssigned No failover for mirror	12	MINOR	There is no failover device assigned to container %d on controller %s.	

表 : AdaptecArrayController-MIB トラブル (ENTERPRISE : enterprises.795.10.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
aacMirrorDriveFailure Mirror drive failure	13	CRITICAL	A drive that was part of the mirror set (container) %d failed. This occurred on controller %d.	
aacRaidRebuildStart Rebuild started	14	INFORMATIONAL	A rebuild operation started on controller %s for container %d.	
aacRaidRebuildRestart Rebuild restarted	15	INFORMATIONAL	A rebuild operation restarted on controller %s for container %d.	
aacRaidDriveFailure RAID Drive Failure	16	CRITICAL	A drive that was part of the RAID set (container) %d failed. This occurred on controller %s.	
aacRaidNoFailover No failover for RAID	17	MINOR	There is no failover device assigned to container %d on controller %s.	
aacRaidNoSpace Not enough failover space for RAID	18	CRITICAL	A failover operation for controller %s container %d failed because there was not enough space available on the failover device.	
aacSnapshotContainerAlmostFull Snapshot almost full	19	MAJOR	The snapshot container %d on controller %s is almost full.	
aacSnapshotContainerFull Snapshot full	20	CRITICAL	The snapshot container %d on controller %s is full.	
aacRaidRebuildComplete Rebuild complete	21	INFORMATIONAL	The rebuild operation on controller %s for container %d has completed.	
aacDeviceFailure Device failure	22	CRITICAL	A device has failed. Controller %s. Bus %d. ID %d LUN %d.	
aacControllerResume Controller resume	23	INFORMATIONAL	The controller %s resumed normal I/O operations.	
aacInterfaceUp Interface up	24	INFORMATIONAL	The AAC management interface is up.	
aacBatteryReconditionRequired Battery reconditioning required	25	MAJOR	The controller %s requires battery reconditioning.	
aacEnclosureGeneralError Enclosure general error	26	MAJOR	An enclosure connected to controller %s has reported an error.	
aacEnclosureFanError Enclosure fan error	27	MAJOR	An enclosure connected to controller %s has reported a fan failure.	
aacEnclosurePowerSupplyError Enclosure power supply error	28	MAJOR	An enclosure connected to controller %s has reported a power supply failure.	
aacEnclosureTempAbnormal Enclosure temperature abnormal	29	MAJOR	An enclosure connected to controller %s has reported an abnormal temperature reading.	
aacEnclosureTempOver Enclosure temperature too high	30	CRITICAL	An enclosure connected to controller %s has reported a temperature reading above the user threshold.	
aacBatteryDead Battery dead	31	CRITICAL	The battery connected to controller %s is dead.	
aacBatteryImproving Battery improving	32	INFORMATIONAL	The battery connected to controller %s is improving.	
aacBatteryDegrading Battery degrading	33	MAJOR	The battery connected to controller %s has lost charge.	
aacBatteryGood Battery good	34	INFORMATIONAL	The controller %s reports that its battery is good.	

表 : AdaptecArrayController-MIB ト ラッ プ (ENTERPRISE : enterprises.795.10.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
aacControllerPaused Controller paused	35	MINOR	The controller %s has been paused.	
aacContainerCreated Container created	36	INFORMATIONAL	Container %d has been created on controller %s.	
aacContainerDeleted Container deleted	37	INFORMATIONAL	Container %d has been deleted on controller %s.	
aacDeviceFailurePredictionThresholdExceeded Device failure prediction threshold exceeded	38	MAJOR	A device reported that its Failure Prediction Threshold had been exceeded. Controller %s. Bus %d. ID %d LUN %d.	
aacDeviceFailurePredictionTest Device failure prediction test	39	INFORMATIONAL	A Failure Prediction Threshold test occurred. Controller %s. Bus %d. ID %d. LUN %d.	
aacDeviceWarning Device warning	40	MAJOR	A Device issued a warning. Controller %s. Bus %d. ID %d LUN %d.	
aacDeviceTemperatureWarning Device temperature warning	41	MAJOR	A Device issued a abnormal temperature warning. Controller %s. Bus %d. ID %d LUN %d.	
aacDeviceDegradedWarning Device degraded warning	42	MINOR	A device reported that its status is degraded. Controller %s. Bus %d. ID %d LUN %d.	
aacDeviceFailurePredictionConfigurationChanged Device failure prediction configuration changed	43	INFORMATIONAL	The failure prediction configuration changed for a device. Controller %s. Bus %d. ID %d LUN %d.	
aacGlobalHotSpareReplacedSuccess Failover Replaced	44	INFORMATIONAL	A failover device has been replaced on controller %s.	
aacDedicatedHotSpareReplacedSuccess Failover Replaced	45	INFORMATIONAL	A failover device has been replaced on container %d, controller %s.	
aacGlobalHotSpareReplacedTooSmall Failover Replaced	46	WARNING	The failover device that was replaced on controller %s is too small.	
aacDedicatedHotSpareReplacedTooSmall Failover Replaced	47	WARNING	The failover device that was replaced on container %d, controller %s is too small.	
aacDedicatedHotSpareReplacedArrayNotExist Failover Replaced	48	WARNING	The failover device has been replaced on container %d, controller %s. However, container %d does not exist.	
aacBatteryTemperatureWarning Battery Temperature Warning	49	WARNING	The battery connected to controller %s has reported an over temperature warning.	
aacBatteryTemperatureCritical Battery Temperature Critical	50	CRITICAL	The battery connected to controller %s, has reported that it is critically over temperature.	
aacBatteryTemperatureCriticalRecover Battery Temperature Critical Recover	51	INFORMATIONAL	The battery connected to controller %s, has reported that it has recovered from a critical over temperature.	
aacBatteryTemperatureNormal Battery Temperature Warning Recover	52	INFORMATIONAL	The battery connected to controller %s, has returned to normal.	

表 : AdaptecArrayController-MIB トラブル (ENTERPRISE : enterprises.795.10.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
aacContainerMetadataUnknownError Container Metadata Unknown Error	53	CRITICAL	Container %d has experienced an unknown metadata error on controller %s.	
aacContainerMetadataReadError A metadata read error has occurred	54	CRITICAL	A metadata read error has occurred. Controller %s. Bus %d. ID %d LUN %d.	
aacContainerMetadataCRCFailureError Container Metadata CRC Failure Error	55	CRITICAL	A metadata CRC failure has occurred. Controller %s. Bus %d. ID %d LUN %d.	
aacContainerMiscompareError Container Miscompare Error	56	CRITICAL	Container %d has experienced miscompare error(s) on controller %s.	
aacSCSIBusReset There has been a SCSI bus reset	57	INFORMATIONAL	There has been a SCSI bus reset. Controller %s. Bus %d.	
aacSenseData Sense data event	58	INFORMATIONAL	A sense data event has occurred. Controller %s. Bus %d. ID %d LUN %d. Key %s. ASC %s ASCQ %s.	
aacMediumError There has been a device medium error	59	MAJOR	There has been a device medium error. Controller %s. Bus %d. ID %d LUN %d. Begin LBA %s End LBA %s.	
aacBadBlockRecoveryStarting The bad block recovery has started.	60	INFORMATIONAL	The bad block recovery has started. Controller %s. Bus %d. ID %d LUN %d.	
aacBadBlockRecoveryCompleting The bad block recovery has completed	61	INFORMATIONAL	The bad block recovery has completed. Controller %s. Bus %d. ID %d LUN %d.	
aacInvalidIO An invalid I/O event has occurred	62	MAJOR	An invalid I/O event has occurred. Controller %s. Bus %d. ID %d LUN %d. Expected Bytes %d, Actual Bytes %d.	
aacDisablingChannel Disabling channel event	63	MINOR	A disabling channel event has occurred. Controller %s. Bus %d. Error Code %d	
aacCannotReadyDevice System can not ready the device	64	MAJOR	The system can not ready the device. Controller %s. Bus %d. ID %d LUN %d.	
aacChannelTimeout Channel Timeout	65	MAJOR	A channel timeout has occurred. Controller %s. Bus %d.	
aacSenseDataUnknown Sense data event	66	MAJOR	A sense data event has occurred. Controller %s. Bus %d. ID %d LUN %d. Key %s. ASC %s ASCQ %s.	
aacCommandTimeout A command timeout has occurred	67	MAJOR	A command timeout has occurred. Controller %s. Bus %d. ID %d LUN %d. OpCode %s.	
aacContainerMediumErrorWarning A medium error was encountered while rebuilding a container	68	WARNING	A medium error was encountered while rebuilding a container on Controller %s. Container %d. Block Number %s.	

B.14 DESKTRAP-MIB (desktrap.mib)

次の表は、DESKTRAP-MIB のトラップを掲載して、概要を示したものです。

DeskView Trap-Agent からのトラップです。

表 : DESKTRAP-MIB トラップ (ENTERPRISE : enterprises.231.2.10.3)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sniTrapError No Text found in DeskMon.ini	1	MINOR	No Text found in DeskMon.ini on %s	未サポートアプリケーション(DeskView)からのトラップです。 通常表示されません。
sniSmartOK SMART hard disk reports OK	1001	INFORMATIONAL	SMART hard disk reports OK on %s	↑
sniSmartWarning SMART hard disk reports Warning	1002	MINOR	SMART hard disk reports Warning on %s	↑
sniSmartError SMART hard disk reports Error.	1003	CRITICAL	SMART hard disk reports Error on %s	↑
sniCoverClosed The cover is closed	2001	INFORMATIONAL	The cover is closed on %s	↑
sniCoverOpened The cover has been opened.	2003	CRITICAL	The cover has been opened on %s	↑
sniCoverSensorincorporated The sensor for securing the cover is incorporated.	3001	INFORMATIONAL	The sensor for securing the cover is incorporated on %s	↑
sniCoverSensorMissing The sensor for securing the cover is missing or defective	3003	CRITICAL	The sensor for securing the cover is missing or defective on %s	↑
sniCoverRecognition The cover type cannot be recognized.	4001	INFORMATIONAL	The cover type cannot be recognized on %s	↑
sniCoverRecognitionMissing The sensor for recognizing the cover type is missing or defective.	4003	CRITICAL	The sensor for recognizing the cover type is missing or defective on %s	↑
sniNoShortCircuit No short circuit in the mouse, keyboard or USB interface.	5001	INFORMATIONAL	No short circuit in the mouse, keyboard or USB interface on %s	↑
sniShortCurcuit Short circuit in the mouse, keyboard or USB interface.	5003	CRITICAL	Short circuit in the mouse, keyboard or USB interface on %s	↑
sniTemperatureOK The temperature sensor is functioning	7001	INFORMATIONAL	The temperature sensor is functioning on %s	↑
sniTemperatureWarning The temperature is high	7002	MINOR	The temperature is high on %s	↑
sniTemperatureCritical The temperature sensor is defective or the temperature is too high	7003	CRITICAL	The temperature sensor is defective or the temperature is too high on %s	↑
sniFanRunning The fan is running	8001	INFORMATIONAL	The fan is running on %s	↑

表 : DESKTRAP-MIB トラブル (ENTERPRISE : enterprises.231.2.10.3)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sniFanNotRunning The fan is not running	8003	CRITICAL	The fan is not running on %s	↑
sniFanWormOK The rotational speed of the fan is OK.	9001	INFORMATIONAL	The rotational speed of the fan is OK on %s	↑
sniFanWormWarning The rotational speed of the fan is almost critical.	9002	MINOR	The rotational speed of the fan is almost critical on %s	↑
sniFanWormCritical The rotational speed of the fan is critical.	9003	CRITICAL	The rotational speed of the fan is critical on %s	↑
sniVoltageOk The voltage monitor is functioning.	11001	INFORMATIONAL	The voltage monitor is functioning on %s	↑
sniVoltageWarning The voltage is almost critical.	11002	MINOR	The voltage is almost critical on %s	↑
sniVoltageCritical The voltage monitor is not functioning or the voltage is critical.	11003	CRITICAL	The voltage monitor is not functioning or the voltage is critical on %s	↑
sniWatchdogOk The functionality of the operating system watchdog is guaranteed.	12001	INFORMATIONAL	The functionality of the operating system watchdog is guaranteed on %s	↑
sniWatchdogCritical The operating system watchdog caused too many consecutive system reboots and will be deactivated.	12003	CRITICAL	The operating system watchdog caused too many consecutive system reboots and will be deactivated on %s	↑
sniInternalError Messages for system monitoring got lost because they could not be buffered!. The buffer has overrun or the harddisk was full.	13001	MINOR	Messages for system monitoring got lost because they could not be buffered!. The buffer has overrun or the harddisk was full on %s.	↑
sniBIOSErrorLogOK BIOS error log contains no current entries	14001	INFORMATIONAL	BIOS error log contains no current entries on %s	↑
sniBIOSErrorLogWarning BIOS reported a non-critical problem	14002	MINOR	BIOS reported a non-critical problem on %s	↑
sniBIOSErrorLogCritical BIOS reported a critical error	14003	CRITICAL	BIOS reported a critical error on %s	↑
sniAOLPOSTCritical Power On Self Test (POST) error.	15003	CRITICAL	Power On Self Test (POST) error on %s	↑
sniAOLWatchdogCritical The operating system may be hung or the computer failed to boot.	16003	CRITICAL	The operating system may be hung or the computer failed to boot on %s	↑
sniAOLCoverOpened The cover was opened.	17003	CRITICAL	The cover was opened on %s	↑

表 : DESKTRAP-MIB トラブル (ENTERPRISE : enterprises.231.2.10.3)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sniAOLCPUMissingCritical The processor was removed from the computer.	18003	CRITICAL	The processor was removed from the computer %s	↑
sniAOLHeartbeatCritical The computer is no longer available. (Presence Heartbeat Expired).	20003	CRITICAL	The computer %s is no longer available. (Presence Heartbeat Expired)	↑
sniFreeDiskSpaceOK Free hard disk space is sufficient.	21001	INFORMATIONAL	Free hard disk space is sufficient on %s.	↑
sniFreeDiskSpaceWarning Free hard disk space is low.	21002	MINOR	Free hard disk space is low on %s.	↑
sniFreeDiskSpaceError Free hard disk space is extremely low.	21003	CRITICAL	Free hard disk space is extremely low on %s.	↑
sniMemoryChangesOK The memory size has not changed.	22001	INFORMATIONAL	The memory size has not changed on %s.	↑
sniMemoryChangesWarning The memory size increased.	22002	MINOR	The memory size increased on %s.	↑
sniMemoryChangesError The memory size decreased.	22003	CRITICAL	The memory size decreased on %s.	↑
sniDeviceChangesOK No changes in devices.	23001	INFORMATIONAL	No changes in devices on %s.	↑
sniDeviceChangesWarning A device was added to the system.	23002	MINOR	A device was added to system %s.	↑
sniDeviceChangesError A device was removed from the system.	23003	CRITICAL	A device was removed from system %s.	↑
sniAOLVoltage_Fan_TemperatureCritical A Voltage/Fan/Temperature is operating out of specification.	24003	CRITICAL	A Voltage/Fan/Temperature is operating out of specification on %s	↑
sniAOLLANLeashCritical The computer was recently reconnected to the network	25003	CRITICAL	The computer was recently reconnected to the network on %s	↑
sniAOLProcessorTemperatureCritical The processor temperature is out of specification.	26003	CRITICAL	The processor temperature is out of specification on %s	↑
sniAOLProcessor0MissingCritical The processor P0 was removed from the computer.	28003	CRITICAL	The processor P0 was removed from the computer on %s	↑
sniAOLProcessor1MissingCritical The processor P1 was removed from the computer.	29003	CRITICAL	The processor P1 was removed from the computer on %s	↑
sniAOLVoltage_FanCritical A Voltage/Fan is operating out of specification.	30003	CRITICAL	A Voltage/Fan is operating out of specification on %s	↑

表 : DESKTRAP-MIB トラブル (ENTERPRISE : enterprises.231.2.10.3)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sniAOLVoltageCritical A Voltage is operating out of specification.	31003	CRITICAL	A Voltage is operating out of specification on %s	↑
sniAOLFanCritical A Fan is operating out of specification.	32003	CRITICAL	A Fan is operating out of specification on %s	↑
sniAOLFan_TemperatureCritical A Fan/Temperature is operating out of specification.	33003	CRITICAL	A Fan/Temperature is operating out of specification on %s	↑
sniAOLVoltage_TemperatureCritical A Voltage/Temperature is operating out of specification.	34003	CRITICAL	A Voltage/Temperature is operating out of specification on %s	↑
sniAOLNICSMBusSlotCritical NIC with Capelookout has been plugged into a PCI slot without SMBus connection.	35003	CRITICAL	NIC with Capelookout has been plugged into a PCI slot without SMBus connection on %s	↑
sniAOLPresencePongCritical Received a presence pong reply.	36003	CRITICAL	Received a presence pong reply on %s	↑
sniAOLHardwareMonitorCritical Hardware Monitor has detected an external event.	37003	CRITICAL	Hardware Monitor has detected an external event on %s	↑
sniAOL1_5VGTLVoltageCritical +1.5 GTL Voltage is out of specification.	38003	CRITICAL	+1.5 GTL Voltage is out of specification on %s	↑
sniAOLCPUCoreVoltageCritical CPU Core Voltage is out of specification.	39003	CRITICAL	CPU Core Voltage is out of specification on %s	↑
sniAOL3_3VStandbyCritical +3.3V Standby Voltage is out of specification.	40003	CRITICAL	+3.3V Standby Voltage is out of specification on %s	↑
sniAOL5VoltageCritical +5V Voltage is out of specification.	41003	CRITICAL	+5V Voltage is out of specification on %s	↑
sniAOLHardwareMonitorInternalTemperatureCritical Hardware Monitor Internal Temperature is out of specification.	42003	CRITICAL	Hardware Monitor Internal Temperature is out of specification on %s	↑
sniAOLCPUDiodeSensorCritical CPU Diode Sensor is operating out of specification.	43003	CRITICAL	CPU Diode Sensor is operating out of specification on %s	↑
sniAOLCPUFanCritical CPU Fan is operating out of specification.	44003	CRITICAL	CPU Fan is operating out of specification on %s	↑
sniAOLChassisFanCritical Chassis Fan is operating out of specification.	45003	CRITICAL	Chassis Fan is operating out of specification on %s	↑

表 : DESKTRAP-MIB トラブル (ENTERPRISE : enterprises.231.2.10.3)

TRAP-TYPE / アラームタイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
sniAOL12VoltageCritical +12V is operating out of specification.	46003	CRITICAL	+12V is operating out of specification on %s	↑
sniAOL3_3VoltageCritical +3.3V is operating out of specification.	47003	CRITICAL	+3.3V is operating out of specification on %s	↑
sniAOLCPUDiodeCritical Open/Short has occurred in the CPU Diode Sensor.	48003	CRITICAL	Open/Short has occurred in the CPU Diode Sensor on %s	↑
sniAOL2_5VoltageCritical +2.5V is operating out of specification.	49003	CRITICAL	+2.5V is operating out of specification on %s	↑
sniAOLAmbientTemperatureCritical Ambient temperature is out of specification.	50003	CRITICAL	Ambient temperature is out of specification on %s	↑
sniAOLRemoteTemperatureCritical Remote Temperature is out of specification.	51003	CRITICAL	Remote Temperature is out of specification on %s	↑
sniAOLUndockEventCritical Surprised undock event (no information is available).	52003	CRITICAL	Surprised undock event (no information is available) on %s	↑
sniFreeSystemDiskSpaceOK Free hard disk space on system disk is sufficient.	56001	INFORMATIONAL	Free hard disk space on system disk is sufficient on %s.	↑
sniFreeSystemDiskSpaceWarning Free hard disk space on system disk is low.	56002	MINOR	Free hard disk space on system disk is low on %s.	↑
sniFreeSystemDiskSpaceError Free hard disk space on system disk is extremely low.	56003	CRITICAL	Free hard disk space on system disk is extremely low on %s.	↑
sniLeaseExpirationOK The lease contract has not yet expired or no expiration date has been set.	57001	INFORMATIONAL	The lease contract has not yet expired or no expiration date has been set on %s.	↑
sniLeaseExpirationWarning The lease contract will expire soon.	57002	MINOR	The lease contract will expire soon on %s.	↑
sniLeaseExpirationError The lease contract has expired.	57003	CRITICAL	The lease contract has expired on %s.	↑
sniProcessorChangeOK No processor change determined.	58001	INFORMATIONAL	No processor change determined on %s.	
sniProcessorChangeWarning A processor has also been installed or replaced.	58002	MINOR	A processor has also been installed or replaced on %s.	
sniProcessorChangeError A processor has been removed.	58003	CRITICAL	A processor has been removed on %s.	

B.15 DPT-SCSI-MIB (dptscsi.mib)

Adaptec's I2O-based RAID Card の トラブルです。 詳細については RAID コントローラの説明書を参照してください。

表 : ADAPTECDURALINK-MIB トラブル (ENTERPRISE : enterprises.1597)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
dptHbaTemperatureVeryHighTrap Very high temperature on controller	400	CRITICAL	Very high temperature on controller %d	
dptArrayStatusChangeFailedTrap Array failed	401	CRITICAL	Array failed on Controller %d Bus %d ID %d LUN %d.	
dptHbaVoltageChangeTrap 5V Voltage outside range on controller	300	MAJOR	5V Voltage status is now %d on controller %d	
dptHbaTemperatureHighTrap High temperature on controller	301	MINOR	High temperature on controller %d	
dptHbaEccRAMErrorUncorrectableTrap Controller detected an ECC RAM error that could not be corrected	302	MAJOR	Uncorrectable ECC error found on controller %d	
dptArrayStatusChangeDegradedTrap Array degraded	303	MAJOR	Array on Controller %d Bus %d ID %d LUN %d running degraded.	
dptDevReqSense SeriousErrorTrap Serious: Request sense data received.	304	MAJOR	Serious: Request sense data for controller %d Bus %d ID %d LUN %d.	
dptDevArrayDataInconsistencyTrap Array data inconsistency found.	305	MAJOR	Array Data Inconsistency: Controller %d Bus %d ID %d LUN %d.	
dptHbaErrorTrap controller error found.	306	MAJOR	controller %d reported a non-SCSI related error.	
dptDevFailedTrap Unprotected drive has failed.	307	MAJOR	Drive failure on controller %d Bus %d ID %d LUN %d.	
dptDevSmartFailedTrap SMART failure reported.	308	MAJOR	SMART failure on controller %d Bus %d ID %d LUN %d reported.	
dptHbaAuxVoltageChangeTrap Auxiliary voltage outside range on controller	309	MAJOR	An auxiliary voltage status is now %d on controller %d	
dptHbaVoltageChange2Trap 5V Voltage outside range on controller	310	MAJOR	5V Voltage status is now %s on controller %d	
dptHbaAuxVoltageChange2Trap Auxiliary voltage outside range on controller	311	MAJOR	An auxiliary voltage status is now %s on controller %d	
dptHbaEccRAMErrorCorrectedTrap ECC RAM Error detected and corrected.	200	MINOR	Correctable ECC RAM Error detected on controller %d	

表 : ADAPTECDURALINK-MIB ト ラッ プ (ENTERPRISE : enterprises.1597)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
dptDevBlockReassignedTrap Disk block was reassigned	201	MINOR	Block %d reassigned: Controller %d Bus %d ID %d LUN %d	
dptDevReqSenseErrorTrap Warning: request sense data received.	202	MINOR	Warning: Request sense data for controller %d Bus %d ID %d LUN %d.	
dptHbaVoltageNormalTrap Normal 5V voltage on controller	100	INFORMATIONAL	Normal 5V voltage restored on controller %d	
dptHbaTemperatureNormalTrap Normal temperature on controller	101	INFORMATIONAL	Normal temperature restored on controller %d	
dptHbaEccRAMErrorNotFoundTrap ECC RAM Error detected but not found on correction.	102	INFORMATIONAL	ECC RAM Error detected at %d on controller %d, but not found.	
dptDevStatusChangedTrap Device status change	103	INFORMATIONAL	Device status on Controller %d Bus %d ID %d LUN %d : %d.	
dptDevReqSenseTrap Request sense received from controller.	104	INFORMATIONAL	Request sense data for controller %d Bus %d ID %d LUN %d.	
dptArrayChangeTrap Array change.	105	INFORMATIONAL	Array change on controller %d Bus %d ID %d LUN %d.	
dptBatteryChangeTrap Battery status change.	106	INFORMATIONAL	Battery status is now %d on controller %d.	
dptHbaAuxVoltageNormalTrap Normal auxiliary voltage on controller	107	INFORMATIONAL	Normal auxiliary voltage restored on controller %d	
dptHbaNoSparesTrap No hot spares detected on controller	108	INFORMATIONAL	No available hot spares were detected during a scan on controller %d	
dptDevStatusChanged2Trap Device status change	109	INFORMATIONAL	Device status on Controller %d Bus %d ID %d LUN %d : %s.	
dptBatteryChange2Trap Battery status change.	110	INFORMATIONAL	Battery status is now %s on controller %d.	
dptOtherTrap Controller generated an event	14	INFORMATIONAL	Controller generated event: %s	

B.16 MYLEXRAID-MIB (Mlxraid.mib)

Mylex Disk Array Controller からのト ラッ プです。 詳細については RAID コントローラ (RAID Manager (GAM : Global Array Manager)) の説明書を参照してください。

B.17 MYLEXRAID-FJ-MIB (Mlxraiddfj.mib)

Mylex Disk Array Controller からのト ラッ プです。 詳細については RAID コントローラ (RAID Manager (GAM : Global Array Manager)) の説明書を参照してください。

B.18 FASTTRAK-MIB (promisev1.mib)

Promise IDE RAID Adapter の トラブルです。詳細については RAID コントローラ (RAID Manager (FastCheckMonitor)) の説明書を参照してください。

表 : FASTTRAK-MIB トラブル (ENTERPRISE : enterprises.7933.2.12)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
trpUnknown Unknown - possibly new driver error code	1	INFORMA TIONAL	Unknown	
trpEccError ECC Error on Disk <name> LBA <lba>	2	CRITICAL	ECC Error on Disk	
trpDiskDown Disk Down <disk_name>	3	MAJOR	Disk Set Down by Driver	
trpDiskOffline Disk Offline <disk_name>	4	MAJOR	Disk %d of array %d set offline by driver. Description: %d	
trpDiskPlugin Disk Plugin <disk_name>	5	MINOR	New Disk Plugged In	
trpAryBadSector Array <num> had BadSector at LBA <lba>	6	INFORMA TIONAL	Bad sector encountered	
trpRebuildStart Rebuild Started Array <array> disk <disk>	7	INFORMA TIONAL	Rebuild started	
trpSyncStart Synchronization Started, Array <array>	8	INFORMA TIONAL	Synchronization Started	
trpRetryDisk Retry Disk Task, disk <disk> lba <lba>	9	MINOR	Retry Disk Task	
trpArrayOffline Array Offline <array>	10	MAJOR	Array Offline	
trpArrayCritical Array Critical <array>	11	CRITICAL	Array Critical	
trpArrayRebuildComplete Rebuild Completed, Array <array>, disk <disk>	12	INFORMA TIONAL	Rebuild Completed	
trpArraySyncComplete Sync Completed, array <array>	13	INFORMA TIONAL	Synchronization Completed	
trpMediaError Array <array>, disk <disk> has Media Error at LBA <lba>, cmd=<cmd>, status=<status>	14	CRITICAL	Media Error on Disk	
trpReserveSectorError Reserved Sector Error, Disk <disk> lba <lba>	15	MINOR	Reserved Sector Error	
trpRebuildAborted Rebuild Aborted, Array <array>, disk <disk>, percent <percent>	16	CRITICAL	Rebuild Aborted	

表 : FASTTRAK-MIB ト ラッ プ (ENTERPRISE : enterprises.7933.2.12)

TRAP-TYPE／ アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
trpSyncAborted Synchronization Aborted, array <array>, percent <percent>	17	CRITICAL	Sync. Aborted	
trpECCFixFail ECC Fix Failed	18	CRITICAL	ECC Fix Failed	
trpSyncCompError Sync Compare Error, Array <array>, LBA= <lba>	19	MINOR	Sync. Compare Error	
trpSwapBoxPowerDown Swap Box Power Down, channel <ch>, msl <msl>	20	INFORMA TIONAL	Swap Box Power Down	
trpSwapBoxPowerUp Swap Box Power Up, channel <ch>, msl <msl>	21	INFORMA TIONAL	Swap Box Power Up	
trpSwapBoxBadSwap Swap Box, Bad Swap, channel <ch>, msl <msl>	22	MINOR	Swap Box, Bad Swap	
trpSwapBoxOverTemp Swap Box, Over Temp, channel <ch>, msl <msl>, Temp <fahr>, C <cent>	23	MINOR	Swap Box Over Temp	
trpSwapBoxFanStopped Swap Box Fan Stop, channel <ch>, msl <msl>, RPM= <rpm>	24	MINOR	Swap Box Fan Stop	
trpSwapBox12VOutOfRange Swap Box, 12V Out of Range, channel <ch>, msl <msl>, 12V=<volts>	25	MINOR	12V Out of Range	
trpSwapBox5VOutOfRange Swap Box, 5V Out of Range, channel <ch>, msl <msl>, 5V=<volts>	26	MINOR	5V Out of Range	

B.19 PROMISE-UNIFIED-MIB (promiseraid.mib)

Promise FastTrak SATA RAID Adapter の トラブルです。 詳細については RAID コントローラ (RAID Manager (PAM : Promise Array Management)) の説明書を参照してください。

表 : PROMISE-UNIFIED-MIB トラブル (ENTERPRISE : enterprises.7933.2.12)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
trpDiskOffline Disk offline	1	CRITICAL	Disk Offline: %s	
trpDiskPlugin New disk plugged in	2	INFORMATIONAL	New Disk Plugged In: %s	
trpDiskMediaError Media error on disk	3	MAJOR	Disk Media Error: %s	
trpDiskSMARTFail SMART error on disk	4	MAJOR	Disk SMART Fail: %s	
trpDiskAccessRetry Disk retry	5	INFORMATIONAL	Retry Disk Access: %s	
trpDiskECCError Disk ECC Error	6	MAJOR	ECC Error on Disk: %s	
trpDiskTimeOut Disk timed out	7	MAJOR	Disk Time Out: %s	
trpDiskBadSector Bad sector on array	8	CRITICAL	Bad sector encountered on array: %s	
trpArrayMediaError Array Media Error	9	CRITICAL	Array has a read/write error: %s	
trpArrayOffline Array offline	10	CRITICAL	Array offline: %s	
trpArrayCritical Array critical	11	MAJOR	Array critical: %s	
trpArrayCreate Array creation	12	INFORMATIONAL	Create array: %s	
trpArrayDelete Array deletion	13	MAJOR	Delete array: %s	
trpArrayRebuildStart Rebuild started	14	INFORMATIONAL	Rebuild started on array: %s	
trpArrayAutoRebuildStart Automatic rebuild started	15	INFORMATIONAL	Automatic Rebuild started on array: %s	
trpArrayRebuildAborted Rebuild aborted on array	16	MAJOR	Rebuild aborted on array: %s	
trpArrayRebuildPaused Rebuild paused on array	17	MAJOR	Rebuild paused on array: %s	
trpArrayRebuildResumed Rebuild resumed on array	18	INFORMATIONAL	Rebuild resumed on array: %s	
trpArrayRebuildCompleted Rebuild successfully completed	19	INFORMATIONAL	Rebuild completed on array: %s	
trpArrayRebuildFailed Rebuild failed	20	INFORMATIONAL	Rebuild failed on array: %s	
trpArraySyncStarted Synchronization started on array	21	INFORMATIONAL	Synchronization started on array: %s	

表 : PROMISE-UNIFIED-MIB トラップ (ENTERPRISE : enterprises.7933.2.12)

TRAP-TYPE／ アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
trpArraySyncAborted Synchronization aborted on array	22	INFORMATIONAL	Synchronization aborted on array: %s	
trpArraySyncPaused Synchronization paused on array	23	INFORMATIONAL	Synchronization paused on array: %s	
trpArraySyncResumed Synchronization resumed on array	24	INFORMATIONAL	Synchronization resumed on array: %s	
trpArraySyncCompleted Synchronization successfully completed on array	25	INFORMATIONAL	Synchronization completed on array: %s	
trpArraySyncFailed Synchronization failed on array	26	CRITICAL	Synchronization failed on array: %s	
trpSyncComparisonError Synchronization comparison error on array	27	CRITICAL	Synchronization comparison error on array: %s	
trpSwapBoxOverTemp Temperature is too high for enclosure	28	MAJOR	Swap Box Over Temp on enclosure: %s	
trpSwapBoxFanStop Fan stopped for enclosure	29	MAJOR	Swap Box Fan Stop: %s	
trpSwapBox5VOutOfRange 5V over/under threshold for enclosure	30	MAJOR	5V Out of Range for array: %s	
trpSwapBox12VOutOfRange 12V over/under threshold for enclosure	31	MAJOR	12V Out of Range for array: %s	
trpSwapBoxPowerUp Enclosure power on	32	INFORMATIONAL	Swap Box Power On: %s	
trpSwapBoxPowerDown Enclosure power off	33	INFORMATIONAL	Swap Box Power Off: %s	
trpUnknown Unknown - possibly new driver error code	34	INFORMATIONAL	Unknown	
trpBatteryTempOutOfRange Battery Temperature Out of Range	35	MAJOR	The battery's temperature is out of range	
trpBatteryUnstableTemp Battery Temperature Unstable	36	MAJOR	The battery's temperature is unstable	
trpBatteryVoltOutOfRange Battery Voltage Out of Range	37	MAJOR	The battery's voltage is out of range	
trpBatteryUnstableVolt Battery Voltage Unstable	38	MAJOR	The battery's voltage is unstable	
trpBatteryCommError Battery Communication Error	39	MAJOR	There is a communication error in the battery	
trpBatteryBecomeNormal Battery Communication Error	40	INFORMATIONAL	The battery status becomes normal	
trpWriteModeChange Write Mode Change/Toggle	41	INFORMATIONAL	Write Mode state changed	
trpDiskErrorFix Disk error fixed	42	INFORMATIONAL	Disk error fixed by entity	

表 : PROMISE-UNIFIED-MIB トラブル (ENTERPRISE : enterprises.7933.2.12)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
trpMediaPatrolStart Media Patrol	43	INFORMATIONAL	Media patrol started	
trpMediaPatrolStop Media Patrol	44	INFORMATIONAL	Media patrol stopped	
trpMediaPatrolAbort Media Patrol	45	CRITICAL	Media patrol aborted	
trpMediaPatrolComplete Media Patrol	46	INFORMATIONAL	Media patrol completed	
trpMediaPatrolPause Media Patrol	47	INFORMATIONAL	Media patrol paused	
trpMediaPatrolResume Media Patrol	48	INFORMATIONAL	Media patrol resumed	

B.20 RAID-Adapter-MIB (megaraid.mib)

MegaRAID SCSI 320-2 のトラブルです。詳細については RAID コントローラ (RAID Manager (Global Array Manager)) の説明書を参照してください。

表 : RAID-Adapter-MIB トラブル (ENTERPRISE : enterprises.16.1.1.200)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
rtConfigUpdated RAID Trap: Configuration Updated	9001	INFORMATIONAL	Host Adapter-%d: A New Configuration has been written. Host Adapter-%d: 新しい設定が書き込まれた。	
rtPhysicalDriveStateChange RAID Trap: Physical Drive State Change	9002	INFORMATIONAL	Adapter-%d, Channel-%d, Target-%d: Drive State Changed from %s to %s. Adapter-%d, Channel-%d, Target-%d: ドライブの状態が、%s から %s に変化した。	
rtLogicalDriveStateChange RAID Trap: Logical Drive State Change	9003	INFORMATIONAL	Adapter-%d, Logical Drive-%d: State Changed from %s to %s. Adapter-%d, Logical Drive-%d: 状態が、%s から %s に変化した。	
rtInitializeStarted RAID Trap: Initialize Started	9004	INFORMATIONAL	Adapter-%d, Logical Drive-%d: Initialization Started. Adapter-%d, Logical Drive-%d: 初期化を開始した。	
rtInitializeCompleted RAID Trap: Initialize Completed	9005	INFORMATIONAL	Adapter-%d, Logical Drive-%d: Initialization Completed Successfully. Adapter-%d, Logical Drive-%d: 初期化が完了した。	
rtInitializeAborted RAID Trap: Initialize Aborted	9006	INFORMATIONAL	Adapter-%d, Logical Drive-%d: Initialization Aborted by User. Adapter-%d, Logical Drive-%d: ユーザにより初期化が中断された。	
rtInitializeFailed RAID Trap: Initialize Failed	9007	INFORMATIONAL	Adapter-%d, Logical Drive-%d: Initialization Failed. Adapter-%d, Logical Drive-%d: 初期化に失敗した。	

表 : RAID-Adapter-MIB トラップ (ENTERPRISE : enterprises.16.1.1.200)

TRAP-TYPE / アラームタイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
rtCheckConsistencyStarted RAID Trap: Check Consistency Started	9008	INFORMATIONAL	Adapter-%d, Logical Drive-%d: Check Consistency Started. Adapter-%d, Logical Drive-%d: 一貫性検査を開始した。	
rtCheckConsistencyCompleted RAID Trap: Check Consistency Completed	9009	INFORMATIONAL	Adapter-%d, Logical Drive-%d: Check Consistency Completed. No Inconsistencies Found. Adapter-%d, Logical Drive-%d: 一貫性検査が完了した。不整合はありませんでした。	
rtCheckConsistencyAborted RAID Trap: Check Consistency Aborted	9010	INFORMATIONAL	Adapter-%d, Logical Drive-%d: Check Consistency Aborted by User. Adapter-%d, Logical Drive-%d: ユーザにより一貫性検査が中断された。	
rtConsistencyCorrected RAID Trap: Check Consistency Corrected	9011	INFORMATIONAL	Adapter-%d, Logical Drive-%d: Check Consistency Operation Completed. Inconsistencies have been Cured. Adapter-%d, Logical Drive-%d: 一貫性検査オペレーションが完了した。不整合が修正された。	
rtCheckConsistencyFailed RAID Trap: Check Consistency Failed	9012	INFORMATIONAL	Adapter-%d, Logical Drive-%d: Check Consistency Failed. Adapter-%d, Logical Drive-%d: 一貫性検査に失敗した。	
rtReconstructionStarted RAID Trap: Reconstruction Started	9013	INFORMATIONAL	Adapter-%d, Logical Drive-%d: Reconstruction Started. Adapter-%d, Logical Drive-%d: 再構築を開始した。	
rtReconstructionCompleted RAID Trap: Reconstruction Completed	9014	INFORMATIONAL	Adapter-%d, Logical Drive-%d: Reconstruction Completed Successfully. Adapter-%d, Logical Drive-%d: 再構築が完了した。	
rtReconstructionFailed RAID Trap: Reconstruction Failed	9015	INFORMATIONAL	Adapter-%d, Logical Drive-%d: Reconstruction Failed. Adapter-%d, Logical Drive-%d: 再構築に失敗した。	
rtPredictiveFailuresExceeded RAID Trap: Physical Drive Failure Prediction Threshold Exceeded	9016	INFORMATIONAL	Adapter-%d, Channel-%d, Target-%d: Reported Predictive Failure. (Failure Threshold Exceeded) Drive Identification String = %s Sense Key = 0x%x, ASC = 0x%x, ASCQ = 0x%x. Adapter-%d, Channel-%d, Target-%d: 故障予兆が報告された。 (Failure Threshold Exceeded) ドライブ識別子 = %s Sense Key = 0x%x, ASC = 0x%x, ASCQ = 0x%x.	

表 : RAID-Adapter-MIB トラブル (ENTERPRISE : enterprises.16.1.1.200)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
rtPredictiveFailuresFalse RAID Trap: Physical Drive Predictive Failures [FALSE]	9017	INFORMATIONAL	Adapter-%d, Channel-%d, Target-%d: Reported Predictive Failure. (Failure Prediction Threshold Exceeded [FALSE]) Drive Identification String = %s Sense Key = 0x%x, ASC = 0x%x, ASCQ = 0x%x. Adapter-%d, Channel-%d, Target-%d: 故障予兆が報告された。(Failure Prediction Threshold Exceeded [FALSE]) ドライブ識別子 = %s Sense Key = 0x%x, ASC = 0x%x, ASCQ = 0x%x.	
rtCheckConditionStatus RAID Trap: Physical Drive Check Conditions	9018	INFORMATIONAL	Adapter-%d, Channel-%d, Target-%d: Command Completed with Sense_Key-0x%x ASC-0x%x ASCQ-0x%x. Adapter-%d, Channel-%d, Target-%d: Sense_Key-0x%x ASC-0x%x ASCQ-0x%x でコマンドが完了した。	
rtNewDriveInserted RAID Trap: New Drive Inserted	9019	INFORMATIONAL	Adapter-%d, Channel-%d, Target-%d: New Device Inserted. Adapter-%d, Channel-%d, Target-%d: 新しいデバイスが挿入された。	
rtBatteryMissing RAID Trap: Battery Missing	9020	INFORMATIONAL	Adapter-%d: Battery Module is missing. Adapter-%d: Battery Module が搭載されていない。	
rtBatteryVoltageLow RAID Trap: Battery Voltage Low	9021	INFORMATIONAL	Adapter-%d: Battery Module Voltage is Low. Adapter-%d: Battery Module の電圧が低下した。	
rtBatteryTemperatureHigh RAID Trap: Battery Temperature High	9022	INFORMATIONAL	Adapter-%d: Battery Module Temperature Exceeded Danger Threshold. Adapter-%d: Battery Module の温度が危険域を超えた。	

B.21 UPSMAN (Upsman.mib)

NetpowerView F からのトラブルです。詳細については NetpowerView F 説明書を参照してください。

表 : UPSMAN トラブル (ENTERPRISE : enterprises.1356)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
communicationLost UPS: Communication failure	1	CRITICAL	Communication with the UPS has been lost. UPS との通信が切断されました。	エージェントと UPS 間の通信が異常。
upsOverload UPS: UPS overload	2	CRITICAL	The UPS has sensed a load greater than 100 percent of its rated capacity. UPS が定格容量の 100% を超える負荷を感じました。	UPS の出力過負荷状態。

表 : UPSMAN トラブル (ENTERPRISE : enterprises.1356)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
upsTurnedOff UPS: Switching off	3	MAJOR	The UPS is being switched off by a management station. マネージメントステーションにより UPS の電源が切断されます。	UPS の出力停止。
communicationEstablished UPS: Communication established	4	INFORMATIONAL	Communication with the UPS has been established. UPS との通信を確立しました。	エージェントと UPS 間の通信異常からの回復。
powerRestored UPS: power restored	5	INFORMATIONAL	Normal power has been restored to the UPS. UPS の通常電源が回復しました。	UPS への入力電圧が仕様範囲外から復帰した。
upsOnBattery UPS: On battery	6	MAJOR	The UPS system has switched to battery backup power. UPS システムがバッテリバックアップ電源に切り替わりました。	UPS は、バックアップ運転中。 このトラブルは、UPS が停止するか、又は、バックアップ運転が解除されるまで1分間隔で送信される。
testStarted UPS: Test started	7	INFORMATIONAL	UPS test has been started. UPS テストが開始されました。	UPS テスト開始を通知する。
testCompleted UPS: Test completed	8	INFORMATIONAL	UPS test has been completed. UPS テストが完了しました。	UPS テスト完了を通知する。
upsBatteryLow UPS: Battery Low	9	MAJOR	UPS Battery Low. UPS バッテリーが低下しました。	バッテリ容量の低下 upsBatteryStatus 参照。 繰返し値は、upsConfigIntervalTrapTime による。
upsShutdownImminent UPS: Shutdown Imminent	10	INFORMATIONAL	UPS Shutdown Imminent. UPS Shutdown が開始されます。	サーバシャットダウンの1分前を通知する。
upsmanStarted UPS: UpsMan service started	11	INFORMATIONAL	UpsMan service started. UpsMan がサービスを開始しました。	サービスの開始。
upsmanTrapInputBad UPS: Abnormal input condition	12	MAJOR	Abnormal input condition 入力コンディションが異常です。	UPS への入力電圧が仕様範囲外である。
upsmanTrapOutputOverloadRemoved UPS: Overload Removed	13	INFORMATIONAL	Overload Removed 過負荷状態から回復した。	UPS の出力の過負荷状態からの回復。
upsmanTrapBatteryBad UPS: Bad battery	14	MAJOR	Bad battery バッテリー異常です。	バッテリの交換が必要。
upsmanTrapTempBad UPS: Bad temperature	15	MAJOR	Bad temperature 温度異常です。	温度が仕様範囲外。 温度異常の発生場所は、特定しなくてもよい。 温度異常内容の詳細情報は upsAlarmTempBadDetail を参照することによって得られる。
upsmanTrapTempBadRemoved UPS: Bad temperatureRemove	16	INFORMATIONAL	Bad temperatureRemove 温度異常から回復した。	温度の仕様範囲外からの回復。

表 : UPSMAN トラブル (ENTERPRISE : enterprises.1356)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
upsmanTrapFatalFault UPS: Fatal fault	17	CRITICAL	Fatal fault 重故障が発生した。	UPS に重故障発生。 UPS にバックアップ運転が不可能となる重故障が発生した時に通知する。

B.22 UPS-MIB (RFC1628.mib)

NetpowerView F からのトラブルです。詳細については NetpowerView F 説明書を参照してください。

表 : UPS-MIB トラブル (ENTERPRISE : mib2.33.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
upsTrapOnBattery UPS on Battery	1	CRITICAL	The UPS is on battery power since %d seconds	
upsTrapTestCompleted UPS Test Completed	2	INFORMATIONAL	This trap is sent upon completion of a UPS diagnostic test.	
upsTrapAlarmEntryAdded UPS Alarm Entry Added	3	INFORMATIONAL	This trap is sent each time an alarm is inserted into to the alarm table. It is sent on the insertion of all alarms except for upsAlarmOnBattery and upsAlarmTestInProgress.	
upsTrapAlarmEntryRemoved UPS Alarm Entry Removed	4	INFORMATIONAL	This trap is sent each time an alarm is removed from the alarm table. It is sent on the removal of all alarms except for upsAlarmTestInProgress.	

B.23 PowerNet-MIB (powernet.mib)

APC 社製 UPS Web カードからのトラブルです。詳細については APC 社製 UPS 説明書を参照してください。

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
communicationLost APC UPS: Communication failure	1	CRITICAL	Communication lost between the agent and the UPS.	
upsOverload APC UPS: UPS overload	2	CRITICAL	The UPS has sensed a load greater than 100 percent of its rated capacity.	
upsDiagnosticsFailed APC UPS: Failed self-test	3	CRITICAL	The UPS has failed its internal self-test.	
upsDischarged APC UPS: batteries are discharged	4	CRITICAL	The UPS batteries are discharged.	
upsOnBattery APC UPS: On battery	5	MAJOR	The UPS is now providing battery backup power.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
smartBoostOn APC UPS: SmartBoost	6	MINOR	The UPS has enabled SmartBoost.	
lowBattery APC UPS: Low battery	7	CRITICAL	The UPS system's batteries are low and will soon be exhausted.	
communicationEstablished APC UPS: Communication established	8	INFORMATIONAL	Communication established between the agent and the UPS.	
powerRestored APC UPS: Utility restored	9	INFORMATIONAL	Normal power has been restored to the UPS.	
upsDiagnosticsPassed APC UPS: Passed self-test	10	INFORMATIONAL	The UPS has passed its internal self-test.	
returnFromLowBattery APC UPS: Battery normal	11	INFORMATIONAL	The UPS has returned from a low battery condition.	
upsTurnedOff APC UPS: Switching off	12	MAJOR	The UPS is being switched off by a management station.	
upsSleeping APC UPS: Going to sleep	13	MAJOR	The UPS is going into sleep mode.	
upsWokeUp APC UPS: Wake up	14	INFORMATIONAL	The UPS has returned from sleep mode.	
upsRebootStarted APC UPS: Starting reboot	15	MAJOR	The UPS has started its reboot sequence.	
upsDipSwitchChanged APC UPS: DIP switch altered	16	MINOR	The DIP switch settings on the UPS have been changed.	
upsBatteryNeedsReplacement APC UPS: UPS batteries needs replacement	17	CRITICAL	The UPS batteries require immediate replacement.	
contactFault APC M-UPS: Contact fault	18	CRITICAL	A Measure-UPS contact closure has faulted.	
contactFaultResolved APC M-UPS: Contact normal	19	INFORMATIONAL	A Measure-UPS contact closure has returned to its default state.	
hardwareFailureBypass APC UPS: On bypass due to internal fault	20	CRITICAL	The UPS is on bypass due to an internal fault.	
softwareBypass APC UPS: On bypass by user via software or panel	21	MINOR	UPS put on bypass by user via software or front UPS panel.	
switchedBypass APC UPS: On bypass initiated by user	22	MINOR	UPS put on bypass by user.	
returnFromBypass APC UPS: UPS has returned from bypass	23	INFORMATIONAL	The UPS has returned from bypass mode.	
bypassPowerSupplyFailure APC UPS: Base module bypass power supply needs repair	24	CRITICAL	The base module bypass power supply needs repair.	
baseFanFailure APC UPS: Base module fan needs repair	25	CRITICAL	The base module fan needs repair.	
batteryPackCommLost APC UPS: Communication lost with battery packs	26	MINOR	Communication lost with external battery packs, check battery signal cable.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
batteryPackCommEstablished APC UPS: Communication established with battery packs	27	INFORMATIONAL	Communication established with external battery packs.	
calibrationStart APC UPS: Calibration initiated	28	INFORMATIONAL	A battery run time calibration test has been initiated.	
restartAgent APC SNMP Agent: Agent restarting	29	INFORMATIONAL	Agent restarting as commanded by manager.	
upsTurnedOn APC UPS: A UPS is turned on.	30	INFORMATIONAL	A UPS is turned on.	
smartAvrReducing APC UPS: Smart-AVR reducing	31	MINOR	The UPS has enabled Smart-AVR voltage reduction.	
codeAuthenticationDone APC CODE: Authentication on agent code image is done.	32	INFORMATIONAL	Authentication on agent code image is done.	
upsOverloadCleared APC UPS: Overload cleared.	33	MINOR	The overload condition has been cleared.	
smartBoostOff APC UPS: Smartboost off.	34	MINOR	The UPS has returned from smartboost.	
smartAvrReducingOff APC UPS: Smart-AVR reducing off	35	MINOR	The UPS has returned from Smart-AVR voltage reduction.	
upsBatteryReplaced APC UPS: Bad battery replaced	36	MINOR	The UPS has returned from a bad battery fault.	
calibrationEnd APC UPS: Calibration end	37	MINOR	The UPS has finished calibrating	
dischargeCleared APC UPS: Discharge cleared.	38	MINOR	The UPS discharge condition has been cleared.	
gracefullShutdown APC UPS: A gracefull shutdown has been initiated.	39	MINOR	A gracefull shutdown has been initiated.	
outletOn APC PDU: State change.	41	WARNING	An OUTLET has been turned on	
outletOff APC PDU: State change.	42	WARNING	An OUTLET has turned off.	
outletReboot APC PDU: State change.	43	WARNING	An OUTLET has rebooted.	
configChangeSNMP APC: State change.	44	WARNING	The SNMP configuration has been changed.	
configChangeOutlet APC PDU: State change.	45	WARNING	An outlet configuration has been changed.	
accessViolationConsole APC: Access violation.	46	WARNING	Three unsuccessful logins have been attempted.	
accessViolationHTTP APC: Access violation.	47	WARNING	An unsuccessful attempt to login via HTTP.	
passwordChange APC: Password change.	48	WARNING	Someone has changed the password on the PDU.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
badVoltage APC UPS: Bad output voltage.	49	WARNING	The output voltage is not within acceptable range.	
badVoltageCleared APC UPS: The bad voltage output condition has been cleared.	50	INFORMATIONAL	The output voltage has returned to an acceptable level.	
chargerFailure APC UPS: The battery charger has failed.	51	WARNING	The battery charger has failed.	
chargerFailureCleared APC UPS: The battery charger failure condition has been cleared.	52	INFORMATIONAL	The battery charger failure condition has been cleared.	
batteryOverTemperature APC UPS: The battery temperature threshold has been violated.	53	WARNING	The battery temperature threshold has been violated.	
batteryOverTemperatureCleared APC UPS: The battery over temperature has been cleared.	54	INFORMATIONAL	The battery over temperature has been cleared.	
smartRelayFault APC UPS: SmartBoost(TM) or SmartTrim(TM) relay fault.	55	WARNING	SmartBoost(TM) or SmartTrim(TM) relay fault.	
smartRelayFaultCleared APC UPS: SmartBoost(TM) or SmartTrim(TM) relay fault has been cleared.	56	INFORMATIONAL	SmartBoost(TM) or SmartTrim(TM) relay fault has been cleared.	
humidityThresholdViolation1 APC UPS: Probe 1 humidity threshold violated.	57	WARNING	Probe 1 humidity threshold violated.	
humidityThresholdViolationCleared1 APC MEASURE-UPS: A humidity threshold violation has been cleared on probe 1.	58	INFORMATIONAL	A humidity threshold violation has been cleared on probe 1.	
temperatureThresholdViolation1 APC MEASURE-UPS: A temperature threshold has been violated on probe 1.	59	CRITICAL	A temperature threshold has been violated on probe 1.	
temperatureThresholdViolationCleared1 APC MEASURE-UPS: A temperature threshold violation has been cleared on probe 1.	60	MINOR	A temperature threshold violation has been cleared on probe 1.	
humidityThresholdViolation2 APC MEASURE-UPS: A humidity threshold has been violated on probe 2.	61	CRITICAL	A humidity threshold has been violated on probe 2.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
humidityThresholdViolationCleared2 APC MEASURE-UPS: A humiditythreshold violation has been cleared on probe 2.	62	INFORMATIONAL	A humidity threshold violation has been cleared on probe 2.	
temperatureThresholdViolatio n2 APC MEASURE-UPS: A temperature threshold has been violated on probe 2.	63	CRITICAL	A temperature threshold has been violated on probe 2.	
temperatureThresholdViolatio nCleared2 APC MEASURE-UPS: A temperature threshold violation has been cleared on probe 2.	64	INFORMATIONAL	A tempreature threshold violation has been cleared on probe 2.	
mupsCommunicationEstablish ed APC MUPS: Communication established with the Measure-UPS	65	INFORMATIONAL	Communication established between the agent and the MUPS.	
mupsCommunicationLost APC MUPS: MUPS Communication failure	66	CRITICAL	Communication lost between the agent and the MUPS.	
batteryIncrease APC UPS: The number of batteries has increased.	67	INFORMATIONAL	The number of batteries has increased.	
batteryDecrease APC UPS: The number of batteries has decreased.	68	INFORMATIONAL	The number of batteries has decreased.	
powerModuleIncrease APC UPS: The number of power modules has increased.	69	INFORMATIONAL	The number of power modules has increased.	
powerModuleDecrease APC UPS: The number of power modules has decreased.	70	INFORMATIONAL	The number of power modules has decreased.	
intelligenceModuleInserted APC UPS: An intelligence module has been inserted.	71	INFORMATIONAL	An intelligence module has been inserted.	
intelligenceModuleRemoved APC UPS: An intelligence module has been removed.	72	INFORMATIONAL	An intelligence module has been removed.	
rintelligenceModuleInserted APC UPS: A redundant intelligence module has been inserted.	73	INFORMATIONAL	A redundant intelligence module has been inserted.	
rintelligenceModuleRemoved APC UPS: An redundant intelligence module has been removed.	74	INFORMATIONAL	An redundant intelligence module has been removed.	
extBatteryFrameIncease APC UPS: An external battery frame has been added.	75	INFORMATIONAL	An external battery frame has been added.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
extBatteryFrameDecrease APC UPS: An external battery frame has been removed.	76	INFORMATIONAL	An external battery frame has been removed.	
abnormalCondition APC UPS: An abnormal condition has been detected.	77	MAJOR	An abnormal condition has been detected.	
abnormalConditionCleared APC UPS: An abnormal condition has been cleared.	78	INFORMATIONAL	An abnormal condition has been cleared.	
deviceStatusChange APC : The status of the device being monitored has changed.	79	INFORMATIONAL	The status of the device being monitored has changed.	
noBatteries APC UPS: No batteries attached.	80	WARNING	The UPS has no batteries attached.	
noBatteriesCleared APC UPS: The no batteries attached condition has been cleared.	81	INFORMATIONAL	The UPS's batteries have been attached.	
userAdded APC: A new user has been added.	82	INFORMATIONAL	A new user has been added.	
userDeleted APC: A user has been deleted.	83	INFORMATIONAL	A user has been deleted.	
userModified APC: A user has been modified.	84	INFORMATIONAL	A user has been modified.	
msvmCommunicationEstablished APC: Communications with the MasterSwitch VM has been established.	85	INFORMATIONAL	Communications with the MasterSwitch VM has been established.	
msvmCommunicationLost APC: Communications with the MasterSwitch VM has been lost.	86	INFORMATIONAL	Communications with the MasterSwitch VM has been lost.	
msvmOverload APC: The MasterSwitch VM is near or at an overload condition.	87	INFORMATIONAL	The MasterSwitch VM is near or at an overload condition.	
msvmOverloadCleared APC: The overload condition on the MasterSwitch VM has been cleared.	88	INFORMATIONAL	The overload condition on the MasterSwitch VM has been cleared.	
msvmOutletOn APC: An outlet on the MasterSwitch VM has turned on.	89	INFORMATIONAL	An outlet on the MasterSwitch VM has turned on.	
msvmOutletOff APC: An outlet on the MasterSwitch VM has turned off.	90	INFORMATIONAL	An outlet on the MasterSwitch VM has turned off.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
msvmDeviceConfigChange APC: A device configuration change has been made on a MasterSwitch VM.	91	INFORMATIONAL	A device configuration change has been made on a MasterSwitch VM.	
msvmOutletConfigChange APC: An outlet configuration change has been made on a MasterSwitch VM.	92	INFORMATIONAL	An outlet configuration change has been made on a MasterSwitch VM.	
msvmLowLoad APC: The MasterSwitch VM has violated the low load threshold.	93	INFORMATIONAL	The MasterSwitch VM has violated the low load threshold.	
msvmLowLoadCleared APC: The low load condition on the MasterSwitch VM has been cleared.	94	INFORMATIONAL	The low load condition on the MasterSwitch VM has been cleared.	
msvmNearOverload APC: The MasterSwitch VM is near or at an overload condition.	95	INFORMATIONAL	The MasterSwitch VM is near or at an overload condition.	
msvmNearOverloadCleared APC: The overload condition on the MasterSwitch VM has been cleared.	96	INFORMATIONAL	The overload condition on the MasterSwitch VM has been cleared.	
msvmPowerSupplyStatusChange APC: The power supply status of the MasterSwitch VM has changed.	97	INFORMATIONAL	The power supply status of the MasterSwitch VM has changed.	
mspCommunicationEstablished APC: Communications with the MasterSwitch plus has been established.	98	INFORMATIONAL	Communications with the MasterSwitch plus has been established.	
mspCommunicationLost APC: Communications with the MasterSwitch plus has been lost.	99	INFORMATIONAL	Communications with the MasterSwitch plus has been lost.	
mspOutletOn APC: An outlet on the MasterSwitch plus has turned on.	100	INFORMATIONAL	An outlet on the MasterSwitch plus has turned on.	
mspOutletOff APC: An outlet on the MasterSwitch plus has turned off.	101	INFORMATIONAL	An outlet on the MasterSwitch plus has turned off.	
mspDeviceConfigChange APC: A device configuration change has been made on a MasterSwitch plus.	102	INFORMATIONAL	A device configuration change has been made on a MasterSwitch plus.	
mspOutletConfigChange APC: An outlet configuration change has been made on a MasterSwitch plus.	103	INFORMATIONAL	An outlet configuration change has been made on a MasterSwitch plus.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラームタイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
rsSourceSwitched APC Redundant Switch: The Redundant Switch has switched source.	104	INFORMATIONAL	The Redundant Switch has switched source.	
rsLostRedundancy APC Redundant Switch: The Redundant Switch has lost redundancy.	105	MAJOR	The Redundant Switch has lost redundancy.	
rsRedundancyRestored APC Redundant Switch: Redundancy has been restored to the Redundant Switch .	106	INFORMATIONAL	Redundancy has been restored to the Redundant Switch.	
rsConfigChange APC: A configuration change has been made on a Redundant Switch.	107	INFORMATIONAL	A configuration change has been made on a Redundant Switch.	
rsCommunicationEstablished APC: Communications with the Redundant Switch has been established.	108	INFORMATIONAL	Communications with the Redundant Switch has been established.	
rsCommunicationLost APC: Communications with the Redundant Switch has been lost.	109	CRITICAL	Communications with the Redundant Switch has been lost.	
dcCommunicationEstablished APC: Communications with the DC power plant has been established.	110	INFORMATIONAL	Communications with the DC power plant has been established.	
dcCommunicationLost APC: Communications with the DC power plant has been lost.	111	CRITICAL	Communications with the DC power plant has been lost.	
dcActivePINChanged APC: The active PIN on the DC controller has been changed.	112	INFORMATIONAL	The active PIN on the DC controller has been changed.	
dcMajorAlarm APC: A Major alarm is active in the DC power plant.	113	CRITICAL	A Major alarm is active in the DC power plant.	
dcMajorAlarmCleared APC: A Major alarm is no longer active in the DC power plant.	114	INFORMATIONAL	A Major alarm is no longer active in the DC power plant.	
dcMinorAlarm APC: A Minor alarm is active in the DC power plant.	115	INFORMATIONAL	A Minor alarm is active in the DC power plant.	
dcMinorAlarmCleared APC: A Minor alarm is no longer active in the DC power plant.	116	INFORMATIONAL	A Minor alarm is no longer active in the DC power plant.	
dcOutputRelayOn APC: An output relay has gone on.	117	INFORMATIONAL	An output relay has gone on in the DC power plant.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
dcOutputRelayOff APC: An output relay has gone off.	118	INFORMATIONAL	An output relay has gone off in the DC power plant.	
dcInputRelayOn APC: An input relay has gone on.	119	INFORMATIONAL	An input relay has gone on in the DC power plant.	
dcInputRelayOff APC: An input relay has gone off.	120	INFORMATIONAL	An input relay has gone off in the DC power plant.	
logicPowerSuppliesIncreased APC UPS: The number of system power supplies has increased.	121	INFORMATIONAL	The number of system power supplies has increased.	
logicPowerSuppliesDecreased APC UPS: The number of system power supplies has decreased.	122	INFORMATIONAL	The number of system power supplies has decreased.	
externalSwitchGearClosed APC UPS: External Switch Gear closed.	123	INFORMATIONAL	External Switch Gear closed.	
externalSwitchGearOpened APC UPS: External Switch Gear opened.	124	INFORMATIONAL	External Switch Gear opened.	
generalDeviceEvent APC Device event	125	INFORMATIONAL	APC Device event.	
atsSourceSwitched APC Automatic Transfer Switch: The ATS has switched source	126	INFORMATIONAL	The Automatic Transfer Switch has switched source.	
atsLostRedundancy APC Automatic Transfer Switch: The ATS has lost redundancy.	127	MAJOR	The Automatic Transfer Switch has lost redundancy.	
atsRedundancyRestored APC Automatic Transfer Switch: Redundancy has been restored.	128	INFORMATIONAL	Redundancy has been restored to the Automatic Transfer Switch.	
atsConfigChange APC Automatic Transfer Switch: ATS configuration changed.	129	INFORMATIONAL	A configuration change has been made on a Automatic Transfer Switch.	
atsCommunicationEstablished APC Automatic Transfer Switch: Communications established.	130	INFORMATIONAL	Communications with the Automatic Transfer Switch has been established.	
atsCommunicationLost APC Automatic Transfer Switch: Communications lost.	131	MAJOR	Communications with the Automatic Transfer Switch has been lost.	
atsOverCurrent APC Automatic Transfer Switch: Output Current exceeded threshold.	132	MAJOR	Output Current has exceeded Threshold.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラームタイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
atsOverCurrentCleared APC Automatic Transfer Switch: Output Current below threshold.	133	INFORMATIONAL	Output Current has returned below threshold.	
atsPowerSupplyFailure APC Automatic Transfer Switch: The ATS Power Supply has failed.	134	MAJOR	The Automatic Transfer Switch Power Supply has failed.	
atsPowerSupplyFailureCleared APC Automatic Transfer Switch: Power Supply Failure Cleared.	135	INFORMATIONAL	The Automatic Transfer Switch Power Supply Failure Cleared.	
dcMainsFailAlarm APC: A Mains Fail alarm is active in the DC power plant.	136	WARNING	A Mains Fail alarm is active in the DC power plant.	
dcMainsFailAlarmCleared APC: Mains Fail alarm is no longer active in the DC power plant.	137	INFORMATIONAL	Mains Fail alarm is no longer active in the DC power plant.	
dcFanFailAlarm APC: A Fan Fail alarm is active in the DC power plant.	138	WARNING	A Fan Fail alarm is active in the DC power plant.	
dcFanFailAlarmCleared APC: A Fan Fail alarm is no longer active in the DC power plant.	139	INFORMATIONAL	A Fan Fail alarm is no longer active in the DC power plant.	
dcRectifierOvertempAlarm APC: Rect. Overtemp alarm is active in the power plant.	140	WARNING	Rect. Overtemp alarm is active in the power plant.	
dcRectifierOvertempAlarmCleared APC: Rect. Overtmp alarm is no longer active in the power plant.	141	INFORMATIONAL	Rect. Overtmp alarm is no longer active in the power plant.	
dcCurrentLimitAlarm APC: A Current Limit alarm is active in the power plant.	142	WARNING	A Current Limit alarm is active in the power plant.	
dcCurrentLimitAlarmCleared APC: Current Limit alarm is no longer active in the power plant.	143	INFORMATIONAL	Current Limit alarm is no longer active in the power plant.	
dcRectifierFailAlarm APC: A Rect. Fail alarm is active in the power plant.	144	WARNING	A Rect. Fail alarm is active in the power plant.	
dcRectifierFailAlarmCleared APC: Rect. Fail alarm is no longer active in the power plant.	145	INFORMATIONAL	Rect. Fail alarm is no longer active in the power plant.	
dcMultRectFailAlarm APC: Multiple Rect. Fail alarm is active in the power plant.	146	WARNING	Multiple Rect. Fail alarm is active in the powerplant.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
dcMultRectFailAlarmCleared APC: Mult Rect Fail alarm is no longer active in the powerplant.	147	INFORMATIONAL	Mult Rect Fail alarm is no longer active in the powerplant.	
dcBatteryBreakerAlarm APC: Batt. Breaker alarm is active in the power plant.	148	WARNING	Batt. Breaker alarm is active in the power plant.	
dcBatteryBreakerAlarmCleared APC: Batt. Breaker alarm is no longer active in the power plant.	149	INFORMATIONAL	Batt. Breaker alarm is no longer active in the power plant.	
dcRectifierOVPAlarm APC: A Rect. OVP alarm is active in the power plant.	150	WARNING	A Rect. OVP alarm is active in the power plant.	
dcRectifierOVPAlarmCleared APC: A Rect. OVP alarm is no longer active in the power plant.	151	INFORMATIONAL	A Rect. OVP alarm is no longer active in the power plant.	
dcLVDImminentAlarm APC: A LVD Imminent alarm is active in the power plant.	152	WARNING	A LVD Imminent alarm is active in the powerplant.	
dcLVDImminentAlarmCleared APC: A LVD Imminent alarm is no longer active in the power plant.	153	INFORMATIONAL	A LVD Imminent alarm is no longer active in the powerplant.	
dcFuseCBAlarm APC: A Fuse/CB alarm alarm is active in the DC power plant.	154	WARNING	A Fuse/CB alarm is active in the DC power plant.	
dcFuseCBAlarmCleared APC: A Fuse/CB alarm is no longer active in the DC power plant.	155	INFORMATIONAL	A Fuse/CB alarm is no longer active in the DC power plant.	
dcBatteryTestFail APC: A Battery Test failed in the DC power plant.	156	WARNING	A Battery Test failed in the DC power plant.	
dcTemperatureAlarm APC: A Temperature alarm is active in the power plant.	157	WARNING	A Temperature alarm is active in the power plant.	
dcTemperatureAlarmCleared APC: A Temperature alarm is no longer active in the power plant.	158	INFORMATIONAL	A Temperature alarm is no longer active in the power plant.	
dcHumidityAlarm APC: A Humidity alarm is active in the DC power plant.	159	WARNING	A Humidity alarm is active in the DC power plant.	
dcHumidityAlarmCleared APC: A Humidity alarm is no longer active in the DC power plant.	160	INFORMATIONAL	A Humidity alarm is no longer active in the DC power plant.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
dcBBCCommunicationEstablished APC: Power plant bridging board communications established.	161	INFORMATIONAL	Power plant bridging board communications established.	
dcBBCCommunicationLost APC: Power plant bridging board communications lost.	162	MAJOR	Power plant bridging board communications lost.	
iemHighTempThresholdViolation APC IEM: High temperature threshold violation.	163	MAJOR	High temperature threshold violation.	
iemHighTempThresholdViolationCleared APC IEM: High temperature threshold violation cleared.	164	INFORMATIONAL	High temperature threshold violation has been cleared.	
iemLowTempThresholdViolation APC IEM: Low temperature threshold violation.	165	MAJOR	Low temperature threshold violation.	
iemLowTempThresholdViolationCleared APC IEM: Low temperature threshold violation cleared.	166	INFORMATIONAL	Low temperature threshold violation has been cleared.	
iemHighHumidThresholdViolation APC IEM: High humidity threshold violation.	167	MAJOR	High humidity threshold violation.	
iemHighHumidThresholdViolationCleared APC IEM: High humidity threshold violation cleared.	168	INFORMATIONAL	High humidity threshold violation has been cleared.	
iemLowHumidThresholdViolation APC IEM: Low humidity threshold violation.	169	MAJOR	Low humidity threshold violation.	
iemLowHumidThresholdViolationCleared APC IEM: Low humidity threshold violation cleared.	170	INFORMATIONAL	Low humidity threshold violation has been cleared.	
iemProbeDisconnected APC IEM: Probe disconnected.	171	WARNING	Probe has been disconnected.	
iemProbeConnected APC IEM: Probe Connected.	172	INFORMATIONAL	Probe has been connected.	
iemContactFault APC IEM: Contact fault.	173	MAJOR	Contact fault.	
iemContactFaultCleared APC IEM: Contact fault.	174	INFORMATIONAL	Contact fault cleared.	
iemRelayFault APC IEM: Output relay fault.	175	MAJOR	Output relay has faulted.	
iemRelayFaultCleared APC IEM: Output relay fault condition cleared.	176	INFORMATIONAL	Output relay fault cleared.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
bmBatManCommEstab BatMan : Communications Established.	177	INFORMATIONAL	Communications Established.	
bmBatManCommLost BatMan : Communications Lost.	178	MAJOR	Communications Lost.	
bmBatManKneeAlarm BatMan : Knee Alarm Detected.	179	MAJOR	Knee Alarm Detected.	
bmBatManKneeAlarmCleared BatMan : Knee Alarm Cleared.	180	INFORMATIONAL	Knee Alarm Cleared.	
bmBatManChargerAlarm BatMan : Charger Alarm Detected.	181	WARNING	Charger Alarm Detected.	
bmBatManChargerAlarmCleared BatMan : Charger Alarm Cleared.	182	INFORMATIONAL	Charger Alarm Cleared.	
bmBatManBatteryAlarm BatMan : Battery Alarm Detected.	183	WARNING	Battery Alarm Detected.	
bmBatManBatteryAlarmCleared BatMan : Battery Alarm Cleared.	184	INFORMATIONAL	Battery Alarm Cleared.	
bmBatManEnvironmentAlarm BatMan : Environment Alarm Detected.	185	WARNING	Environment Alarm Detected.	
bmBatManEnvironmentAlarmCleared BatMan : Environment Alarm Cleared.	186	INFORMATIONAL	Environment Alarm Cleared.	
bmBatManMaintenanceAlarm BatMan : Maintenance Due Alarm Detected.	187	INFORMATIONAL	Maintenance Due Alarm Detected.	
bmBatManMaintenanceAlarmCleared BatMan : Maintenance Due Alarm Cleared.	188	INFORMATIONAL	Maintenance Due Alarm Cleared.	
pduCommunicationEstablished APC PDU: Communication Established.	189	INFORMATIONAL	Communication Established.	
pduCommunicationLost APC PDU: Communication Lost.	190	MAJOR	Communication Lost.	
pduUtilityLineUndervoltage APC PDU: Utility Line Undervoltage.	191	MAJOR	Utility Line Undervoltage.	
pduUtilityLineUndervoltageCleared APC PDU: Utility Line Undervoltage Cleared.	192	INFORMATIONAL	Utility Line Undervoltage Cleared.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
pduUtilityLineOvervoltage APC PDU: Utility Line Overvoltage.	193	MAJOR	Utility Line Overvoltage.	
pduUtilityLineOvervoltageCleared APC PDU: Utility Line Overvoltage Cleared.	194	INFORMATIONAL	Utility Line Overvoltage Cleared.	
pduGroundOvercurrent APC PDU: Ground Overcurrent.	195	MAJOR	Ground Overcurrent.	
pduGroundOvercurrentCleared APC PDU: Ground Overcurrent Cleared.	196	INFORMATIONAL	Ground Overcurrent Cleared.	
pduCircuitPanelInputUndervoltage APC PDU: Circuit Panel Input Undervoltage.	197	MAJOR	Circuit Panel Input Undervoltage.	
pduCircuitPanelInputUndervoltageCleared APC PDU: Circuit Panel Input Undervoltage Cleared.	198	INFORMATIONAL	Circuit Panel Input Undervoltage Cleared.	
pduCircuitPanelInputOvervoltage APC PDU: Circuit Panel Input Overvoltage.	199	MAJOR	Circuit Panel Input Overvoltage.	
pduCircuitPanelInputOvervoltageCleared APC PDU: Circuit Panel Input Overvoltage Cleared.	200	INFORMATIONAL	Circuit Panel Input Overvoltage Cleared.	
pduCircuitPanelInputUndercurrent APC PDU: Circuit Panel Input Undercurrent.	201	MAJOR	Circuit Panel Input Undercurrent.	
pduCircuitPanelInputUndercurrentCleared APC PDU: Circuit Panel Input Undercurrent Cleared.	202	INFORMATIONAL	Circuit Panel Input Undercurrent Cleared.	
pduCircuitPanelInputOvercurrent APC PDU: Circuit Panel Input Overcurrent.	203	MAJOR	Circuit Panel Input Overcurrent.	
pduCircuitPanelInputOvercurrentCleared APC PDU: Circuit Panel Input Overcurrent Cleared.	204	INFORMATIONAL	Circuit Panel Input Overcurrent Cleared.	
pduCircuitPanelFrequencyOutOfRange APC PDU: Circuit Panel Input Frequency Out Of Range.	205	MAJOR	Circuit Panel Input Frequency Out Of Range.	
pduCircuitPanelFrequencyOutOfRangeCleared APC PDU: Circuit Panel Input Frequency No Longer Out Of Range.	206	INFORMATIONAL	Circuit Panel Input Frequency No Longer Out Of Range.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
pduCircuitPanelNeutralOvercurrent APC PDU: Circuit Panel Input Neutral Overcurrent.	207	MAJOR	Circuit Panel Input Neutral Overcurrent.	
pduCircuitPanelNeutralOvercurrentCleared APC PDU: Circuit Panel Input Neutral Overcurrent Cleared.	208	INFORMATIONAL	Circuit Panel Input Neutral Overcurrent Cleared.	
pduSystemOff APC PDU: System Off.	209	MAJOR	PDU System Off.	
pduOnBatteryMode APC PDU: On Battery Mode.	210	MAJOR	PDU is in On Battery Mode.	
pduMaintenanceBypassMode APC PDU: Maintenance Bypass Mode.	211	INFORMATIONAL	PDU is in Maintenance Bypass Mode.	
pduAtypicalBypassMode APC PDU: Atypical Bypass Mode.	212	WARNING	PDU is in Atypical Bypass Mode.	
pduNoPanelFeedMode APC PDU: No Panel Feed Mode.	213	MAJOR	PDU is in No Panel Feed Mode.	
pduUpsOperationMode APC PDU: Ups Operation Mode.	214	INFORMATIONAL	PDU is in Ups Operation Mode.	
pduForcedBypassMode APC PDU: Forced Bypass Mode.	215	WARNING	PDU is in Forced Bypass Mode.	
pduInputTransformerOverTemperature APC PDU: Input Transformer Over Temperature.	216	MAJOR	Input Transformer Over Temperature.	
pduInputTransformerOverTemperatureCleared APC PDU: Input Transformer Over Temperature Cleared.	217	INFORMATIONAL	Input Transformer Over Temperature Cleared.	
pduUPSInputVoltageLost APC PDU: UPS Input Voltage phase-N Lost.	218	MAJOR	UPS Input Voltage phase-N Lost.	
pduUPSInputVoltageRestored APC PDU: UPS Input Voltage phase-N Restored.	219	INFORMATIONAL	UPS Input Voltage phase-N Restored.	
pduContactFault APC PDU: Contact Abnormal.	220	MAJOR	Contact Abnormal.	
pduContactFaultCleared APC PDU: Contact Normal.	221	INFORMATIONAL	Contact Normal.	
rmPDUUndercurrent APC RM PDU: Undercurrent.	222	MAJOR	Undercurrent.	
rmPDUUndercurrentCleared APC RM PDU: Undercurrent Cleared.	223	INFORMATIONAL	Undercurrent Cleared.	
rmPDUOvercurrent APC RM PDU: Overcurrent.	224	MAJOR	Overcurrent.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE／ アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
rmPDUOvercurrentCleared APC RM PDU: Overcurrent Cleared.	225	INFORMATIONAL	Overcurrent Cleared.	
rmPDUOverload APC RM PDU: Overload.	226	MAJOR	Overload.	
rmPDUOverloadCleared APC RM PDU: Overload Cleared.	227	INFORMATIONAL	Overload Cleared.	
rmPDUCommunicationEstablished APC RM PDU: Communication Established.	228	INFORMATIONAL	Communication Established.	
rmPDUCommunicationLost APC RM PDU: Communication Lost.	229	MAJOR	Communication Lost.	
emsCommunicationEstablished APC EMS: Communication Established.	230	INFORMATIONAL	Communication Established.	
emsCommunicationLost APC EMS: Communication Lost.	231	MAJOR	Communication Lost.	
emsProbeConnected APC EMS: Probe Connected.	232	INFORMATIONAL	Probe Connected.	
emsProbeDisconnected APC EMS: Probe Disconnected.	233	MAJOR	Probe Disconnected.	
emsSensorConnected APC EMS: Sensor Connected.	234	INFORMATIONAL	Sensor Connected.	
emsSensorDisconnected APC EMS: Sensor Disconnected.	235	MAJOR	Sensor Disconnected.	
emsSensorFault APC EMS: Sensor Fault.	236	MAJOR	Sensor Fault.	
emsSensorFaultCleared APC EMS: Sensor Fault Cleared.	237	INFORMATIONAL	Sensor Fault Cleared.	
emsBeaconConnected APC EMS: Beacon Connected.	238	INFORMATIONAL	Beacon Connected.	
emsBeaconDisconnected APC EMS: Beacon Disconnected.	239	MAJOR	Beacon Disconnected.	
emsBeaconOn APC EMS: Beacon On.	240	INFORMATIONAL	Beacon On.	
emsBeaconOff APC EMS: Beacon Off.	241	INFORMATIONAL	Beacon Off.	
emsMajorAlarm APC EMS: Major Alarm.	242	MAJOR	Major Alarm.	
emsMajorAlarmCleared APC EMS: Major Alarm Cleared.	243	INFORMATIONAL	Major Alarm Cleared.	
emsMinorAlarm APC EMS: Minor Alarm.	244	MAJOR	Minor Alarm.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
emsMinorAlarmCleared APC EMS: Minor Alarm Cleared.	245	INFORMATIONAL	Minor Alarm Cleared.	
emsOutletStateAbnormal APC EMS: Outlet has changed to its abnormal state.	246	WARNING	Outlet has changed to its abnormal state.	
emsOutletStateNormal APC EMS: Outlet has changed to its normal state.	247	INFORMATIONAL	Outlet has changed to its normal state.	
emsInputContactStateAbnormal APC EMS: Input contact has changed to its abnormal state.	248	WARNING	Input contact has changed to its abnormal state.	
emsInputContactStateNormal APC EMS: Input contact has changed to its normal state.	249	INFORMATIONAL	Input contact has changed to its normal state.	
emsOutputRelayStateAbnormal APC EMS: Output Relay has changed to its abnormal state.	250	WARNING	Output Relay has changed to its abnormal state.	
emsOutputRelayStateNormal APC EMS: Output Relay has changed to its normal state.	251	INFORMATIONAL	Output Relay has changed to its normal state.	
emsDeviceConfigChange APC: A device configuration change on a EMS.	252	INFORMATIONAL	A device configuration change has been made on a EMS.	
envHighTempThresholdViolation APC ENV: High temperature threshold violation.	253	MAJOR	High temperature threshold violation.	
envHighTempThresholdViolationCleared APC ENV: High temperature threshold violation cleared.	254	INFORMATIONAL	High temperature threshold violation cleared.	
envLowTempThresholdViolation APC ENV: Low temperature threshold violation.	255	MAJOR	Low temperature threshold violation.	
envLowTempThresholdViolationCleared APC ENV: Low temperature threshold violation cleared.	256	INFORMATIONAL	Low temperature threshold violation cleared.	
envHighHumidityThresholdViolation APC ENV: High humidity threshold violation.	257	MAJOR	High humidity threshold violation.	
envHighHumidityThresholdViolationCleared APC ENV: High humidity threshold violation cleared.	258	INFORMATIONAL	High humidity threshold violation cleared.	
envLowHumidityThresholdViolation APC ENV: Low humidity threshold violation.	259	MAJOR	Low humidity threshold violation.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラームタイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
envLowHumidityThresholdViolationCleared APC ENV: Low humidity threshold violation cleared.	260	INFORMATIONAL	Low humidity threshold violation cleared.	
rPDUCommunicationEstablished APC Rack PDU: Communication established.	266	INFORMATIONAL	Communication with a Rack PDU established.	
rPDUCommunicationLost APC Rack PDU: Communication lost.	267	MAJOR	Communication with a Rack PDU has been lost.	
rPDUOutletOn APC Switched Rack PDU: An outlet has turned on.	268	INFORMATIONAL	An outlet on a Switched Rack PDU has turned on.	
rPDUOutletOff APC Switched Rack PDU: An outlet has turned off.	269	INFORMATIONAL	An outlet on a Switched Rack PDU has turned off.	
rPDUDeviceConfigChange APC Rack PDU: Device configuration change made.	270	INFORMATIONAL	Device configuration change has been made on a Rack PDU.	
rPDUOutletConfigChange APC Switched Rack PDU: Outlet configuration change made.	271	INFORMATIONAL	Outlet configuration change has been made on a Switched Rack PDU.	
rPDULowLoad APC Rack PDU: Violation of low load threshold.	272	WARNING	A Rack PDU has violated the low load threshold.	
rPDULowLoadCleared APC Rack PDU: Low load condition cleared.	273	INFORMATIONAL	The low load condition on a Rack PDU has been cleared.	
rPDUNearOverload APC Rack PDU: Near an overload condition.	274	WARNING	A Rack PDU is near an overload condition.	
rPDUNearOverloadCleared APC Rack PDU: Near overload condition has cleared.	275	INFORMATIONAL	Rack PDU near overload condition has cleared.	
rPDUOverload APC Rack PDU: Overload condition.	276	MAJOR	A Rack PDU is in an overload condition.	
rPDUOverloadCleared APC Rack PDU: Overload condition has cleared.	277	INFORMATIONAL	The overload condition on a Rack PDU has cleared.	
rPDUPowerSupply1Fail APC Rack PDU: Power Supply 1 is in FAIL state.	278	MAJOR	Power Supply 1 on Rack PDU is in FAIL state.	
rPDUPowerSupply1Ok APC Rack PDU: Power Supply 1 is operating normally.	279	INFORMATIONAL	Power Supply 1 on Rack PDU is operating normally.	
rPDUPowerSupply2Fail APC Rack PDU: Power Supply 2 is in FAIL state.	280	MAJOR	Power Supply 2 on Rack PDU is in FAIL state.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
rPDUPowerSupply2Ok APC Rack PDU: Power Supply 2 is operating normally.	281	INFORMATIONAL	Power Supply 2 on Rack PDU is operating normally.	
rPDUPhaseConfigChange APC Rack PDU: Phase configuration change made.	282	INFORMATIONAL	Phase configuration change has been made on a Rack PDU.	
rPDUCancelPendingCommand APC Switched Rack PDU: Cancel Pending Command made.	283	INFORMATIONAL	A Cancel Pending Command has been made on a Switched Rack PDU.	
aruAlinkCommunicationEstablished APC ARU: Communication Established.	284	INFORMATIONAL	Communication Established.	
aruAlinkCommunicationLost APC ARU: Communication Lost.	285	MAJOR	Communication Lost.	
aruFanFail APC ARU: Fan Fail.	286	MAJOR	Fan Fail.	
aruFanFailCleared APC ARU: Fan Fail Cleared.	287	INFORMATIONAL	Fan Fail Cleared.	
aruSmokeAlarm APC ARU: Smoke Alarm.	288	MAJOR	Smoke Alarm.	
aruSmokeAlarmCleared APC ARU: Smoke Alarm Cleared.	289	INFORMATIONAL	Smoke Alarm Cleared.	
aruHighTemperatureAlarm APC ARU: High Temperature Alarm.	290	MAJOR	High Temperature Alarm.	
aruHighTemperatureAlarmCleared APC ARU: High Temperature Alarm Cleared.	291	INFORMATIONAL	High Temperature Alarm Cleared.	
aruExhaustTemperatureAlarm APC ARU: Exhaust Temperature Alarm.	292	MAJOR	Exhaust Temperature Alarm.	
aruExhaustTemperatureAlarmCleared APC ARU: Exhaust Temperature Alarm Cleared.	293	INFORMATIONAL	Exhaust Temperature Alarm Cleared.	
envAlinkCommunicationEstablished APC ENV: Communication Established.	294	INFORMATIONAL	Communication Established.	
envAlinkCommunicationLost APC ENV: Communication Lost.	295	MAJOR	Communication Lost.	
emsAlinkPowerOverload APC EMS: Alink Power Overload.	296	MAJOR	Alink Power Overload.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
emsAlinkPowerOverloadCleared APC EMS: Alink Power Overload Cleared.	297	INFORMATIONAL	Alink Power Overload Cleared.	
upsOutletGroupTurnedOn APC UPS: Outlet Group turned on.	298	INFORMATIONAL	Outlet Group turned on	
upsOutletGroupTurnedOff APC UPS: Outlet Group turned off.	299	WARNING	Outlet Group turned off.	
smwCriticalCondition APC Symmetra MW UPS: A critical condition has been detected.	300	MAJOR	A critical condition has been detected.	
smwCriticalConditionCleared APC Symmetra MW UPS: A critical condition has been cleared.	301	INFORMATIONAL	A critical condition has been cleared.	
smwWarningCondition APC Symmetra MW UPS: A warning condition has been detected.	302	WARNING	A warning condition has been detected.	
smwWarningConditionCleared APC Symmetra MW UPS: A warning condition has been cleared.	303	INFORMATIONAL	A warning condition has been cleared.	
smwInformationalCondition APC Symmetra MW UPS: Informational condition detected.	304	INFORMATIONAL	An informational condition has been detected.	
smwInformationalConditionCleared APC Symmetra MW UPS: Informational condition cleared.	305	INFORMATIONAL	An informational condition has been cleared.	
airCriticalCondition APC Air: A critical condition was detected.	306	MAJOR	A critical condition was detected.	
airCriticalConditionCleared APC Air: A critical condition was cleared.	307	INFORMATIONAL	A critical condition was cleared.	
airWarningCondition APC Air: A warning condition was detected.	308	WARNING	A warning condition was detected.	
airWarningConditionCleared APC Air: A warning condition was cleared.	309	INFORMATIONAL	A warning condition was cleared.	
airInformationalCondition APC Air: Informational condition detected.	310	INFORMATIONAL	An informational condition was detected.	
airInformationalConditionCleared APC Air: Informational condition was cleared.	311	INFORMATIONAL	An informational condition was cleared.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
xPDUThreePhaseInputVoltageAlarm APC PDU: Main input voltage out-of-range alarm.	312	MAJOR	Input voltage is out-of-range.	
xPDUThreePhaseInputVoltageNormal APC PDU: Main input voltage back in range.	313	INFORMATIONAL	Input voltage in range.	
xPDUThreePhaseBypassVoltageAlarm APC PDU: Bypass input voltage out-of-range alarm.	314	MAJOR	Bypass input voltage is out-of-range.	
xPDUThreePhaseBypassVoltageNormal APC PDU: Bypass input voltage back in range.	315	INFORMATIONAL	Bypass input voltage in range.	
xPDUThreePhaseOutputVoltageAlarm APC PDU: Output voltage out-of-range alarm.	316	MAJOR	Output voltage is out-of-range.	
xPDUThreePhaseOutputVoltageNormal APC PDU: Output voltage back in range.	317	INFORMATIONAL	Output voltage in range.	
xPDUThreePhaseOutputCurrentAlarm APC PDU: Output (load) current out-of-range alarm.	318	MAJOR	Output current is out-of-range.	
xPDUThreePhaseOutputCurrentNormal APC PDU: Output (load) current back in range.	319	INFORMATIONAL	Output current in range.	
xPDOutputFrequencyAlarm APC PDU: Output frequency out-of-range alarm.	320	MAJOR	Output frequency is out-of-range.	
xPDOutputFrequencyNormal APC PDU: Output frequency back in range.	321	INFORMATIONAL	Output frequency in range.	
xPDUSystemGroundCurrentAlarm APC PDU: Earth ground current over range alarm.	322	MAJOR	Earth ground current is over limit.	
xPDUSystemGroundCurrentNormal APC PDU: Earth ground current back in range.	323	INFORMATIONAL	Earth ground current in range.	
xPDUInputContactStateAbnormal APC PDU: Input contact has changed to its abnormal state.	324	WARNING	Input contact has changed to its abnormal state.	
xPDUInputContactStateNormal APC PDU: Input contact has changed to its normal state.	325	INFORMATIONAL	Input contact has changed to its normal state.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
xPDUOutputRelayStateAbnormal APC PDU: Output Relay has changed to its abnormal state.	326	WARNING	Output Relay has changed to its abnormal state.	
xPDUOutputRelayStateNormal APC PDU: Output Relay has changed to its normal state.	327	INFORMATIONAL	Output Relay has changed to its normal state.	
xPDUCoolingFanAlarm APC PDU: Cooling fan failure alarm.	328	MAJOR	Cooling fan failure.	
xPDUCoolingFanAlarmCleared APC PDU: Cooling fan alarm cleared.	329	INFORMATIONAL	Cooling fan alarm cleared.	
xPDUTransformerTempAlarm APC PDU: Isolation transformer over temperature alarm.	330	MAJOR	Transformer temp alarm.	
xPDUTransformerTempAlarmCleared APC PDU: Isolation transformer over temperature alarm cleared.	331	INFORMATIONAL	Transformer temp alarm cleared.	
xPDUBranchCurrentAlarm APC PDU: Branch circuit current out-of-range alarm.	332	MAJOR	Branch circuit current is out-of-range.	
xPDUBranchCurrentNormal APC PDU: Branch circuit current back in range.	333	INFORMATIONAL	Branch circuit current in range.	
xPDUBreakerChangeEvent APC PDU: Breaker/switch change event.	334	INFORMATIONAL	Breaker/switch change event.	
xPDUIInternalCommError APC PDU: Internal communication error.	335	MAJOR	Internal communication error.	
xPDUIInternalCommEstablished APC PDU: Internal Communication established.	336	INFORMATIONAL	Communication established.	
xPDUSystemStateAlarm APC PDU: System state alarm.	337	WARNING	PDU state alarm.	
xPDUSystemStateNormal APC PDU: System state returned to normal.	338	INFORMATIONAL	PDU state normal.	
xPDUEpoTestMode APC PDU: Emergency Power Off (EPO) in test mode.	339	WARNING	EPO disabled.	
xPDUEpoArmed APC PDU: Emergency Power Off (EPO) enabled.	340	INFORMATIONAL	EPO armed.	
xPDUFuseBlownAlarm APC PDU: Check fuse alarm.	341	MAJOR	Fuse detected opened.	

表 : PowerNet-MIB トラブル (ENTERPRISE : enterprises.318)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
xPDUFuseBlownAlarmCleared APC PDU: Check fuse alarm cleared.	342	INFORMATIONAL	Fuse alarm cleared.	
xPDUBreakerPositionAlarm APC PDU: Breaker position alarm.	343	MAJOR	Breaker position alarm.	
xPDUBreakerPositionAlarmCleared APC PDU: Breaker position alarm cleared.	344	INFORMATIONAL	Breaker alarm cleared.	

B.24 Alert-Definition-Originator-MIB (F5emt2o.mib)

富士通 LDSM からのトラブルです。詳細については LDSM の説明書を参照してください。

表 : Alert-Definition-Originator-MIB トラブル (ENTERPRISE : enterprises.211.4.1.4.6)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
ldsmTrap-Monitored LDSM Monitored Event	1	INFORMATIONAL	LDSM has reported: %s %s %s %s	
ldsmTrap-Informational LDSM Informational Event	2	INFORMATIONAL	LDSM has reported: %s %s %s %s	
ldsmTrap-Recovered LDSM Recovered Event	4	INFORMATIONAL	LDSM has reported: %s %s %s %s	
ldsmTrap-NonCritical LDSM NonCritical Event	8	INFORMATIONAL	LDSM has reported: %s %s %s %s	
ldsmTrap-Critical LDSM Critical Event	16	INFORMATIONAL	LDSM has reported: %s %s %s %s	
ldsmTrap-NonRecoverable LDSM NonRecoverable Event	32	INFORMATIONAL	LDSM has reported: %s %s %s %s	

B.25 LDSM-MIB (ldsm.mib)

富士通 LDSM からのトラブルです。詳細については LDSM の説明書を参照してください。

表 : LDSM-MIB トラブル (ENTERPRISE : enterprises343.2.5.1.3)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
ldsmOKTrap Intel LANDesk/E Server Manager has reported a status OK event.	1	INFORMATIONAL	Intel LANDesk/E Server Manager has reported: The computer's status is %s.	
ldsmInformationalTrap Intel LANDesk/E Server Manager has reported a status Informational event.	2	INFORMATIONAL	Intel LANDesk/E Server Manager has reported: The computer's status is %s.	
ldsmWarningTrap Intel LANDesk/E Server Manager has reported a status Warning event.	3	MINOR	Intel LANDesk/E Server Manager has reported: The computer's status is %s.	

表 : LDSM-MIB ト ラッ プ (ENTERPRISE : enterprises343.2.5.1.3)

TRAP-TYPE／アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
dsmCriticalTrap Intel LANDeskÆ Server Manager has reported a status Critical event.	4	CRITICAL	Intel LANDeskÆ Server Manager has reported: The computer's status is %s.	

B.26 LDCM-MIB (Ldcm.mib)

富士通 LDSM からのト ラッ プです。 詳細については LDSM の説明書を参照してください。

表 : LDCM-MIB ト ラッ プ (ENTERPRISE : enterprises343.2.5.1.2)

TRAP-TYPE／アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
ldcmUnknownTrap IntelÆ LANDeskÆ Client Manager has reported an Unknown event.	1	INFORMATIONAL	Client Manager has reported an event on the computer %s: %s	
ldcmInfoTrap IntelÆ LANDeskÆ Client Manager has reported an Informational event.	2	INFORMATIONAL	Client Manager has reported an event on the computer %s: %s	
ldcmOkTrap IntelÆ LANDeskÆ Client Manager has reported a severity OK event.	3	INFORMATIONAL	Client Manager has reported an event on the computer %s: %s	
ldcmWarningTrap IntelÆ LANDeskÆ Client Manager has reported a severity Warning event.	4	MINOR	Client Manager has reported an event on the computer %s: %s	
ldcmCriticalTrap IntelÆ LANDeskÆ Client Manager has reported a severity Critical event.	5	CRITICAL	Client Manager has reported an event on the computer %s: %s	
ldcmFatalTrap IntelÆ LANDeskÆ Client Manager has reported a severity Fatal event.	6	CRITICAL	Client Manager has reported an event on the computer %s: %s	

B.27 FUJITSU-SERVERVISOR-MIB (Servervi.mib)

富士通 Servervisor からのトラップです。詳細については Servervisor の説明書を参照してください。

表 : FUJITSU-SERVERVISOR-MIB トラップ (ENTERPRISE : enterprises.211.4.36.1.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
servervisorTrapType Servervisor Event	32	INFORMATIONAL	Servervisor has reported: %s	

B.28 RFC1157 (RFC1157.mib)

RFC1157 のトラップです。詳細については RFC1157 を参照してください。

表 : RFC1157(Microsoft) トラップ (ENTERPRISE : enterprises.311.1.1.3.1.x)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
rfc1157ColdStart Cold start	0	MINOR	Station reinitialized.	SNMP サービスが起動した。
rfc1157WarmStart Warm start	0	MINOR	Station reinitialized.	SNMP サービスが再起動した。
rfc1157LinkDown Link down	0	CRITICAL	Communication link failed at the station %d.	インターフェースがダウンした。
rfc1157LinkUp Link up	0	MINOR	Communication link restored at the station %d.	インターフェースがアップした。
rfc1157AuthenticationFailure Authentication failure	0	MINOR	Unauthorized message received.	不正な community で SNMP リクエストパケットを受け取った。
rfc1157EGPNeighborLost EGP neighbor lost	0	MAJOR	Neighboring station down.	

B.29 ROMPILOT-MIB (ROMPILOT.MIB)

ROM PILOT (phoenix BIOS) からのトラップです。

表 : ROMPILOT-MIB トラップ (ENTERPRISE : enterprises.2487)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
rpWarmResetTrap RomPilot Warm Reset Trap.	257	INFORMATIONAL	RomPilot machine %s with MAC address %m has performed a warm reset and is running the BIOS POST.	
rpColdResetTrap RomPilot Cold Reset Trap.	258	INFORMATIONAL	RomPilot machine %s with MAC address %m has performed a cold reset and is running the BIOS POST.	
rpDiagResetTrap RomPilot Diagnostic Reset Trap.	259	MINOR	RomPilot machine %s with MAC address %m has performed a diagnostic reset and is running the BIOS POST.	
rpIDEResetTrap RomPilot IDE disk Reset Trap.	260	MINOR	RomPilot machine %s with MAC address %m has performed an IDE disk reset and is running the BIOS POST.	

表 : ROMPILOT-MIB トラップ (ENTERPRISE : enterprises.2487)

TRAP-TYPE／アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
rpBootTrap RomPilot OS Boot Trap.	512	INFORMATIONAL	RomPilot machine %s with MAC address %m is starting to boot its Operating System.	
rpPostFtlErrorTrap RomPilot Fatal POST Error Trap.	769	MAJOR	RomPilot machine %s with MAC address %m has detected a fatal error during BIOS POST.	
rpPostConErrorTrap RomPilot Conditional POST Error Trap.	770	MINOR	RomPilot machine %s with MAC address %m has detected a conditional error during BIOS POST.	
rpPostWarnTrap RomPilot Conditional POST Error Trap.	771	MINOR	RomPilot machine %s with MAC address %m has detected a conditional error during BIOS POST.	
rpSecurityTrap RomPilot Security Breach Trap.	1024	INFORMATIONAL	RomPilot machine %s with MAC address %m has loaded its Operating System.	
rpNosUpTrap RomPilot OS Loaded Trap.	1280	INFORMATIONAL	RomPilot machine %s with MAC address %m has loaded its Operating System.	
rpCriticalTrap RomPilot Critical Trap.	1536	MAJOR	RomPilot machine %s with MAC address %m has sent a critical trap.	
rpDisconnectTrap RomPilot Disconnect Trap.	1792	INFORMATIONAL	RomPilot machine %s with MAC address %m has sent a disconnect trap and will end communications abruptly.	
rpReconnectTrap RomPilot Reconnect Trap.	2048	INFORMATIONAL	RomPilot machine %s with MAC address %m has sent a reconnect trap. This means that the RomPilot enabled machine is able to resume communications.	
rpPostWarningTrap RomPilot POST Warning Trap.	16384	MINOR	RomPilot machine %s with MAC address %m has detected a warning during BIOS POST.	
rpPostConditionalTrap RomPilot Conditional POST Error Trap.	32768	MINOR	RomPilot machine %s with MAC address %m has detected a conditional error during BIOS POST.	
rpPostFatalTrap RomPilot Fatal POST Error Trap.	49152	MAJOR	RomPilot machine %s with MAC address %m has detected a fatal error during BIOS POST.	

B.30 SW-MIB (fcswitch.mib)

Fibre Channel Switch SN200 からのトラブルです。詳細については SN200 の説明書を参照してください。

表 : SW-MIB トラブル (ENTERPRISE : enterprises.1588.2.1.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
swFault Switch is faulty.	1	CRITICAL	Faulty reason: %d	
swSensorScn A sensor (temperature, fan, etc.) changed its operational state.	2	INFORMATIONAL	%s: is currently in state %d	
swFCPortScn A Fibre Channel Port changed its operational state.	3	INFORMATIONAL	Port Index %d changed state to %d	
swEventTrap A firmware event has been logged	4	INFORMATIONAL	Event %d: %s (severity level %d) - %s	
swFabricWatchTrap Fabric Watch has generated an event	5	MINOR	Threshold %s in Class/Area %d at index %d has generated event %d with %d on %s. This event is %d	
swTrackChangesTrap Track changes has generated a trap	6	INFORMATIONAL	%s	

B.31 ADAPTECDURALINK-MIB (duralink.mib)

Duralink(アダプテック マルチポートアダプタ : 10Mbps/100Mbps 対応のマルチポートファストイーサネットネットワークインターフェイスカード) からのトラブルです。

表 : ADAPTECDURALINK-MIB トラブル (ENTERPRISE : enterprises.1588.2.1.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
duralinkStatusTrap Port Status Changed	1	INFORMATIONAL	Group %d Port %d port status is %d.	
duralinkPortUp Port Available	2	INFORMATIONAL	Group %s Port %s is up.	
duralinkPortDown Port Unavailable	3	MAJOR	Group %s Port %s is down.	
duralinkPortStandby Port acting as failover backup	4	INFORMATIONAL	Group %s Port %s is acting as a failover backup.	

B.32 TapeAlert-MIB (tapealrt.mib)

HP 製 tape device からのトラップです。詳細については Tape Device の説明書を参照してください。

表 : TapeAlert-MIB トラップ (ENTERPRISE : enterprises.11.2.3.9.7.1)

TRAP-TYPE／アラームタイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
tapeAlertTrap1 HP TapeAlert #1	1	MINOR	Hba%d:Channel%d:ScsiID%d Tape Device Has Problems Reading Data	Tape Device 監視の Trap です。 サポートしていません。
tapeAlertTrap2 HP TapeAlert #2	2	MINOR	Hba%d:Channel%d:ScsiID%d Tape Device Has Problems Writing Data	↑
tapeAlertTrap3 HP TapeAlert #3	3	MINOR	Hba%d:Channel%d:ScsiID%d Tape Device Has Detected Read or Write Data Error	↑
tapeAlertTrap4 HP TapeAlert #4	4	CRITICAL	Hba%d:Channel%d:ScsiID%d Tape Device Has Detected Faulty Media [%s]	↑
tapeAlertTrap5 HP TapeAlert #5	5	CRITICAL	Hba%d:Channel%d:ScsiID%d Tape Device May Have Read Fault - Call Helpline	↑
tapeAlertTrap6 HP TapeAlert #6	6	CRITICAL	Hba%d:Channel%d:ScsiID%d Tape Device May Have Write Fault - Call Helpline	↑
tapeAlertTrap7 HP TapeAlert #7	7	MINOR	Hba%d:Channel%d:ScsiID%d Tape Device Has Detected Worn Out Media [%s]	↑
tapeAlertTrap8 HP TapeAlert #8	8	MINOR	Hba%d:Channel%d:ScsiID%d Media Loaded In Tape Device Is Not Data Grade	↑
tapeAlertTrap9 HP TapeAlert #9	9	CRITICAL	Hba%d:Channel%d:ScsiID%d Tape Device Attempted Backup to Write-Protected Tape	↑
tapeAlertTrap10 HP TapeAlert #10	10	INFORMATIONAL	Hba%d:Channel%d:ScsiID%d Tape Device Eject Attempted When Media Locked	↑
tapeAlertTrap11 HP TapeAlert #11	11	INFORMATIONAL	Hba%d:Channel%d:ScsiID%d Tape Device Attempted Backup/Restore To Cleaning Tape	↑
tapeAlertTrap12 HP TapeAlert #12	12	INFORMATIONAL	Hba%d:Channel%d:ScsiID%d Media Loaded In Tape Device Is Unsupported Type	↑
tapeAlertTrap13 HP TapeAlert #13	13	CRITICAL	Hba%d:Channel%d:ScsiID%d Tape Device Has Detected Snapped Tape	↑
tapeAlertTrap14 HP TapeAlert #14	14	CRITICAL	Hba%d:Channel%d:ScsiID%d Tape Device Has Detected Snapped Tape	↑
tapeAlertTrap15 HP TapeAlert #15	15	MINOR	Hba%d:Channel%d:ScsiID%d Tape Device Has Memory Chip in Cartridge Failure [%s]	↑
tapeAlertTrap16 HP TapeAlert #16	16	CRITICAL	Hba%d:Channel%d:ScsiID%d Tape Cartridge Ejected While Actively Writing/Reading	↑
tapeAlertTrap17 HP TapeAlert #17	17	MINOR	Hba%d:Channel%d:ScsiID%d Tape Device Has Detected Read Only Media	↑

表 : TapeAlert-MIB トラブル (ENTERPRISE : enterprises.11.2.3.9.7.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
tapeAlertTrap18 HP TapeAlert #18	18	MINOR	Hba%d:Channel%d:ScsiID%d Tape Device Has Detected Corrupted Directory On Tape	↑
tapeAlertTrap19 HP TapeAlert #19	19	INFORMATIONAL	Hba%d:Channel%d:ScsiID%d Tape Device Has Detected Worn Out Media [%s]	↑
tapeAlertTrap20 HP TapeAlert #20	20	CRITICAL	Hba%d:Channel%d:ScsiID%d Tape Device Needs Cleaning	↑
tapeAlertTrap21 HP TapeAlert #21	21	MINOR	Hba%d:Channel%d:ScsiID%d Tape Device Requests Routine Cleaning	↑
tapeAlertTrap22 HP TapeAlert #22	22	CRITICAL	Hba%d:Channel%d:ScsiID%d Tape Device Has Detected Worn Out Cleaning Cartridge	↑
tapeAlertTrap23 HP TapeAlert #23	23	CRITICAL	Hba%d:Channel%d:ScsiID%d Tape Device Has Detected Invalid Cleaning Cartridge	↑
tapeAlertTrap29 HP TapeAlert #29	29	MINOR	Hba%d:Channel%d:ScsiID%d Tape Device Requires Preventative Maintenance	↑
tapeAlertTrap30 HP TapeAlert #30	30	CRITICAL	Hba%d:Channel%d:ScsiID%d Tape Device Has Hardware Fault - Reset Drive	↑
tapeAlertTrap31 HP TapeAlert #31	31	CRITICAL	Hba%d:Channel%d:ScsiID%d Tape Device Has Hardware Fault - Call Helpline	↑
tapeAlertTrap32 HP TapeAlert #32	32	MINOR	Hba%d:Channel%d:ScsiID%d Tape Device Has Host Interface Fault	↑
tapeAlertTrap33 HP TapeAlert #33	33	CRITICAL	Hba%d:Channel%d:ScsiID%d Tape Device Has Eject Media Request	↑
tapeAlertTrap34 HP TapeAlert #34	34	MINOR	Hba%d:Channel%d:ScsiID%d Tape Device Has Firmware Download Fault	↑
tapeAlertTrap35 HP TapeAlert #35	35	MINOR	Hba%d:Channel%d:ScsiID%d Tape Device Humidity Specification Exceeded	↑
tapeAlertTrap36 HP TapeAlert #36	36	MINOR	Hba%d:Channel%d:ScsiID%d Tape Device Temperature Specification Exceeded	↑
tapeAlertTrap37 HP TapeAlert #37	37	MINOR	Hba%d:Channel%d:ScsiID%d Tape Device Voltage Specification Exceeded	↑
tapeAlertTrap38 HP TapeAlert #38	38	CRITICAL	Hba%d:Channel%d:ScsiID%d Tape Device Predicted to Fail - Call Helpline	↑
tapeAlertTrap39 HP TapeAlert #39	39	MINOR	Hba%d:Channel%d:ScsiID%d Tape Device May Have Hardware Fault - Run Diagnostics	↑
tapeAlertTrap40 HP TapeAlert #40	40	CRITICAL	Hba%d:Channel%d:ScsiID%d Tape Device Has Autoloader Communications Fault	↑
tapeAlertTrap41 HP TapeAlert #41	41	CRITICAL	Hba%d:Channel%d:ScsiID%d Tape Device Detects Stray Tape In Autoloader	↑
tapeAlertTrap42 HP TapeAlert #42	42	MINOR	Hba%d:Channel%d:ScsiID%d Tape Device Has Autoloader Mechanism Fault	↑
tapeAlertTrap43 HP TapeAlert #43	43	CRITICAL	Hba%d:Channel%d:ScsiID%d Tape Device Has Autoloader Door Open	↑

表 : TapeAlert-MIB ト ラッ プ (ENTERPRISE : enterprises.11.2.3.9.7.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
tapeAlertTrap44 HP TapeAlert #44	44	CRITICAL	Hba%d:Channel%d:ScsiID%d Autoloader Has Hardware Fault - Call Helpline	↑
tapeAlertTrap45 HP TapeAlert #45	45	CRITICAL	Hba%d:Channel%d:ScsiID%d Autoloader Cannot Operate Without Magazine	↑
tapeAlertTrap46 HP TapeAlert #46	46	MINOR	Hba%d:Channel%d:ScsiID%d Autoloader Predicted to Fail - Call Helpline	↑
tapeAlertTrap256 HP TapeAlert #256	256	CRITICAL	Hba%d:Channel%d:ScsiID%d Library Has Drive Communications Fault	↑
tapeAlertTrap257 HP TapeAlert #257	257	MINOR	Hba%d:Channel%d:ScsiID%d Library Has Changer Mechanism Fault	↑
tapeAlertTrap258 HP TapeAlert #258	258	CRITICAL	Hba%d:Channel%d:ScsiID%d Library Has Hardware Fault - Reset Library	↑
tapeAlertTrap259 HP TapeAlert #259	259	CRITICAL	Hba%d:Channel%d:ScsiID%d Library Has Hardware Fault - Call Helpline	↑
tapeAlertTrap260 HP TapeAlert #260	260	MINOR	Hba%d:Channel%d:ScsiID%d Library May Have Hardware Fault - Run Diagnostics	↑
tapeAlertTrap261 HP TapeAlert #261	261	CRITICAL	Hba%d:Channel%d:ScsiID%d Library Has Host Interface Fault	↑
tapeAlertTrap262 HP TapeAlert #262	262	MINOR	Hba%d:Channel%d:ScsiID%d Library Predicted to Fail - Call Helpline	↑
tapeAlertTrap263 HP TapeAlert #263	263	MINOR	Hba%d:Channel%d:ScsiID%d Library Requires Preventative Maintenance	↑
tapeAlertTrap264 HP TapeAlert #264	264	CRITICAL	Hba%d:Channel%d:ScsiID%d Library Humidity Specification Exceeded	↑
tapeAlertTrap265 HP TapeAlert #265	265	CRITICAL	Hba%d:Channel%d:ScsiID%d Library Temperature Specification Exceeded	↑
tapeAlertTrap266 HP TapeAlert #266	266	CRITICAL	Hba%d:Channel%d:ScsiID%d Library Voltage Specification Exceeded	↑
tapeAlertTrap267 HP TapeAlert #267	267	CRITICAL	Hba%d:Channel%d:ScsiID%d Library Detects Stray Tape In Drive	↑
tapeAlertTrap268 HP TapeAlert #268	268	MINOR	Hba%d:Channel%d:ScsiID%d Library Has Problems Picking Cartridge from Slot	↑
tapeAlertTrap269 HP TapeAlert #269	269	MINOR	Hba%d:Channel%d:ScsiID%d Library Has Problems Placing Cartridge into Slot	↑
tapeAlertTrap270 HP TapeAlert #270	270	MINOR	Hba%d:Channel%d:ScsiID%d Library Has Problems Loading Cartridge into Drive	↑
tapeAlertTrap271 HP TapeAlert #271	271	CRITICAL	Hba%d:Channel%d:ScsiID%d Library Door is Open	↑
tapeAlertTrap272 HP TapeAlert #272	272	CRITICAL	Hba%d:Channel%d:ScsiID%d Library Has Mechanical Fault with Mailslot	↑
tapeAlertTrap273 HP TapeAlert #273	273	CRITICAL	Hba%d:Channel%d:ScsiID%d Library Cannot Operate Without Magazine	↑
tapeAlertTrap274 HP TapeAlert #274	274	MINOR	Hba%d:Channel%d:ScsiID%d Library Security Has Been Compromised	↑
tapeAlertTrap275 HP TapeAlert #275	275	INFORMATIONAL	Hba%d:Channel%d:ScsiID%d Library Security Mode Changed	↑

表 : TapeAlert-MIB トラブル (ENTERPRISE : enterprises.11.2.3.9.7.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
tapeAlertTrap276 HP TapeAlert #276	276	INFORMATIONAL	Hba%d:Channel%d:ScsiID%d Library Manually Turned Offline	↑
tapeAlertTrap277 HP TapeAlert #277	277	INFORMATIONAL	Hba%d:Channel%d:ScsiID%d Library Drive Turned Offline	↑
tapeAlertTrap278 HP TapeAlert #278	278	MINOR	Hba%d:Channel%d:ScsiID%d Library Has Problems Reading Barcode Labels	↑
tapeAlertTrap279 HP TapeAlert #279	279	CRITICAL	Hba%d:Channel%d:ScsiID%d Library Inventory is Inconsistent	↑
tapeAlertTrap280 HP TapeAlert #280	280	MINOR	Hba%d:Channel%d:ScsiID%d Invalid Library Operation Attempted	↑

B.33 IOMMIB (iommib.mib)

Adaptec IOManager Storage Controllers からのトラブルです。

表 : IOMMIB トラブル (ENTERPRISE : enterprises.795.12.2)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
iomStorageControllerStateChangeI ngel Informational Storage Controller State Change.	1010	INFORMATIONAL	The storage controller %d has changed state.	
iomStorageControllerStateChangeW ngW Warning Storage Controller State Change.	1011	MAJOR	The storage controller %d has changed state.	
iomStorageControllerStateChangeC ngC Critical Storage Controller State Change.	1012	CRITICAL	The storage controller %d has changed state.	
iomBusPortStateChangeI Informational Bus Port State Change.	1020	INFORMATIONAL	The bus port %d has changed state.	
iomBusPortStateChangeW Warning Bus Port State Change.	1021	MAJOR	The bus port %d has changed state.	
iomBusPortStateChangeC Critical Bus Port State Change.	1022	CRITICAL	The bus port %d has changed state.	
iomStorageDeviceStateChangeI Informational Storage Device State Change.	1030	INFORMATIONAL	The storage device %d has changed state.	
iomStorageDeviceStateChangeW Warning Storage Device State Change.	1031	MAJOR	The storage device %d has changed state.	
iomStorageDeviceStateChangeC Critical Storage Device State Change.	1032	CRITICAL	The storage device %d has changed state.	

表 : IOMMIB トラップ (ENTERPRISE : enterprises.795.12.2)

TRAP-TYPE／アラームタイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
iomVolumeSetStateChangeI Informational Volume Set State Change.	1040	INFORMATIONAL	The volume set %d has changed state.	
iomVolumeSetStateChangeW Warning Volume Set State Change.	1041	MAJOR	The volume set %d has changed state.	
iomVolumeSetStateChangeC Critical Volume Set State Change.	1042	CRITICAL	The volume set %d has changed state.	
iomVolumeSetActivityChangeI Informational Volume Set Activity Change.	1050	INFORMATIONAL	The volume set %d has changed activity.	
iomVolumeSetActivityChangeW Warning Volume Set Activity Change.	1051	MAJOR	The volume set %d has changed activity.	
iomVolumeSetActivityChangeC Critical Volume Set Activity Change.	1052	CRITICAL	The volume set %d has changed activity.	
iomSpareStateChangeI Informational Spare State Change.	1060	INFORMATIONAL	The spare %d has changed state.	
iomSpareStateChangeW Warning Spare State Change.	1061	MAJOR	The spare %d has changed state.	
iomSpareStateChangeC Critical Spare State Change.	1062	CRITICAL	The spare %d has changed state.	
iomEnclosureStateChangeI Informational Enclosure State Change.	1070	INFORMATIONAL	A component in IOManager enclosure %d has changed state.	
iomEnclosureStateChangeW Warning Enclosure State Change.	1071	MAJOR	A component in IOManager enclosure %d has changed state.	
iomEnclosureStateChangeC Critical Enclosure State Change.	1072	CRITICAL	A component in IOManager enclosure %d has changed state.	

B.34 BRIDGE-MIB (trap1493.mib)

BRIDGE 装置からのトラップです。詳細については RFC1493 を参照してください。

表 : BRIDGE-MIB トラップ (ENTERPRISE : mib2.17)

TRAP-TYPE／アラームタイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
newRoot a new root of the Spanning True trap	1	INFORMATIONAL	A trap to indicate when a node has become a new root of the Spanning True.	
topologyChange topology changed trap	2	INFORMATIONAL	A trap to indicate when the topology has changed.	

B.35 RMON-MIB (trap1757.mib)

リモートネットワークモニタからのトラップです。詳細については RFC1757 を参照してください。

表 : RMON-MIB トラップ (ENTERPRISE : mib2.16)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
risingAlarm Rising Alarm Trap Sent From Rmon Manager that the monitor variables has crosses its rising threshold	1	INFORMATIONAL	The variable %x we are monitoring has occurred a Rising Alarm, The alarmValue is %d which has crossed over the threshold %d within the timeInterval we defined in Alarm Table. Note: The information of this alarm can be get from alarm Table index %d and the alarm SampleType is %d.	
fallingAlarm Faling Alarm Trap Sent From Rmon Manager that the monitor variables has crosses its falling threshold	2	INFORMATIONAL	The variable %x we are monitoring has occurred a Falling Alarm, The alarmValue is %d which has crossed down the threshold %d within the timeInterval we defined in Alarm Table. Note: The information of this alarm can be get from alarm Table index %d and the alarm SampleType is %d.	

B.36 INTEL-WFM-MIB (WFM.mib)

Wired for Management からの トラップです。

表 : INTEL-WFM-MIB トラップ (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmTempLowWarningOKWarn_LNC_GL Temp Low Warning (OK -> Warn) (LNC_GL)	65792	MAJOR	%s	
wfmTempOK_LNC_GH Temp OK (LNC_GH)	65793	INFORMATIONAL	%s	
wfmTempLowCriticalWarnCrit_LC_GL Temp Low Critical(Warn -> Crit) (LC_GL)	65794	CRITICAL	%s	
wfmTempLowWarningCritWarn_LC_GH Temp Low Warning (Crit -> Warn) (LC_GH)	65795	MAJOR	%s	
wfmTempLowCriticalCritNonRecover_LNR_GL Temp Low Critical(Crit -> NonRecover) (LNR_GL)	65796	CRITICAL	%s	
wfmTempLowCriticalNonRecoverCrit_LNR_GH Temp Low Critical(NonRecover -> Crit) (LNR_GH)	65797	CRITICAL	%s	

表 : INTEL-WFM-MIB ト ラッ プ (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmTempOK_UNC_GL Temp OK (UNC_GL)	65798	INFORMATIONAL	%s	
wfmTempHighWarningOKWarn_UNC_GH Temp High Warning (OK -> Warn) (UNC_GH)	65799	MAJOR	%s	
wfmTempHighWarningCritWarn_UC_GL Temp High Warning (Crit -> Warn) (UC_GL)	65800	MAJOR	%s	
wfmTempHighCriticalWarnCrit_UC_GH Temp High Critical(Warn -> Crit) (UC_GH)	65801	CRITICAL	%s	
wfmTempHighCriticalNonRecoverCrit_UNR_GL Temp High Critical(NonRecover -> Crit) (UNR_GL)	65802	CRITICAL	%s	
wfmTempHighCriticalCritNonRecover_UNR_GH Temp High Critical(Crit -> NonRecover) (UNR_GH)	65803	CRITICAL	%s	
wfmTemperatureOk Temperature Ok	65927	INFORMATIONAL	%s	
wfmThermalTrip Thermal trip	66049	CRITICAL	%s	
wfmTemperatureWarningCritical Temperature High Critical -> Warning	65929	MINOR	%s	
wfmTempOK_LNC_GL Temp OK (LNC_GL)	98560	INFORMATIONAL	%s	
wfmTempLowWarningOKWarn_LNC_GH Temp Low Warning (OK -> Warn) (LNC_GH)	98561	MAJOR	%s	
wfmTempLowWarningCritWarn_LC_GL Temp Low Warning (Crit -> Warn) (LC_GL)	98562	MAJOR	%s	
wfmTempLowCriticalWarnCrit_LC_GH Temp Low Critical(Warn -> Crit) (LC_GH)	98563	CRITICAL	%s	
wfmTempLowCriticalNonRecoverCrit_LNR_GL Temp Low Critical(NonRecover -> Crit) (LNR_GL)	98564	CRITICAL	%s	
wfmTempLowCriticalCritNonRecover_LNR_GH Temp Low Critical(Crit -> NonRecover) (LNR_GH)	98565	CRITICAL	%s	

表 : INTEL-WFM-MIB トラブル (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmTempHighWarningOKWarnUNC_GL Temp High Warning (OK -> Warn) (UNC_GL)	98566	MAJOR	%s	
wfmTempOK_UNC_GH Temp OK (UNC_GH)	98567	INFORMATIONAL	%s	
wfmTempHighCriticalWarnCritUC_GL Temp High Critical(Warn -> Crit) (UC_GL)	98568	CRITICAL	%s	
wfmTempHighWarningCritWarnUC_GH Temp High Warning (Crit -> Warn) (UC_GH)	98569	MAJOR	%s	
wfmTempHighCriticalCritNonRecover_UNR_GL Temp High Critical(Crit -> NonRecover) (UNR_GL)	98570	CRITICAL	%s	
wfmTempHighCriticalNonRecoverCrit_UNR_GH Temp High Critical(NonRecover -> Crit) (UNR_GH)	98571	CRITICAL	%s	
wfmMemorySingleBitError1Memory - Single Bit Error 1	131072	INFORMATIONAL	%s	
wfmVoltageLowWarningOKWarnLNC_GL Voltage Low - Warning (OK -> Warn) (LNC_GL)	131328	MAJOR	%s	
wfmVoltageOK_LNC_GH Voltage OK (LNC_GH)	131329	INFORMATIONAL	%s	
wfmVoltageLowCriticalWarnCritLC_GL Voltage Low - Critical(Warn -> Crit) (LC_GL)	131330	CRITICAL	%s	
wfmVoltageLowNoLongerCriticalLC_GH Voltage Low - no longer Critical (LC_GH)	131331	INFORMATIONAL	%s	
wfmVoltageLowCriticalCritNonRecover_LNR_GL Voltage Low - Critical(Crit -> NonRecover) (LNR_GL)	131332	CRITICAL	%s	
wfmVoltageLowCriticalNonRecoverCrit_LNR_GH Voltage Low - Critical(NonRecover -> Crit) (LNR_GH)	131333	CRITICAL	%s	
wfmVoltageOK_UNC_GL Voltage OK (UNC_GL)	131334	INFORMATIONAL	%s	
wfmVoltageHighWarningOKWarnUNC_GH Voltage High - Warning (OK -> Warn) (UNC_GH)	131335	MAJOR	%s	

表 : INTEL-WFM-MIB ト ラッ プ (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmVoltageHighNoLongerCritical_UC_GL Voltage High - no longer Critical (UC_GL)	131336	INFORMATIONAL	%s	
wfmVoltageHighCriticalWarnCritical_UC_GH Voltage High - Critical(Warn -> Crit) (UC_GH)	131337	CRITICAL	%s	
wfmVoltageHighCriticalNonRecoverCrit_UNR_GL Voltage High - Critical(NonRecover -> Crit) (UNR_GL)	131338	CRITICAL	%s	
wfmVoltageHighCriticalCritNonRecover_UNR_GH Voltage High - Critical(Crit -> NonRecover) (UNR_GH)	131339	CRITICAL	%s	
wfmVoltageLimitExceeded Voltage limit exceeded	132353	CRITICAL	%s	
wfmMemorySingleBitError2 Memory - Single Bit Error 2	133632	INFORMATIONAL	%s	
wfmVoltageOK_LNC_GL Voltage OK (LNC_GL)	164096	INFORMATIONAL	%s	
wfmMemorySingleBitError3 Memory - Single Bit Error 3	134784	INFORMATIONAL	%s	
wfmVoltageLowWarningOKWarning_LNC_GH Voltage Low - Warning (OK -> Warn) (LNC_GH)	164097	MAJOR	%s	
wfmMemorySingleBitError4 Memory - Single Bit Error 4	135168	INFORMATIONAL	%s	
wfmVoltageLowNoLongerCritical_LC_GL Voltage Low - no longer Critical (LC_GL)	164098	INFORMATIONAL	%s	
wfmMemorySingleBitError5 Memory - Single Bit Error 5	135552	INFORMATIONAL	%s	
wfmVoltageLowCriticalWarnCritical_LC_GH Voltage Low - Critical(Warn -> Crit) (LC_GH)	164099	CRITICAL	%s	
wfmMemorySingleBitError6 Memory - Single Bit Error 6	137088	INFORMATIONAL	%s	
wfmVoltageLowCriticalNonRecoverCrit_LNR_GL Voltage Low - Critical(NonRecover -> Crit) (LNR_GL)	164100	CRITICAL	%s	
wfmMemorySingleBitError7 Memory - Single Bit Error 7	137344	INFORMATIONAL	%s	

表 : INTEL-WFM-MIB トラブル (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmVoltageLowCriticalCritNo nRecover_LNR_GH Voltage Low - Critical(Crit -> NonRecover) (LNR_GH)	164101	CRITICAL	%s	
wfmMemorySingleBitError8 Memory - Single Bit Error 8	137984	INFORMA TIONAL	%s	
wfmVoltageHighWarningOKW arn_UNC_GL Voltage High - Warning (OK -> Warn) (UNC_GL)	164102	MAJOR	%s	
wfmMemorySingleBitError9 Memory - Single Bit Error 9	139392	INFORMA TIONAL	%s	
wfmVoltageOK_UNC_GH Voltage OK (UNC_GH)	164103	INFORMA TIONAL	%s	
wfmMemorySingleBitError10 Memory - Single Bit Error 10	139393	INFORMA TIONAL	%s	
wfmVoltageHighCriticalWarnC rit_UC_GL Voltage High - Critical(Warn -> Crit) (UC_GL)	164104	CRITICAL	%s	
wfmMemorySingleBitError11 Memory - Single Bit Error 11	143232	INFORMA TIONAL	%s	
wfmVoltageHighNoLongerCriti cal_UC_GH Voltage High - no longer Critical (UC_GH)	164105	INFORMA TIONAL	%s	
wfmMemorySingleBitError12 Memory - Single Bit Error 12	144384	INFORMA TIONAL	%s	
wfmVoltageHighCriticalCritNo nRecover_UNR_GL Voltage High - Critical(Crit -> NonRecover) (UNR_GL)	164106	CRITICAL	%s	
wfmMemorySingleBitError13 Memory - Single Bit Error 13	148352	INFORMA TIONAL	%s	
wfmVoltageHighCriticalNonRe coverCrit_UNR_GH Voltage High - Critical(NonRecover -> Crit) (UNR_GH)	164107	CRITICAL	%s	
wfmMemorySingleBitError14 Memory - Single Bit Error 14	153088	INFORMA TIONAL	%s	
wfmFanPreFailOKWarn_LNC_ GL Fan Pre-Fail (OK -> Warn) (LNC_GL)	262400	MAJOR	%s	
wfmMemorySingleBitError15 Memory - Single Bit Error 15	153472	INFORMA TIONAL	%s	
wfmFanIsWorkingOK_LNC_GH Fan is working (OK) (LNC_GH)	262401	INFORMA TIONAL	%s	
wfmMemorySingleBitError16 Memory - Single Bit Error 16	153984	INFORMA TIONAL	%s	

表 : INTEL-WFM-MIB ト ラッ プ (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmFanFailedWarnCrit_LC_GL Fan Failed (Warn -> Crit) (LC_GL)	262402	CRITICAL	%s	
wfmMemorySingleBitError17 Memory - Single Bit Error 17	154496	INFORMATIONAL	%s	
wfmFanPreFailCritWarn_LC_GH Fan Pre-Fail(Crit -> Warn) (LC_GH)	262403	MAJOR	%s	
wfmMemorySingleBitError18 Memory - Single Bit Error 18	154624	INFORMATIONAL	%s	
wfmFanFailedCritNonRecover_LNR_GL Fan Failed (Crit -> NonRecover) (LNR_GL)	262404	CRITICAL	%s	
wfmMemorySingleBitError19 Memory - Single Bit Error 19	154752	INFORMATIONAL	%s	
wfmFanFailedNonRecoverCrit_LNR_GH Fan Failed (NonRecover -> Crit) (LNR_GH)	262405	CRITICAL	%s	
wfmMemorySingleBitError20 Memory - Single Bit Error 20	155392	INFORMATIONAL	%s	
wfmFanOK Fan OK	262912	INFORMATIONAL	%s	
wfmMemorySingleBitError21 Memory - Single Bit Error 21	155904	INFORMATIONAL	%s	
wfmFanFailed Fan Failed	262913	CRITICAL	%s	
wfmMemorySingleBitError22 Memory - Single Bit Error 22	156416	INFORMATIONAL	%s	
wfmFanPredictiveFailureDeasserted Fan predictive failure deasserted	263168	MAJOR	%s	
wfmMemorySingleBitError23 Memory - Single Bit Error 23	157184	INFORMATIONAL	%s	
wfmFanPredictiveFailureAsserted Fan predictive failure asserted	263169	MAJOR	%s	
wfmMemorySingleBitError24 Memory - Single Bit Error 24	157696	INFORMATIONAL	%s	
wfmFanRemoved Fan removed	264192	INFORMATIONAL	%s	
wfmMemorySingleBitError25 Memory - Single Bit Error 25	158208	INFORMATIONAL	%s	
wfmFanRestoredreplaced Fan restored/replaced	264193	INFORMATIONAL	%s	
wfmMemorySingleBitError26 Memory - Single Bit Error 26	158464	INFORMATIONAL	%s	
wfmMemoryFanBoxRemoved Memory fan box removed	264196	INFORMATIONAL	%s	

表 : INTEL-WFM-MIB トラブル (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmFANSensorSpecificErrorReported FAN Sensor specific Error reported	290560	INFORMATIONAL	%s	
wfmMemoryFanBoxErrorReported Memory fan box error reported	290563	INFORMATIONAL	%s	
wfmMemorySingleBitError27 Memory - Single Bit Error 27	159104	INFORMATIONAL	%s	
wfmMemoryFanBoxRestoredreplaced Memory fan box restored/replaced	264197	INFORMATIONAL	%s	
wfmFanIsWorkingOK_LNC_GL Fan is working (OK) (LNC_GL)	295168	INFORMATIONAL	%s	
wfmMemorySingleBitError28 Memory - Single Bit Error 28	159872	INFORMATIONAL	%s	
wfmFanFullyRedundant Fan fully redundant	264960	INFORMATIONAL	%s	
wfmFanPreFailOKWarn_LNC_GH Fan Pre-Fail(OK -> Warn) (LNC_GH)	295169	MAJOR	%s	
wfmMemorySingleBitError29 Memory - Single Bit Error 29	162304	INFORMATIONAL	%s	
wfmFanRedundancyLost Fan redundancy lost	264961	INFORMATIONAL	%s	
wfmFanRedundancyDegraded Fan redundancy degraded	264962	INFORMATIONAL	%s	
wfmFanNonRedundantfromRedundant Fan non redundant (from redundant)	264963	INFORMATIONAL	%s	
wfmFanNonRedundantsufficientResources Fan non redundant (sufficient resources)	264964	INFORMATIONAL	%s	
wfmFanNonRedundantsufficientResources Fan non redundant (insufficient resources)	264965	INFORMATIONAL	%s	
wfmFanRedundancyDegradedfromRedundant Fan redundancy degraded (from redundant)	264966	INFORMATIONAL	%s	
wfmFanRedundancyDegradedfromNonRedundant Fan redundancy degraded (from non redundant)	264967	INFORMATIONAL	%s	

表 : INTEL-WFM-MIB ト ラッ プ (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmFanPreFailCritWarn_LC_GL Fan Pre-Fail(Crit -> Warn) (LC_GL)	295170	MAJOR	%s	
wfmFanFailedWarnCrit_LC_GH Fan Failed (Warn -> Crit) (LC_GH)	295171	CRITICAL	%s	
wfmFanFailedNonRecoverCrit_LNR_GL Fan Failed (NonRecover -> Crit) (LNR_GL)	295172	CRITICAL	%s	
wfmFanFailedCritNonRecover_LNR_GH Fan Failed (Crit -> NonRecover) (LNR_GH)	295173	CRITICAL	%s	
wfmPhysicalIntrusionclosed Physical intrusion (closed)	328448	INFORMATIONAL	%s	
wfmPhysicalIntrusionopened Physical intrusion (opened)	328449	MINOR	%s	
wfmChassisIntrusionopened Chassis Intrusion (opened)	356096	MINOR	%s	
wfmDriveBayIntrusionopened DriveBay Intrusion (opened)	356097	MINOR	%s	
wfmIOAreaIntrusionopened I/O area Intrusion (opened)	356098	MAJOR	%s	
wfmCPUAreaIntrusionopened CPU area Intrusion (opened)	356099	MAJOR	%s	
wfmLANLeashLostCableUnplugged LAN Leash lost (Cable unplugged)	356100	MAJOR	%s	
wfmUnauthorizedDockundock Unauthorized dock/undock	356101	MAJOR	%s	
wfmFANAreaIntrusionopened FAN Area Intrusion (opened)	356102	MINOR	%s	
wfmChassisIntrusion Chassis Intrusion	356224	INFORMATIONAL	%s	
wfmChassisIntrusionclosed Chassis Intrusion (closed)	388864	INFORMATIONAL	%s	
wfmDriveBayIntrusionclosed DriveBay Intrusion (closed)	388865	INFORMATIONAL	%s	
wfmIOAreaIntrusionclosed I/O area Intrusion (closed)	388866	INFORMATIONAL	%s	
wfmCPUAreaIntrusionclosed CPU area Intrusion (closed)	388867	INFORMATIONAL	%s	
wfmLANLeashReconnected LAN Leash reconnected	388868	INFORMATIONAL	%s	
wfmUnauthorizedDockundock Unauthorized dock/undock	388869	INFORMATIONAL	%s	
wfmFANAreaIntrusionclosed FAN Area Intrusion (closed)	388870	INFORMATIONAL	%s	

表 : INTEL-WFM-MIB ト ラッ プ (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmSecureModeViolationAttempFrontPanelButtonReleased Secure mode violation attempt: front panel button released	393984	INFORMATIONAL	%s	
wfmSecureModeViolationAttempFrontPanelButtonPressed Secure mode violation attempt: front panel button pressed	393985	INFORMATIONAL	%s	
wfmSecureModeViolationAttempFrontPanelButtonPressed Secure mode violation attempt: front panel button pressed	421632	INFORMATIONAL	%s	
wfmSecureModeViolationAttempPrebootUSERPasswordWrong Secure mode violation attempt: Pre-boot USER password wrong	421633	INFORMATIONAL	%s	
wfmSecureModeViolationAttempPrebootSETUPPasswordWrong Secure mode violation attempt: Pre-boot SETUP password wrong	421634	INFORMATIONAL	%s	
wfmSecureModeViolationAttempPrebootNETWORKPasswordWrong Secure mode violation attempt: Pre-boot NETWORK password wrong	421635	INFORMATIONAL	%s	
wfmSecureModeViolationAttempPrebootOTHERPasswordWrong Secure mode violation attempt: Pre-boot OTHER password wrong	421636	INFORMATIONAL	%s	
wfmSecureModeViolationAttempOutofbandAccessPasswordWrong Secure mode violation attempt: Out-of-band access password wrong	421637	INFORMATIONAL	%s	
wfmCPUPredictiveFailure CPU Predictive Failure	459777	MAJOR	%s	
wfmCPUInternalError CPU internal error	487168	CRITICAL	%s	
wfmCPUThermalTripFailure CPU thermal trip failure	487169	CRITICAL	%s	
wfmCPUFailedBuiltInSelftestDisabledFRB1 CPU failed built-in selftest; disabled (FRB1)	487170	CRITICAL	%s	

表 : INTEL-WFM-MIB ト ラッ プ (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmCPUHungDuringPOSTDisabledFRB2 CPU hung during POST; disabled (FRB2)	487171	CRITICAL	%s	
wfmCPUStartupInitializationFailureDisabledFRB3 CPU startup/initialization failure; disabled (FRB3)	487172	CRITICAL	%s	
wfmCPUConfigurationError CPU configuration error	487173	MAJOR	%s	
wfmUncorrectableCPUcomplex Error Uncorrectable CPU-complex error	487174	CRITICAL	%s	
wfmCPUPresenceDetected CPU presence detected	487175	INFORMATIONAL	%s	
wfmCPUDisabled CPU Disabled	487176	INFORMATIONAL	%s	
wfmCPUTerminatorPresenceDetected CPU terminator presence detected	487177	INFORMATIONAL	%s	
wfmCPUThrottledstart CPU throttled (start)	487178	MAJOR	%s	
wfmCpuClockUnthrottle CPU clock unthrottle	487306	INFORMATIONAL	%s	
wfmCPUFailedBISTDisabledFRB1 CPU failed BIST; disabled (FRB1)	487330	CRITICAL	%s	
wfmCPUDisabled CPU Disabled	487336	INFORMATIONAL	%s	
wfmCPUNotPresent CPU not present	519943	INFORMATIONAL	%s	
wfmCPUTerminatorNotDetected CPU terminator not detected	519945	INFORMATIONAL	%s	
wfmCPUThrottleEnd CPU throttle end	519946	INFORMATIONAL	%s	
wfmCPUEnabled CPU Enabled	520104	INFORMATIONAL	%s	
wfmPowerSupplyInserted Power supply inserted	552704	INFORMATIONAL	%s	
wfmPowerSupplyAuxDCPowerFail Power supply Aux/DC power fail	552705	CRITICAL	%s	
wfmPowerSupplyPredictiveFailure Power supply predictive failure	552706	CRITICAL	%s	
wfmPowerSupplyInputLostACDC Power supply input lost (AC/DC)	552707	CRITICAL	%s	

表 : INTEL-WFM-MIB トラブル (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmPowerSupplyInputLostOrOutofrange Power supply input lost or out-of-range	552708	CRITICAL	%s	
wfmPowerSupplyInputOutOfRangeButPresent Power supply input out-of-range, but present	552709	CRITICAL	%s	
wfmPowerSupplyConfigurationError Power supply configuration error	552710	MAJOR	%s	
wfmPowerSupplyRemoved Power supply removed	585472	INFORMATIONAL	%s	
wfmPowerUnitCriticalNumberOfPS Power unit critical number of PS	592390	INFORMATIONAL	%s	
wfmPowerUnitRedundancyRegained Power unit redundancy regained	592640	INFORMATIONAL	%s	
wfmPowerUnitRedundancyLost Power unit redundancy lost	592641	INFORMATIONAL	%s	
wfmPowerUnitPowerOffPowerDown Power Unit - Power Off / Power Down	618240	INFORMATIONAL	%s	
wfmPowerUnitPowerCycle Power Unit - Power cycle	618241	INFORMATIONAL	%s	
wfmPowerUnit240VAPowerDown Power Unit - 240 VA Power Down	618242	INFORMATIONAL	%s	
wfmInterlockPowerDown Interlock Power down	618243	INFORMATIONAL	%s	
wfmPowerUnitACLost Power unit - A/C lost	618244	CRITICAL	%s	
wfmPowerUnitSoftPowerControlFailure Power unit - Soft Power Control failure	618245	MAJOR	%s	
wfmPowerUnitFailure Power unit failure	618246	MAJOR	%s	
wfmPowerUnitPredictiveFailure Power unit predictive failure	618247	MAJOR	%s	
wfmPowerUnitPowerOn Power Unit - Power On	651008	INFORMATIONAL	%s	
wfmPowerUnit240VAPowerRestored Power Unit - 240 VA Power restored	651010	INFORMATIONAL	%s	
wfmInterlockPowerRestored Interlock Power restored	651011	INFORMATIONAL	%s	

表 : INTEL-WFM-MIB ト ラップ (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmPowerUnitPowerRestored Power unit - Power restored	651012	INFORMATIONAL	%s	
wfmPowerUnitOK Power unit OK	651014	INFORMATIONAL	%s	
wfmMultipleFanFailure Multiple fan failure	683776	INFORMATIONAL	%s	
wfmMemoryPDAEventModule Memory - PDA event Module	787617	INFORMATIONAL	%s	
wfmMemorySinglebitError Memory - Single-bit error	814848	MINOR	%s	
wfmMemoryMultibitError Memory - Multi-bit error	814849	CRITICAL	%s	
wfmMemoryParityError Memory - Parity error	814850	CRITICAL	%s	
wfmMemoryScrubFailed Memory - scrub failed	814851	INFORMATIONAL	%s	
wfmMemoryDeviceDisabled Memory - device disabled	814852	INFORMATIONAL	%s	
wfmMemoryErrorLoggingLimi tReached Memory - error logging limit reached	814853	MAJOR	%s	
wfmMemoryPresenceDetected Memory - presence detected	814854	INFORMATIONAL	%s	
wfmMemoryConfigurationError Memory - configuration error	814855	MAJOR	%s	
wfmMemorySpare Memory - spare	814856	INFORMATIONAL	%s	
wfmMemoryDeviceDisabled Memory - device disabled	815012	INFORMATIONAL	%s	
wfmMemoryDeviceRemoved Memory - device removed	847622	INFORMATIONAL	%s	
wfmMemoryDeviceEnabled Memory - device enabled	847780	INFORMATIONAL	%s	
wfmHotswapCageRemoved Hotswap cage removed	854016	INFORMATIONAL	%s	
wfmHotswapCageInserted Hotswap cage inserted	854017	INFORMATIONAL	%s	
wfmPOSTMemoryResizedConf igChanged POST - Memory Resized/ Config changed	945920	MAJOR	%s	
wfmPOSTGenericError POST - Generic error	983040	INFORMATIONAL	%s	
wfmPOSTError POST - Error	1011456	CRITICAL	%s	
wfmPOSTSystemFirmwareHA NG POST - System Firmware HANG	1011457	CRITICAL	%s	

表 : INTEL-WFM-MIB トラブル (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmPOSTSystemFirmwarePROGRESS POST - System Firmware PROGRESS	1011458	INFORMATIONAL	%s	
wfmCorrectableMemoryErrorLoggingDisabled Correctable memory error logging disabled	1076992	INFORMATIONAL	%s	
wfmLoggingDisabledForErrorType Logging disabled for error type	1076993	INFORMATIONAL	%s	
wfmEventLogCleared Event log cleared	1076994	INFORMATIONAL	%s	
wfmAllEventLoggingDisabled All Event logging disabled	1076995	INFORMATIONAL	%s	
wfmSELFull SEL full	1076996	INFORMATIONAL	%s	
wfmSELAlmostFull SEL almost full	1076997	INFORMATIONAL	%s	
wfmCorrectableMemoryErrorLogging Correctable memory error logging	1077120	INFORMATIONAL	%s	
wfmCorrectableMemoryErrorLoggingEnabled Correctable memory error logging enabled	1109760	INFORMATIONAL	%s	
wfmLoggingEnabledForErrorType Logging enabled for error type	1109761	INFORMATIONAL	%s	
wfmAllEventLoggingEnabled All Event logging enabled	1109763	INFORMATIONAL	%s	
wfmWatchdogBIOSWatchdogReset Watchdog: BIOS Watchdog Reset	1142528	INFORMATIONAL	%s	
wfmWatchdogOSWatchdogReset Watchdog: OS Watchdog Reset	1142529	CRITICAL	%s	
wfmWatchdogOSWatchdogShutdown Watchdog: OS Watchdog Shutdown	1142530	CRITICAL	%s	
wfmWatchdogOSWatchdogPowerDown Watchdog: OS Watchdog Power Down	1142531	CRITICAL	%s	
wfmWatchdogOSWatchdogPowerCycle Watchdog: OS Watchdog Power Cycle	1142532	CRITICAL	%s	

表 : INTEL-WFM-MIB ト ラッ プ (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmWatchdogOSWatchdogNM IDiagnosticInt Watchdog: OS Watchdog NMI/ Diagnostic Int.	1142533	CRITICAL	%s	
wfmWatchdogOSWatchdogStat usExpired Watchdog: OS Watchdog Status Expired	1142534	CRITICAL	%s	
wfmWatchdogOSWatchdogPret imeoutInterruptNonNMI Watchdog: OS Watchdog pre- timeout Interrupt, non-NMI	1142535	INFORMA TIONAL	%s	
wfmUnspecifiedSystemEvent Unspecified system event	1206016	INFORMA TIONAL	%s	
wfmSystemReconfigured System reconfigured	1208064	MINOR	%s	
wfmSystemBootPOSTComplete System boot (POST complete)	1208065	INFORMA TIONAL	%s	
wfmUndeterminedSystemHard wareFailure Undetermined system hardware failure	1208066	CRITICAL	%s	
wfmEntryAddedToAuxiliaryLog Entry added to Auxiliary Log	1208067	INFORMA TIONAL	%s	
wfmEmergencyPowerOff Emergency PowerOff	1208068	INFORMA TIONAL	Emergency PowerOff, if Server failed to boot Diagnostic System. Details: %s	
wfmTimestampClockSynchEve nt Timestamp Clock Synch event	1208069	INFORMA TIONAL	%s	
wfmSystemReconfigurationEve ntDetected System reconfiguration event detected	1208070	INFORMA TIONAL	%s	
wfmFrontPanelNMIDiagnosticI nterrupt Front Panel NMI / Diagnostic Interrupt	1273600	CRITICAL	%s	
wfmBusTimeout Bus timeout	1273601	CRITICAL	%s	
wfmIOChannelCheckNMI I/O channel check NMI	1273602	CRITICAL	%s	
wfmSoftwareNMI Software NMI	1273603	CRITICAL	%s	
wfmPCIPERR PCI PERR	1273604	CRITICAL	%s	
wfmPCISERR PCI SERR	1273605	CRITICAL	%s	
wfmEISAFailsafeTimerExpired EISA Failsafe timer expired	1273606	CRITICAL	%s	
wfmCorrectableBusError Correctable bus error	1273607	CRITICAL	%s	
wfmUncorrectableBusError Uncorrectable bus error	1273608	CRITICAL	%s	

表 : INTEL-WFM-MIB トラブル (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmFatalNMIPort61hBit7 Fatal NMI (Port 61h Bit 7)	1273609	CRITICAL	%s	
wfmPOWERButtonPressed POWER Button pressed	1339136	INFORMATIONAL	%s	
wfmSLEEPButtonPressed SLEEP Button pressed	1339137	INFORMATIONAL	%s	
wfmRESETButtonPressed RESET Button pressed	1339138	INFORMATIONAL	%s	
wfmFRULatchOpen FRU - latch open	1339139	INFORMATIONAL	%s	
wfmFRUServiceRequested FRU - service requested	1339140	INFORMATIONAL	%s	
wfmSCSIDuplexBoardHasBeenRemoved SCSI Duplex Board has been removed	1378400	INFORMATIONAL	%s	
wfmSCSIDuplexBoardHasBeenInserted SCSI Duplex Board has been inserted	1378401	INFORMATIONAL	%s	
wfmCacheProtocolAndParityError Cache protocol and parity error	1640354	INFORMATIONAL	%s	
wfmSoftPowerControlFailed Soft Power Control Failed	1666816	INFORMATIONAL	%s	
wfmACPIHardwareFailure ACPI hardware failure	1667136	INFORMATIONAL	%s	
wfmCageSCSIBusType Cage SCSI bus type	1770273	INFORMATIONAL	%s	
wfmCableConnected Cable connected	1771520	INFORMATIONAL	%s	
wfmCableDisconnected Cable disconnected	1771521	INFORMATIONAL	%s	
wfmTerminatorAttached Terminator attached	1837056	INFORMATIONAL	%s	
wfmTerminatorRemoved Terminator removed	1837057	INFORMATIONAL	%s	
wfmTerminatorRemovedFromCage Terminator removed from cage	1837088	INFORMATIONAL	%s	
wfmTerminatorAttachedToCage Terminator attached to cage	1837089	INFORMATIONAL	%s	
wfmSystemRebootedByPowerUp System rebooted by PowerUp	1928960	INFORMATIONAL	%s	
wfmSystemRebootedByHardReset System rebooted by Hard Reset	1928961	INFORMATIONAL	%s	
wfmSystemRebootedByWarmReset System rebooted by Warm Reset	1928962	INFORMATIONAL	%s	

表 : INTEL-WFM-MIB ト ラッ プ (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmSystemRebootedToPXEBoot System rebooted to PXE Boot	1928963	INFORMATIONAL	%s	
wfmDiagnosticSystemBoot Diagnostic System boot	1928964	INFORMATIONAL	Server boots to Diagnostic System. Details: %s	
wfmOSRuntimeSoftwareInitiatedHardReset OS / runtime software initiated Hard Reset	1928965	INFORMATIONAL	%s	
wfmOSRuntimeSoftwareInitiatedSoftReset OS / runtime software initiated Soft Reset	1928966	INFORMATIONAL	%s	
wfmSystemRestart System Restart	1928967	INFORMATIONAL	%s	
wfmNoBootableMedia No bootable media	1994496	INFORMATIONAL	%s	
wfmNonBootableDisketteLeftInDrive Non bootable diskette left in drive	1994497	INFORMATIONAL	%s	
wfmPXEServerNotFound PXE Server not found	1994498	INFORMATIONAL	%s	
wfmInvalidBootSector Invalid boot sector	1994499	INFORMATIONAL	%s	
wfmTimeoutWaitingForUserSelectionOfBootSource Timeout waiting for user selection of boot source	1994500	INFORMATIONAL	%s	
wfmABootCompleted A: Boot completed	2060032	INFORMATIONAL	%s	
wfmCBootCompleted C: Boot completed	2060033	INFORMATIONAL	%s	
wfmPXEBBootCompleted PXE Boot completed	2060034	INFORMATIONAL	%s	
wfmDiagnosticBootCompleted Diagnostic Boot completed	2060035	INFORMATIONAL	%s	
wfmCDROMBootCompleted CD-ROM Boot completed	2060036	INFORMATIONAL	%s	
wfmROMBootCompleted ROM Boot completed	2060037	INFORMATIONAL	%s	
wfmBootCompletedBootDeviceNotSpecified Boot completed - boot device not specified	2060038	INFORMATIONAL	%s	
wfmStopDuringOSLoadInitialization Stop during OS load / initialization	2125568	MAJOR	%s	
wfmRuntimeStop Run-time Stop	2125569	MAJOR	%s	
wfmOSGracefulCriticalStop OS Graceful Critical Stop	2125570	MAJOR	%s	

表 : INTEL-WFM-MIB トラブル (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmOSGracefulShutdown OS Graceful Shutdown	2125571	INFORMATONAL	%s	
wfmSoftShutdownInitiatedByPEF Soft Shutdown initiated by PEF	2125572	INFORMATONAL	%s	
wfmAgentNotResponding Agent Not Responding	2125573	INFORMATONAL	%s	
wfmPCIHotPlugSlotFaultAsserted PCI Hot Plug Slot fault asserted	2191104	MAJOR	%s	
wfmPCIHotPlugSlotIdentifyAsserted PCI Hot Plug Slot identify asserted	2191105	INFORMATONAL	%s	
wfmPCIHotPlugSlotDeviceInstalled PCI Hot Plug Slot Device installed	2191106	INFORMATONAL	%s	
wfmPCIHotPlugSlotReadyForDeviceInstallation PCI Hot Plug Slot ready for device installation	2191107	INFORMATONAL	%s	
wfmPCIHotPlugSlotReadyForDeviceRemoval PCI Hot Plug Slot ready for device removal	2191108	INFORMATONAL	%s	
wfmPCIHotPlugSlotPoweredOff PCI Hot Plug Slot powered off	2191109	INFORMATONAL	%s	
wfmPCIHotPlugSlotRemovalRequest PCI Hot Plug Slot removal request	2191110	INFORMATONAL	%s	
wfmPCIHotPlugSlotInterlockAssertedLatchNotClosed PCI Hot Plug Slot Interlock asserted (latch not closed)	2191111	INFORMATONAL	%s	
wfmPCIHotPlugSlotDisabled PCI Hot Plug Slot disabled	2191112	INFORMATONAL	%s	
wfmPCIHotPlugSlotHoldsSpareDevice PCI Hot Plug Slot holds spare device	2191113	INFORMATONAL	%s	
wfmPCIHotPlugSlotFaultDeasserted PCI Hot Plug Slot fault deasserted	2223872	INFORMATONAL	%s	
wfmPCIHotPlugSlotIdentifyDeasserted PCI Hot Plug Slot identify deasserted	2223873	INFORMATONAL	%s	
wfmPCIHotPlugSlotDeviceRemoved PCI Hot Plug Slot Device removed	2223874	INFORMATONAL	%s	

表 : INTEL-WFM-MIB ト ラッ プ (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmPCIHotPlugSlotPoweredOn PCI Hot Plug Slot powered on	2223877	INFORMATIONAL	%s	
wfmPCIHotPlugSlotEnabled PCI Hot Plug Slot enabled	2223880	INFORMATIONAL	%s	
wfmACPIPowerStateWorkingS0G0 ACPI Power State: working (S0/G0)	2256640	INFORMATIONAL	%s	
wfmACPIPowerStateSleepingS1 ACPI Power State: sleeping (S1)	2256641	INFORMATIONAL	%s	
wfmACPIPowerStateSleepingS2 ACPI Power State: sleeping (S2)	2256642	INFORMATIONAL	%s	
wfmACPIPowerStateSleepingS3 ACPI Power State: sleeping (S3)	2256643	INFORMATIONAL	%s	
wfmACPIPowerStateSleepingS4SuspendToDisk ACPI Power State: sleeping (S4 - Suspend to disk)	2256644	INFORMATIONAL	%s	
wfmACPIPowerStateSleepingS5SoftOff ACPI Power State: sleeping (S5 - soft off)	2256645	INFORMATIONAL	%s	
wfmACPIPowerStateSleepingS4S5 ACPI Power State: sleeping (S4/S5)	2256646	INFORMATIONAL	%s	
wfmACPIPowerStateSleepingG7MechanicalOff ACPI Power State: sleeping (G7 - mechanical off)	2256647	INFORMATIONAL	%s	
wfmACPIPowerStateSleepingS1S2S3 ACPI Power State: sleeping (S1/S2/S3)	2256648	INFORMATIONAL	%s	
wfmACPIPowerStateSleepingG1 ACPI Power State: sleeping (G1)	2256649	INFORMATIONAL	%s	
wfmACPIPowerStateSleepingS5ByOverride ACPI Power State: sleeping (S5 - by override)	2256650	INFORMATIONAL	%s	
wfmACPIPowerStateLegacyONState ACPI Power State: Legacy ON State	2256651	INFORMATIONAL	%s	
wfmACPIPowerStateLegacyOFFState ACPI Power State: Legacy OFF State	2256652	INFORMATIONAL	%s	
wfmACPIPowerStateUnknown ACPI Power State: unknown	2256653	INFORMATIONAL	%s	

表 : INTEL-WFM-MIB トラブル (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmACPIPowerStateUnknown ACPI Power State: unknown)	2256654	INFORMATI ONAL	%s	
wfmACPIPowerDown ACPI Power down	2256710	INFORMATI ONAL	%s	
wfmWatchdogTimerExpired Watchdog: Timer Expired	2322176	CRITICAL	%s	
wfmWatchdogHardReset Watchdog: Hard Reset	2322177	CRITICAL	%s	
wfmWatchdogPowerDown Watchdog: Power Down	2322178	CRITICAL	%s	
wfmWatchdogPowerCycle Watchdog: Power Cycle	2322179	CRITICAL	%s	
wfmWatchdogHardwareWatchdogExpired Watchdog: Hardware Watchdog expired	2322180	CRITICAL	%s	
wfmWatchdogTimerInterrupt Watchdog: Timer Interrupt	2322184	CRITICAL	%s	
wfmEntityPresentadded_disabled Entity present/added (disabled)	2453248	INFORMATI ONAL	%s	
wfmEntityAbsentremoved_disabled Entity absent/removed (disabled)	2453249	INFORMATI ONAL	%s	
wfmEntityDisabled Entity disabled	2453250	INFORMATI ONAL	%s	
wfmEntityAbsentremoved_enabled Entity absent/removed (enabled)	2486016	INFORMATI ONAL	%s	
wfmEntityPresentadded_enabled Entity present/added (enabled)	2486017	INFORMATI ONAL	%s	
wfmEntityEnabled Entity enabled	2486018	INFORMATI ONAL	%s	
wfmSystemEventlogAboveWarningLevel System Eventlog above warning level	2490711	INFORMATI ONAL	%s	
wfmSELAlmostFilledUp SEL almost filled up	2518871	INFORMATI ONAL	%s	
wfmLANHeartbeatLost LAN Heartbeat lost	2584320	INFORMATI ONAL	%s	
wfmLANHeartbeat LAN Heartbeat	2584321	INFORMATI ONAL	%s	
wfmSensorAccessDegraded Sensor access degraded	2649856	MINOR	%s	
wfmControllerAccessDegraded OrUnavailable Controller access degraded or unavailable	2649857	MAJOR	%s	
wfmManagementControllerOffline Management Controller off-line	2649858	MAJOR	%s	

表 : INTEL-WFM-MIB ト ラッ プ (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmManagementControllerUnavailable Management Controller unavailable	2649859	CRITICAL	%s	
wfmSensorFailure Sensor Failure	2649860	MINOR	%s	
wfmFRUFailure FRU Failure	2649861	MINOR	%s	
wfmBatteryLowPredictiveFailure Battery low (predictive failure)	2715392	MINOR	%s	
wfmBatteryFailed Battery failed	2715393	MAJOR	%s	
wfmBatteryPresenceDetected Battery presence detected	2715394	INFORMATIONAL	%s	
wfmSESSIONActivated SESSION activated	2780928	INFORMATIONAL	%s	
wfmSESSIONDeactivated SESSION De-activated	2780929	INFORMATIONAL	%s	
wfmHWChangeDetected HW change detected	2846464	INFORMATIONAL	%s	
wfmFWOrSWChangeDetected FW or SW change detected	2846465	INFORMATIONAL	%s	
wfmHWIncompatibilityDetected HW incompatibility detected	2846466	INFORMATIONAL	%s	
wfmFWOrSWIncompatibilityDetected FW or SW incompatibility detected	2846467	INFORMATIONAL	%s	
wfmInvalidUnsupportedHWVersionDetected Invalid/unsupported HW version detected	2846468	INFORMATIONAL	%s	
wfmInvalidUnsupportedFWOrSWVersionDetected Invalid/unsupported FW or SW version detected	2846469	INFORMATIONAL	%s	
wfmHWChangeSuccessful HW change successful	2846470	INFORMATIONAL	%s	
wfmFWOrSWChangeSuccessful FW or SW change successful	2846471	INFORMATIONAL	%s	
wfmHWChangeFailed HW change failed	2879238	INFORMATIONAL	%s	
wfmFWOrSWChangeFailed FW or SW change failed	2879239	INFORMATIONAL	%s	
wfmOEMEventlogEntryC0 OEM Eventlog Entry (C0)	12611328	INFORMATIONAL	%s	
wfmOEMEventlogEntryC1StateDeAsserted OEM Eventlog Entry (C1): State DeAsserted	12649216	INFORMATIONAL	%s	

表 : INTEL-WFM-MIB トラブル (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmOEMEventlogEntryC1Stat eAsserted OEM Eventlog Entry (C1): State Asserted	12649217	INFORMATI ONAL	%s	
wfmOEMEventlogEntryC1 OEM Eventlog Entry (C1)	12676864	INFORMATI ONAL	%s	
wfmOEMEventlogEntryC2 OEM Eventlog Entry (C2)	12742400	INFORMATI ONAL	%s	
wfmOEMEventlogEntryC3Stat eDeAsserted OEM Eventlog Entry (C3): State DeAsserted	12780288	INFORMATI ONAL	%s	
wfmOEMEventlogEntryC3Stat eAsserted OEM Eventlog Entry (C3): State Asserted	12780289	INFORMATI ONAL	%s	
wfmOEMEventlogEntryC3 OEM Eventlog Entry (C3)	12807936	INFORMATI ONAL	v	
wfmOEMEventlogEntryC4 OEM Eventlog Entry (C4)	12873472	INFORMATI ONAL	%s	
wfmOEMEventlogEntryC5 OEM Eventlog Entry (C5)	12939008	INFORMATI ONAL	%s	
wfmOEMEventlogEntryC6 OEM Eventlog Entry (C6)	13004544	INFORMATI ONAL	%s	
wfmOEMEventlogEntryC7 OEM Eventlog Entry (C7)	13070080	INFORMATI ONAL	%s	
wfmRSBS2ConsecutiveIllegal RemoteManagementLogins RSB S2: Consecutive illegal remote management logins	13135616	INFORMATI ONAL	%s	
wfmRSBS2RemoteManagementUserLogin RSB S2: Remote management user login	13135617	INFORMATI ONAL	%s	
wfmRSBS2RemoteManagementUserLogout RSB S2: Remote management user logout	13135618	INFORMATI ONAL	%s	
wfmRSBS2RemoteManagementUserAutologout RSB S2: Remote management user auto-logout	13135619	INFORMATI ONAL	%s	
wfmRSBS2RemoteManagementUserConnectionLost RSB S2: Remote management user connection lost	13135620	INFORMATI ONAL	%s	
wfmRSBS2RemoteManagementUserDialbackFailed RSB S2: Remote management user dialback failed	13135621	INFORMATI ONAL	%s	

表 : INTEL-WFM-MIB ト ラッ プ (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmRSBS2IntegratedRemoteAssistantConfigurationResetToDefaults RSB S2: Integrated Remote Assistant configuration reset to defaults	13135622	INFORMATIONAL	%s	
wfmUnusedUnknownUserLog Unused/Unknown User Log	13135623	INFORMATIONAL	%s	
wfmCLITelnetConsecutiveIllegalLogins CLI/Telnet consecutive illegal logins	13135624	MAJOR	%s	
wfmCLITelnetUserLogin CLI/Telnet user login	13135625	INFORMATIONAL	%s	
wfmCLITelnetUserLogout CLI/Telnet user logout	13135626	INFORMATIONAL	%s	
wfmCLITelnetUserAutologout CLI/Telnet user auto-logout	13135627	INFORMATIONAL	%s	
wfmCLITelnetUserConnectionLost CLI/Telnet user connection lost	13135628	INFORMATIONAL	%s	
wfmCLITelnetUserDialbackFailed CLI/Telnet user dialback failed	13135629	INFORMATIONAL	%s	
wfmCLITelnetUserLoginFailed CLI/Telnet user login failed	13135630	MAJOR	%s	
wfmCLITelnetUnusedUnknownUserLog CLI/Telnet Unused/Unknown User Log	13135631	INFORMATIONAL	%s	
wfmRemoteMgrLoginFailed Remote mgr login failed	13135633	INFORMATIONAL	%s	
wfmRSBS2RemoteinitiatedCtrlAltDel RSB S2: Remote-initiated <Ctrl-Alt-Del>	13201152	INFORMATIONAL	%s	
wfmRemoteMgrLogoutFailed Remote mgr logout failed	13135634	INFORMATIONAL	%s	
wfmRSBS2RemoteinitiatedReset RSB S2: Remote-initiated reset	13201153	INFORMATIONAL	%s	
wfmRSBS2RemoteinitiatedPowerCycle RSB S2: Remote-initiated power cycle	13201154	INFORMATIONAL	%s	
wfmRSBS2RemoteinitiatedPowerDown RSB S2: Remote-initiated power down	13201155	INFORMATIONAL	%s	
wfmRSBS2RemoteinitiatedPowerUp RSB S2: Remote-initiated power up	13201156	INFORMATIONAL	%s	

表 : INTEL-WFM-MIB トラブル (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmRSBS2AutomaticPowerShutdownDueToCriticalCondition RSB S2: Automatic power shutdown due to critical condition	13201157	INFORMATIONAL	%s	
wfmRSBS2FrontPanelPowerDown RSB S2: Front panel power down	13201158	INFORMATIONAL	%s	
wfmRSBS2AutomaticGracefulShutdown RSB S2: Automatic graceful shutdown	13201159	INFORMATIONAL	%s	
wfmRSBS2RemoteinitiatedGracefulShutdown RSB S2: Remote-initiated graceful shutdown	13201160	INFORMATIONAL	%s	
wfmRSBS2RemoteinitiatedNMI RSB S2: Remote-initiated NMI	13201161	INFORMATIONAL	%s	
wfmRSBS2RemoteManagementUserPageModemError RSB S2: Remote management user page: Modem error	13266689	INFORMATIONAL	%s	
wfmRSBS2RemoteManagementUserPageNoConnection RSB S2: Remote management user page: No connection	13266690	INFORMATIONAL	%s	
wfmRSBS2RemoteManagementUserTAPPageNoIDPrompt RSB S2: Remote management user TAP page: No ID= prompt	13266691	INFORMATIONAL	%s	
wfmRSBS2RemoteManagementUserTAPPageNoMessageGoAhead RSB S2: Remote management user TAP page: No message go-ahead	13266692	INFORMATIONAL	%s	
wfmRSBS2RemoteManagementUserTAPPageMessageNotAccepted RSB S2: Remote management user TAP page: Message not accepted	13266693	INFORMATIONAL	%s	
wfmRSBS2RemoteManagementUserEmailNotificationFailed RSB S2: Remote management user Email notification failed	13266694	INFORMATIONAL	%s	
wfmRSBS2RemoteCtrlCardMemoryDiagStarted RSB S2: Remote Ctrl. Card Memory diag. started	13332224	INFORMATIONAL	%s	

表 : INTEL-WFM-MIB ト ラッ プ (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmRSBS2RemoteCtrlCardMemoryDiagStoppedOK RSB S2: Remote Ctrl. Card Memory diag. stopped OK	13332225	INFORMATIONAL	%s	
wfmRSBS2RemoteCtrlCardMemoryDiagStoppedByUser RSB S2: Remote Ctrl. Card Memory diag. stopped by user	13332226	INFORMATIONAL	%s	
wfmRSBS2RemoteCtrlCardMemoryDiagStoppedWithError RSB S2: Remote Ctrl. Card Memory diag. stopped with Error	13332227	INFORMATIONAL	%s	
wfmRSBS2RemoteCtrlCardStarted RSB S2: Remote Ctrl. Card Started	13397760	INFORMATIONAL	%s	
wfmRSBS2RemoteCtrlCardInternalError RSB S2: Remote Ctrl. Card Internal error	13397761	INFORMATIONAL	%s	
wfmRSBS2RemoteCtrlCardFirmwareUpdated RSB S2: Remote Ctrl. Card Firmware updated	13397762	INFORMATIONAL	%s	
wfmRSBS2RemoteCtrlCardBatteryLow RSB S2: Remote Ctrl. Card Battery low	13397763	INFORMATIONAL	%s	
wfmRSBS2RemoteCtrlCardBatteryDisconnected RSB S2: Remote Ctrl. Card Battery disconnected	13397764	INFORMATIONAL	%s	
wfmRSBS2RemoteCtrlCardConfigSetToDefault RSB S2: Remote Ctrl. Card Config set to default	13397765	INFORMATIONAL	%s	
wfmRSBS2RemoteCtrlCardIPAddressChanged RSB S2: Remote Ctrl. Card IP Address Changed	13397766	INFORMATIONAL	%s	
wfmRSBS2RemoteCtrlCardBatteryDefective RSB S2: Remote Ctrl. Card Battery Defective	13397767	INFORMATIONAL	%s	
wfmRSBS2RemoteCtrlCardBatteryTooOld RSB S2: Remote Ctrl. Card Battery Too Old	13397768	INFORMATIONAL	%s	
wfmRSBS2RemoteCtrlCardCertificateExpiresInDays RSB S2: Remote Ctrl. Card Certificate Expires in Days	13397769	INFORMATIONAL	%s	

表 : INTEL-WFM-MIB トラブル (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmFSCRomPilotError FSC: RomPilot error	14708640	INFORMATIONAL	%s	
wfmNoMemIdentInfo No memory module ident info	14774016	INFORMATIONAL	%s	
wfmFSCNonFSCMemoryModuleDetected FSC: Non FSC memory module detected	14774176	INFORMATIONAL	%s	
wfmFSCMemoryModuleReplaced FSC: Memory module replaced	14774177	MAJOR	%s	
wfmFSCSystemPoweredOnReason FSCSystem powered on reason	14839712	INFORMATIONAL	%s	
wfmFSCNoUsableCPU FSC: No usable CPU	14905090	CRITICAL	%s	
wfmFSCSystemConfigurationDataError FSC: System configuration Data error	14970624	MAJOR	%s	
wfmFSCResourceConflict FSC: Resource Conflict	14970785	MAJOR	%s	
wfmFSCIRQNotConfigured FSC: IRQ not configured	14970786	MAJOR	%s	
wfmFSCDeviceNodeAllocationError FSC: Device node allocation error	14970787	MAJOR	%s	
wfmFSCExpansionROMSlotNotInitialized FSC: Expansion ROM Slot not initialized	14970788	MAJOR	%s	
wfmFSCFanONRunning FSC: Fan ON, running	15101696	INFORMATIONAL	%s	
wfmFSCFanFailed FSC: Fan failed	15101697	CRITICAL	%s	
wfmFSCFanPrefailure FSC: Fan pre-failure	15101698	MAJOR	%s	
wfmFSCRedundantFanFailed FSC: Redundant fan failed	15101699	MAJOR	%s	
wfmFSCFanNotManageable FSC: Fan not manageable	15101700	INFORMATIONAL	%s	
wfmFSCFanNotInstalled FSC: Fan not installed	15101701	INFORMATIONAL	%s	
wfmFSCPowerSupplyNotPresent FSC: Power supply not present	15232768	INFORMATIONAL	%s	
wfmFSCPowerSupplyOK FSC: Power supply OK	15232769	INFORMATIONAL	%s	
wfmFSCPowerSupplyFailed FSC: Power supply Failed	15232770	MAJOR	%s	
wfmFSCPowerSupplyACFail FSC: Power supply AC fail	15232771	CRITICAL	%s	

表 : INTEL-WFM-MIB ト ラッ プ (ENTERPRISE : enterprises.3183.1.1)

TRAP-TYPE／ アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
wfmFSCPowersupplyDCFail FSC: Power supply DC fail	15232772	MAJOR	%s	
wfmFSCPowersupplyCritTemp FSC: Power supply Crit. Temp.	15232773	MAJOR	%s	
wfmFSCPowersupplyNotManageable FSC: Power supply not manageable	15232774	INFORMATIONAL	%s	
wfmFSCPowersupplyRedundancyPresent FSC: Power supply redundancy present	15298304	INFORMATIONAL	%s	
wfmFSCPowersupplyRedundancyLost FSC: Power supply redundancy lost	15331072	MAJOR	%s	

B.37 EM4513-MIB (unicorn-trap.mib)

EM4513-MIB の ト ラッ プ です。

表 : EM4513-MIB ト ラッ プ (ENTERPRISE : enterprises.259.6.10.39)

TRAP-TYPE／ アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
swTemperatureOverHeatTrap Temperature over heat	1	CRITICAL	Temperature in chassis is too high.	

B.38 NET-SNMP-MIB (net-snmp.mib)

Linux Net-SNMP からの ト ラッ プ です。

表 : NET-SNMP-MIB ト ラッ プ (ENTERPRISE : enterprises.8072.4)

TRAP-TYPE／ アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
nsNotifyStart The agent has started running.	1	INFORMATIONAL	An indication that the agent has started running.	
nsNotifyShutdown The agent is in the process of being shut down.	2	INFORMATIONAL	An indication that the agent is in the process of being shut down.	
nsNotifyRestart The agent has been restarted.	3	INFORMATIONAL	An indication that the agent has been restarted.	

B.39 FSC-THRESHOLD-REPORT-MIB (Threshold.mib)

しきい値マネージャ、レポートマネージャからのトラップです。

表 : FSC-THRESHOLD-REPORT-MIB トラップ

TRAP-TYPE / アラーム タイプ	Specific	重要度	詳細メッセージ (%d : 任意の数字 %s : システム変数)	備考
threshTrapThresholdExceeded Critical Threshold exceeded (critical)	2200	CRITICAL	Threshold exceeded at server %s. The rule %s met condition with value %s. Rule user comment: %s	
threshTrapThresholdExceeded Major Threshold exceeded (major)	2201	MAJOR	Threshold exceeded at server %s. The rule %s met condition with value %s. Rule user comment: %s	
threshTrapThresholdExceeded Minor Threshold exceeded (minor)	2202	MINOR	Threshold exceeded at server %s. The rule %s met condition with value %s. Rule user comment: %s	
threshTrapThresholdExceeded Informational Threshold exceeded (informational)	2203	INFORMATIONAL	Threshold exceeded at server %s. The rule %s met condition with value %s. Rule user comment: %s	
threshTrapThresholdResume Threshold resume	2204	INFORMATIONAL	Threshold resume at server %s. The rule %s does no longer meet condition with value %s. Rule user comment: %s	

ServerView V4.1 L10

トラップリスト
B7FH-3801-01 Z0-00

発行日 2005年8月
発行責任 富士通株式会社

- 本書の内容は、改善のため事前連絡なしに変更することがあります。
- 本書に記載されたデータの使用に起因する、第三者の特許権およびその他の権利の侵害については、当社はその責を負いません。
- 無断転載を禁じます。