

リモートマネジメントコントローラ（iRMC）について

このたびは、弊社の PRIMERGY をお買い上げいただきまして、誠にありがとうございます。本製品をご使用になる上での注意および追記事項がございますので、本書をよくお読みの上、ご使用願います。

平成 19 年 11 月
富士通株式会社

1. リモートマネジメントコントローラ（iRMC）のファームウェアバージョンについて

PRIMERGY に搭載の iRMC ファームウェアは、そのバージョン(V1. 65A 以前と V. 66A 以降)に応じて若干の相違点がございますので、ご留意願います。

[主な相違点]

- ・ 操作画面左のメニューを、一覧表示からツリー表示に変更しました。
- ・ 一部のメニュー名、画面名、ボタン名を変更しました。

変更例	V1. 65A 以前	V1. 66A 以降
メニュー名	User Management メニュー	iRMC User メニュー
画面名	System Event Log 画面	System Event Log Content 画面
ボタン名	toggle (System Information 画面の Identify LED ボタン)	toggle on/off

- ・ 一部の機能を、別画面に移動しました。

変更例	V1. 65A 以前	V1. 66A 以降
Error Halt Settings 機能	Server Management Information 画面	Power On/Off 画面

- ・ VNC Ports、Remote Storage Ports の Port 番号を設定可能としました。
- ・ CPU のステータスアイコンを表示可能としました。
- ・ System Event Log の表示内容をログのエラーレベルによって選択可としました。



iRMC のバージョンは以下の何れかの方法で確認出来ます。

- ・ BIOS 設定画面より確認する方法

サーバ起動時に BIOS の設定画面を起動し、「F1」キーを押下して Info 画面を表示させます。

例) iRMC Firmware 001. 66A

- ・ iRMC Web インタフェースより確認する方法

iRMC Information 画面の“Firmware version”に表示されます。

例) Firmware version 1. 66A

2. リモートマネジメントコントローラ（iRMC）の操作マニュアルについて

iRMC の操作マニュアルは iRMC のバージョンにより 2 種類用意されています。

お使いのバージョンに応じて、適切なマニュアルを参照してください。

(それぞれのマニュアルは、PRIMERGY ドキュメント&ツール CD の[CD-ROM ドライブ]:¥MANUAL¥COMMON フォルダに格納されています)

- ・ iRMC のバージョンが V1. 65A 以前の場合
ServerView V4. 20 ユーザーズガイド (B7FH-4261-01) の第 8 章
“リモートマネジメントコントローラの使用”
を参照願います。
- ・ iRMC のバージョンが V1. 66A 以降の場合
リモートマネジメントコントローラ ユーザーズガイド (B7FH-5251-01)
を参照願います。

注意

PRIMERGY をご購入いただきました時期によっては、掲記マニュアルが PRIMERGY ドキュメント&ツール CD に格納されていない場合がございます。その際はお手数ですが、下記 URL の各機種のマニュアルよりダウンロードいただきたくお願いいたします。

<http://primeserver.fujitsu.com/primergy/catalog.html?from=menuitem>

3. 最新版のダウンロードについて(ご参考)

各種ドライバや BIOS、ファームウェアの最新モジュールを以下のダウンロードサイトにて提供しております。システム安定稼働のため、常に最新モジュールを適用していただくことを推奨します。

<ダウンロードサイト> <http://primeserver.fujitsu.com/primergy/bios/>

以上

About user's guide for integrated Remote Management Controller(iRMC)

Thank you for purchasing the PRIMERGY from us. Before you start using your server, please carefully read the additional notes described below.

November 2007
Fujitsu Limited

1. About the firmware version of integrated Remote Management Controller(iRMC)

Please note that there're slight differences in iRMC user interface depending on iRMC firmware versions.

[Change Summary]

- Style of main menu is changed from list-view to tree-view.
- Some menu/window/button name is changed.

example	V1.65A (or before)	V1.66A (or later)
Menu name	User Management	iRMC User
Window name	System Event Log	System Event Log Content
Button name	toggle (Identify LED button in System Information window)	toggle On/Off

- Move some function to another window.

example	V1.65A (or before)	V1.66A (or later)
Error Halt Settings function	Server Management Information window	Power On/Off window

- Customer selectable port-number for VNC Ports, Remote Storage Ports.
- CPU status icon added.
- Check-box added to select error-level for System Event Log



You could confirm the iRMC firmware version in the following manners.

- BIOS Setup

Turn on the server and push F2 key to go to BIOS setup window. Then open "Info" window by F1 key to check the iRMC firmware version.

example) iRMC Firmware 001.66A

- iRMC Web Interface

Log in to iRMC Web interface and go to "iRMC Information" window. Firmware version can be seen on the window as below.

example) Firmware version 1.66A

2. About user's guide for integrated Remote Management Controller (iRMC)

Two kinds of user's guide are prepared depending on iRMC firmware versions. Please refer to appropriate document accordingly.

(These documents are stored in [CD-ROM drive]:¥MANUAL¥COMMON folder of PRIMERGY Document & Tool CD.)

– iRMC V1.65A(or before)

Please refer to "ServerView V4.20 User's Guide" (B7FH-4261-01EN), Chapter 6 "Using the Remote Management Controller".

– iRMC V1.66A(or later)

Please refer to "Remote Management Controller User's guide" (B7FH-5251-01EN).

[Note]

In case that the above document is not stored in your PRIMERGY Document & Tool CD, please download it from the following URL.

(RX300 S3)

http://www.fujitsu.com/global/services/computing/server/ia/rackserver/userguide_rx300_s3.html

(RX200 S3)

http://www.fujitsu.com/global/services/computing/server/ia/rackserver/userguide_rx200_s3.html

(TX200 S3)

http://www.fujitsu.com/global/services/computing/server/ia/towerserver/tx200s3/userguide_tx200_s3.html

(End)