

[日本語]

PRIMERGY MS610 使用上の注意

このたびは、弊社の PRIMERGY MS610 をお買い求めいただきまして、誠にありがとうございます。本サーバをご使用になる上での留意事項がございますので、本書をよくお読みの上ご使用願います。

平成 12 年 7 月
富士通株式会社

1. Servervisor V1.1L15/Intel®LANDesk®Server Manager V6.0L55 をお使いのお客様へ ご使用になる前に

Servervisor V1.1L15/Intel®LANDesk®Server Manager V6.0L55 をご使用になる場合は、本サーバ添付の「PRIMERGY MS610 LDSM Update module」を適用ください。修正モジュールの適用方法については、添付の「Servervisor V1.1L15/Intel®LANDesk®Server Manager V6.0L55 使用時のご注意」を参照ください。

システムイベントログについて

本サーバ運用中ごくまれに SEL・IMP・NT Event Log に電圧・筐体ドアオープンの異常がログされる場合があります。その場合は、異常検出・復旧のタイムスタンプを確認し、数秒間で復旧していれば問題がありませんので、運用をお続けください。

Server Manager コンソールとサーバとの接続切断時の処置について(監視留意事項)

管理対象サーバが高負荷状態にある場合に、Server Manager コンソールとサーバの接続が切断されることがあります。この復旧方法をサーバに添付する下記の文書に記述しています。

『ソフトウェアガイド』 付録 D.2.4 「LDSM の使用上の留意事項 - (10) Server Manager コンソールとサーバとの接続切断時の処置について」

しかしサーバの運用状態によって、コントロールパネル上での処置操作中にサービスの停止ができなくなる場合があります。この場合には、該当プロセスを強制終了した後に再起動操作を実施してください。

プロセスの強制終了ツールについては、弊社 PRIMEPOWER GRANPOWER WORLD

(<http://www.fujitsu.co.jp/hypertext/granpower/primergy/levelup.html>) の


「GRANPOWER5000 レベルアップ情報ドライバ/HAL/その他」をご参照ください。

2. Wakeup on LAN 機能について

本サーバでは現在、Wakeup on LAN 機能はご使用になれません。そのため、ServerWizard CD より作成するフロッピーディスク「MS610 HAL for Windows NT(R)4.0」及び、「Power MANagement for Windows V1.1」はご使用しないでください。なお、使用可能時期につきましては弊社担当営業にお問い合わせください。

3. Tape Maintenance Checker V2.3 の導入時の注意について

『Tape Maintenance Checker V2.3』を Windows NT® 4.0 にインストールする際に、以下のメッセージが表示されてインストールができない場合があります。

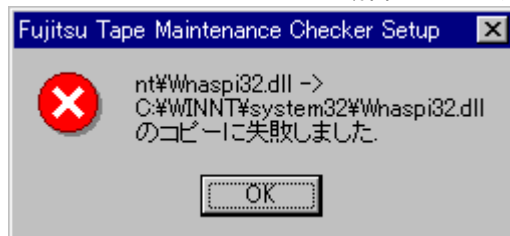

このようなときには、以下の手順でインストールしていただくよう、お願いします。

< 導入の手順 >

- 1) 『スタート』ボタンから『設定(S)』『コントロールパネル(C)』を選択します。
- 2) 『サービス』のアイコンをダブルクリックします。
- 3) 以下のサービスを停止してください。(サービス名をクリックして、右側の『停止(T)』のボタンをクリックします。)
 - ・ CIO Array Management Service
 - ・ Ciodmi
 - ・ WDFTFZ (WDFTFZ はサービス一覧に無いことがあります。)
- 4) 高信頼性ツールメニューから『Tape Maintenance Checker V2.3』をインストールします。
- 5) インストール作業後、再起動を促す画面が表示されます。『再起動する』を選択して、サーバを再起動します。

[English]

PRIMERGY MS610 Usage Cautions

The following usage cautions apply to the PRIMERGY MS610 that we are so pleased you have chosen to use. Please read them well.

July 2000
FUJITSU LIMITED

1. For users of Servvisor V1.1L15/ Intel®LANDesk®Server Manager V6.0L55

(1) Before using

Before using Servvisor V1.1L15/Intel LANDesk Server Manager V6.0L55, the "PRIMERGY MS610 LDSM Update module" (included with the server) must be applied. See the "Note for Servvisor V1.1L15/Intel LANDesk Server Manager V6.0L55" for details on how to apply this module.

(2) The System Event Logs

On rare occasions while the server is running, a voltage or chassis door open error may be logged in the SEL, IMP, and/or NT Event Logs. If this happens, check the interval between the error detection and recovery timestamps. If recovery occurred within seconds, then there is no cause for alarm and operation may be safely continued.

(3) Recovering a lost Server Manager Console to Server connection

If the managed server is heavily burdened, its connection to the Server Manager Console may occasionally be lost. The recovery procedure to be used in this case is given in "Appendix D.2.4 Notes running LDSM - (11) Remediating a Server Manager Console to Server Disconnection" of the "Software Guide" (included with the server).

Note, however, that sometime the operating state of the server may be such that it may be impossible to stop the affected services from the [Control Panel] as required. If this happens, forcibly terminate the affected process(es), then try the recovery procedure again.



See the PRIMERGY teamserver website at "www.fujitsu.co.jp/en/servers/primergy/LDSMp.html" for more information on the process termination tool.

2. The Wakeup on LAN function

This server can not currently access the Wakeup on LAN function, and so the "MS610 HAL for Windows NT 4.0" floppy (created using the ServerWizard CD) should not be used.

3. The Tape Maintenance Checker V2.3 Setup Caution

When installing the "Tape Maintenance Checker V2.3" software on Windows NT® 4.0, the following warning messages may appear, terminating the installation process:

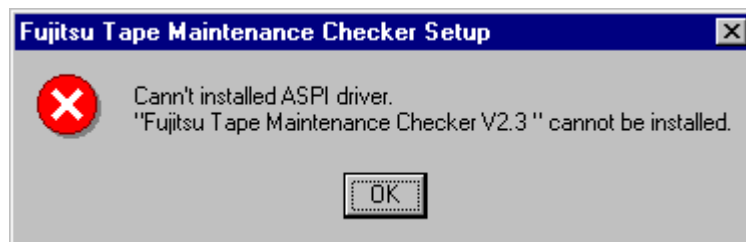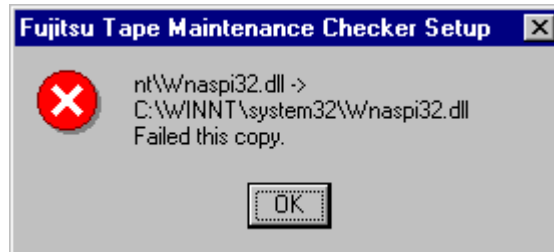

If this happens, use the following procedure as an installation workaround:

- 1) Select [Settings] - [Control Panel] from the [Start] menu.
- 2) Double-click the "Services" icon.
- 3) Stop the following services (click the service to select it, then click the [Stop] button):
 - CIO Array Management Service
 - Ciodmi
 - WDFTFZ (this may not be shown in the list of services)
- 4) Install "Tape Maintenance Checker V2.3".
- 5) After the installation has finished, select "Restart" when the restart enquiry dialog box appears.