 
 
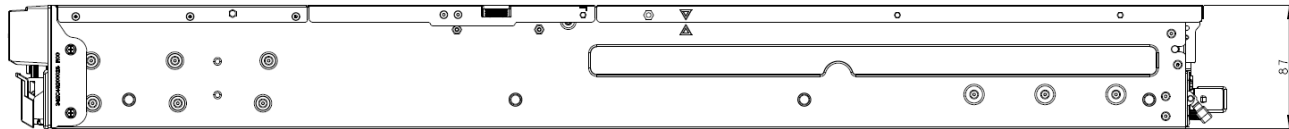 
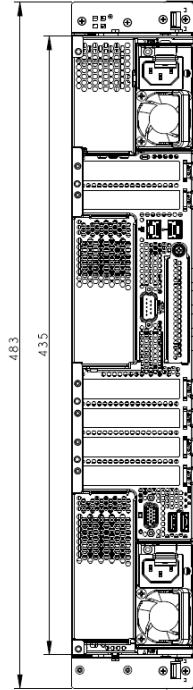 
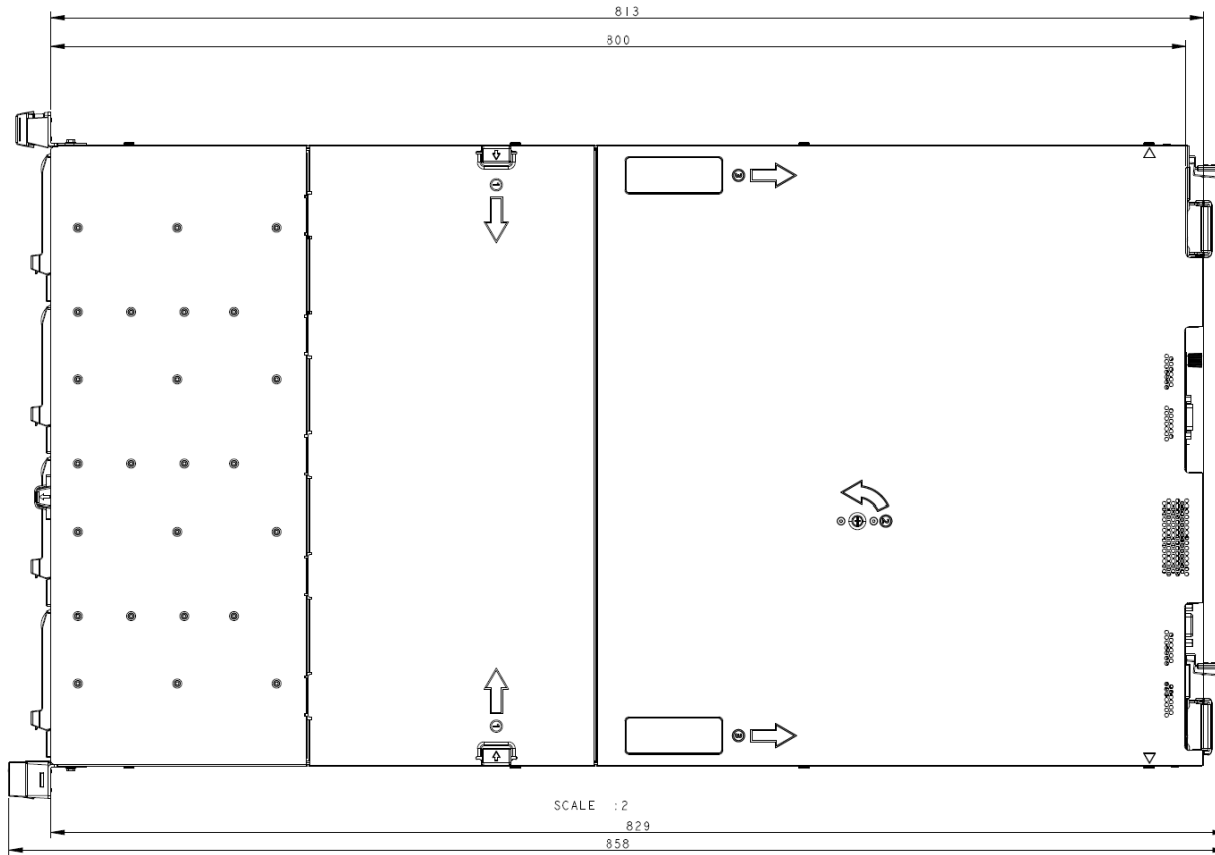 
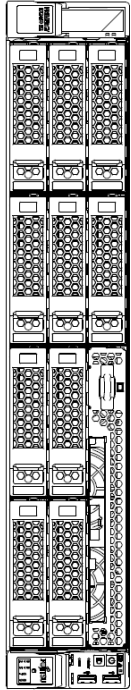 
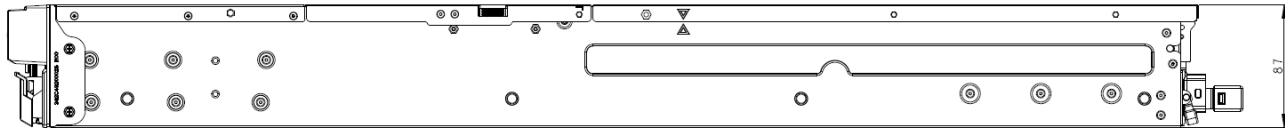 
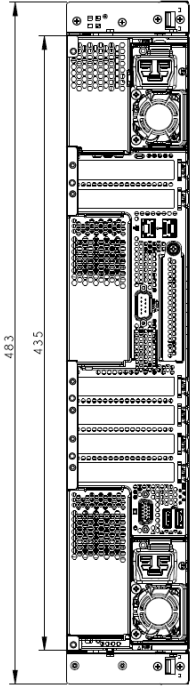 






# Fujitsu Server PRIMERGY RX2450 M2(3.5"x10) AC PSU

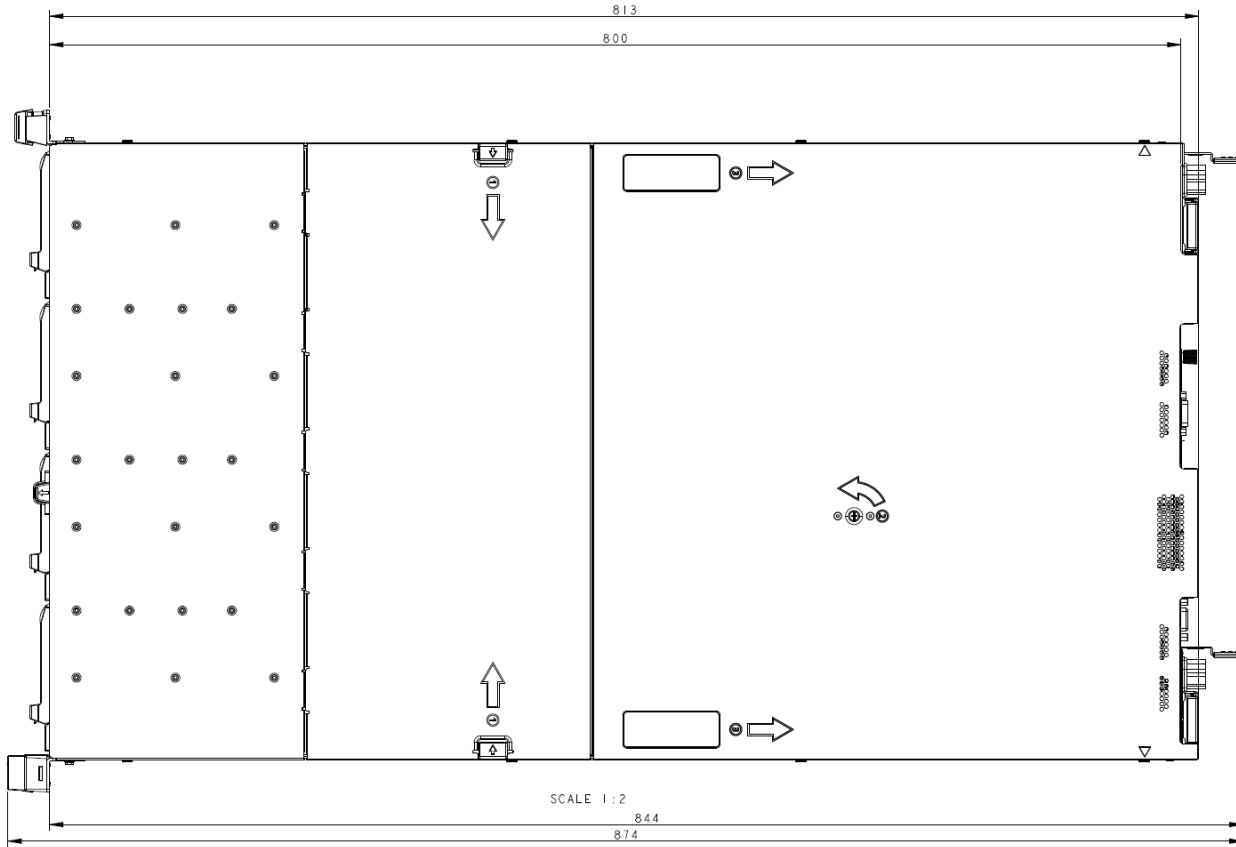





# Fujitsu Server PRIMERGY RX2450 M2(3.5"x10) DC PSU

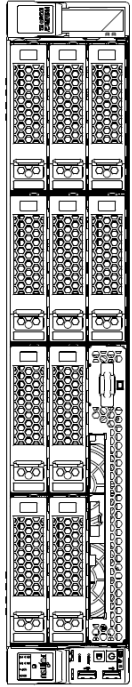

 
 
 
 
# Fujitsu Server PRIMERGY RX2450 M2(3.5"x12) AC PSU

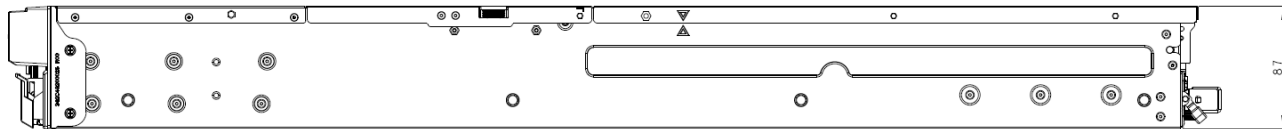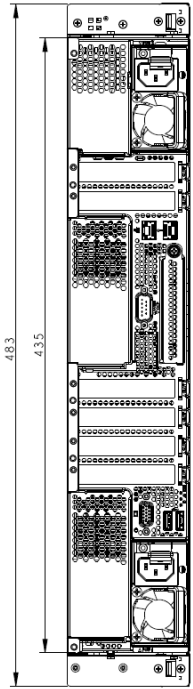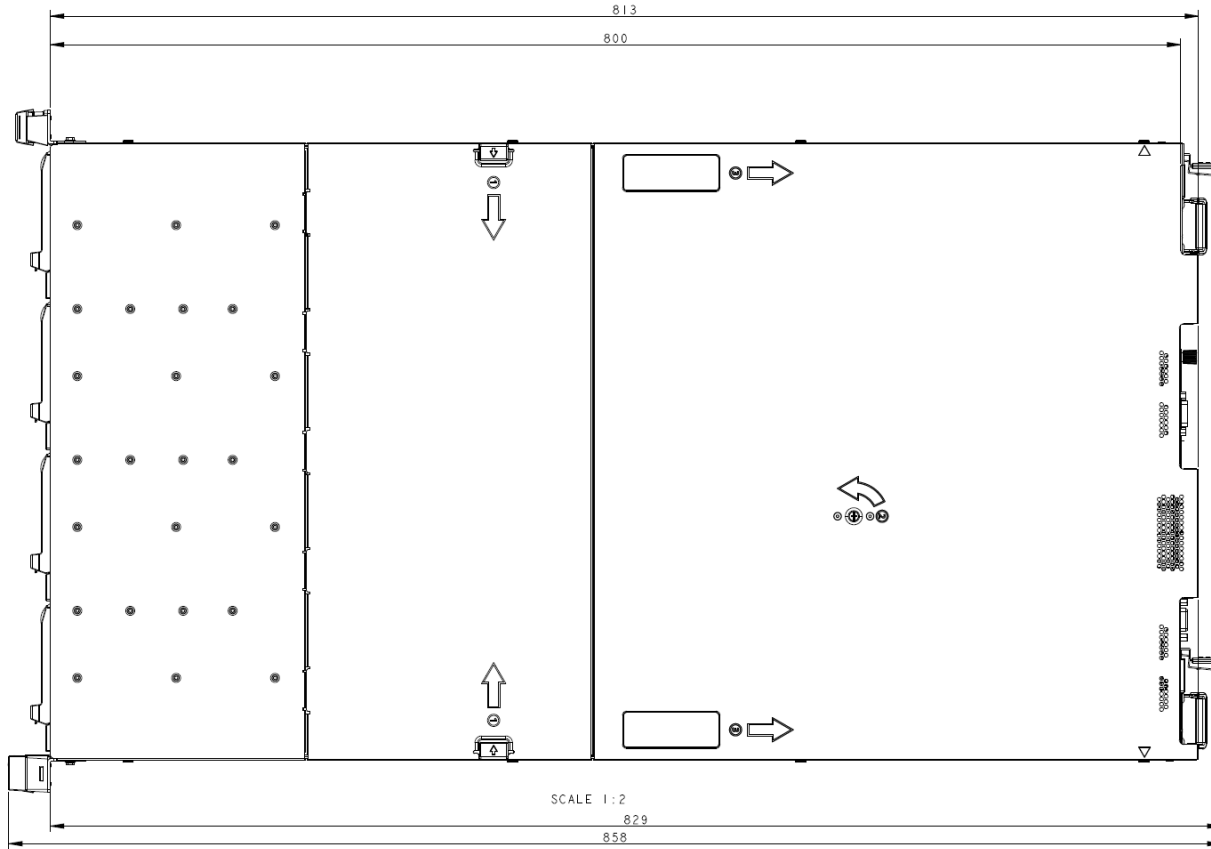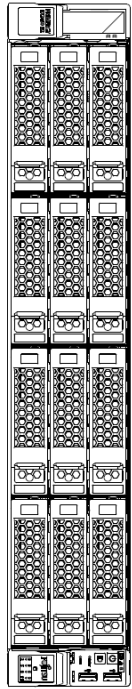





# Fujitsu Server PRIMERGY RX2450 M2(3.5"x12) DC PSU

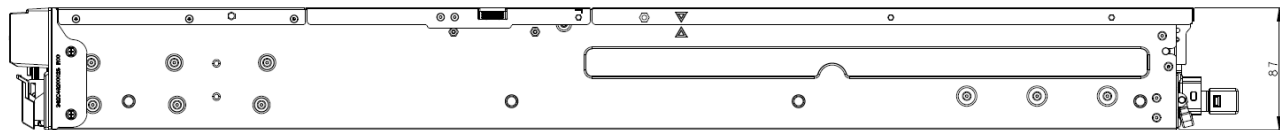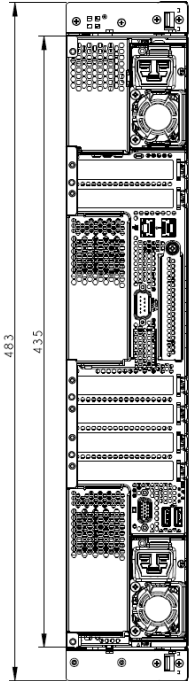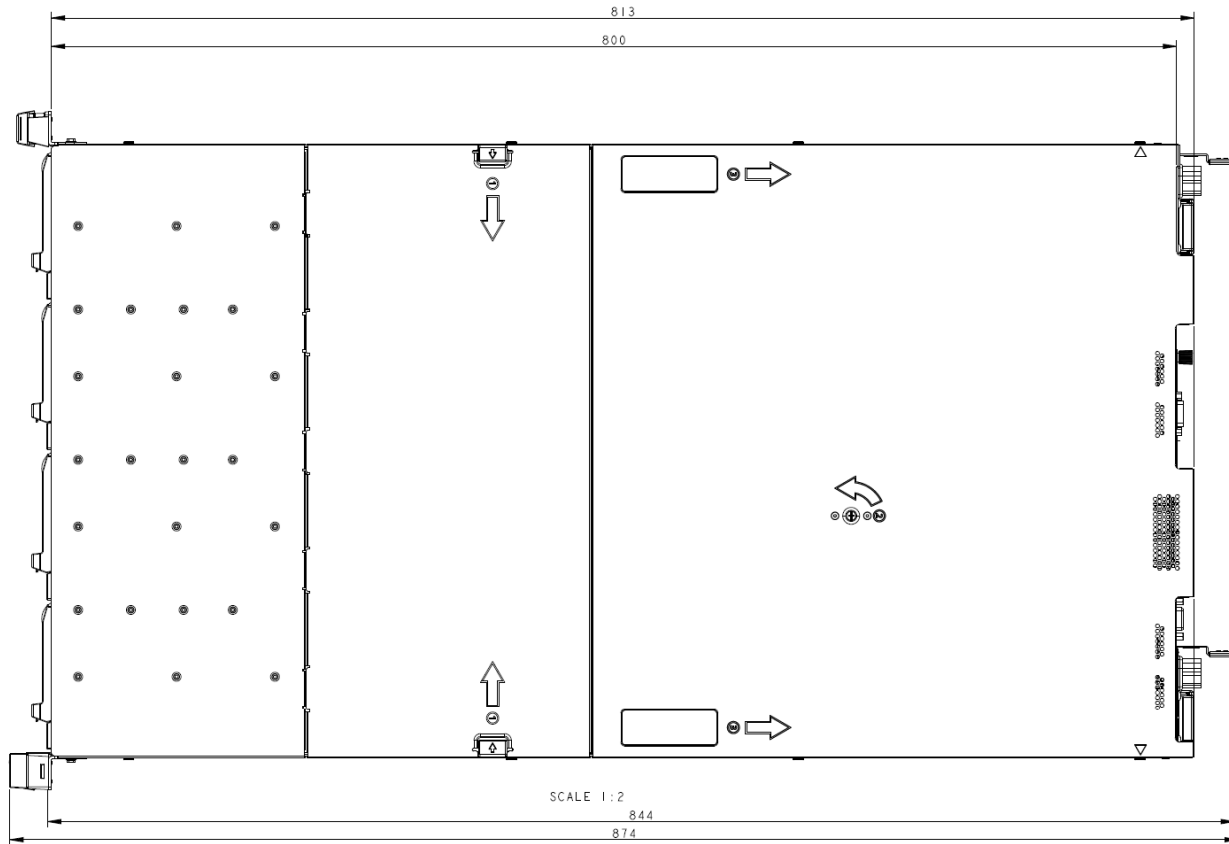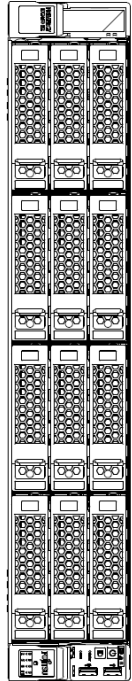    





# Fujitsu Server PRIMERGY RX2450 M2(2.5"x16) AC PSU

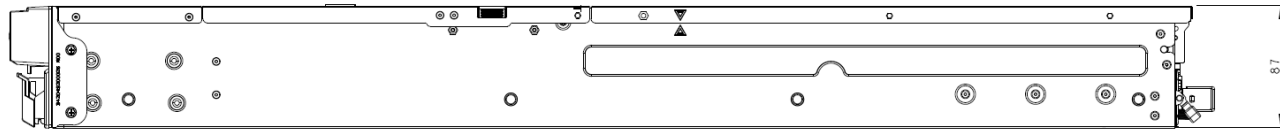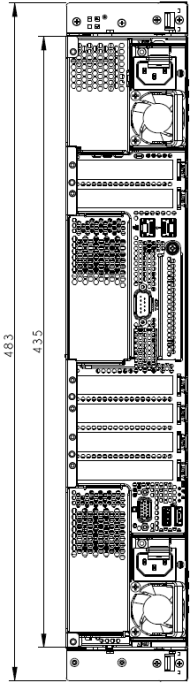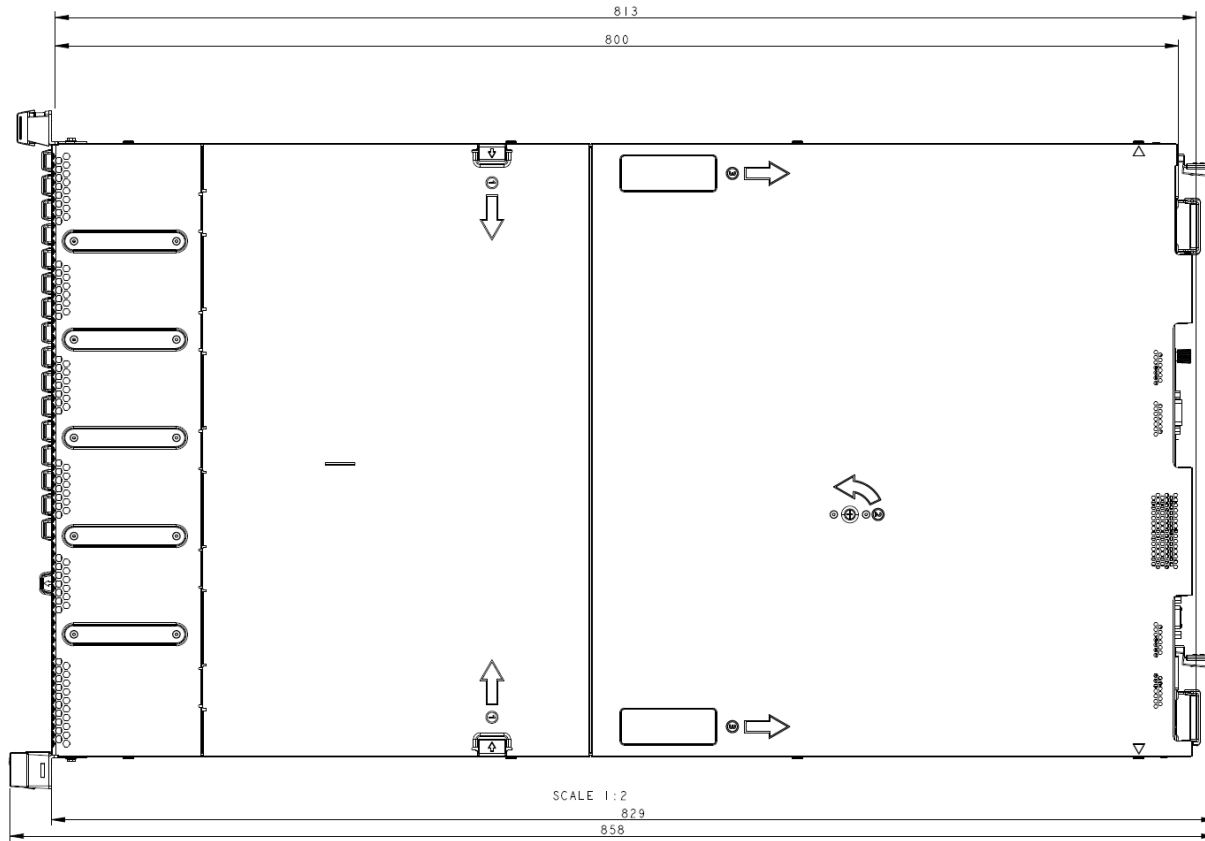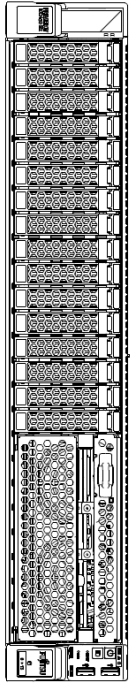    

# Fujitsu Server PRIMERGY RX2450 M2(2.5"x16) DC PSU

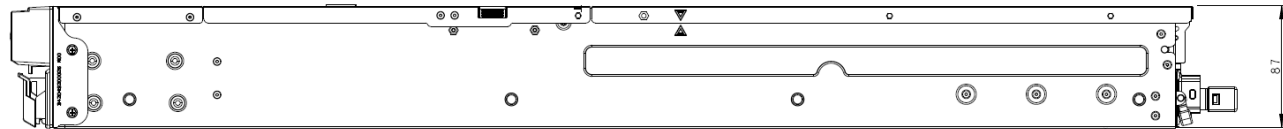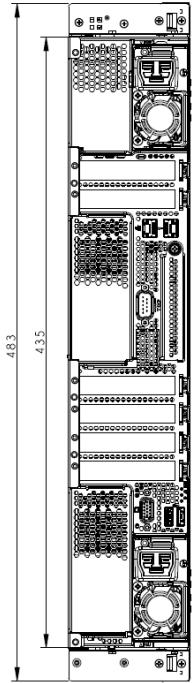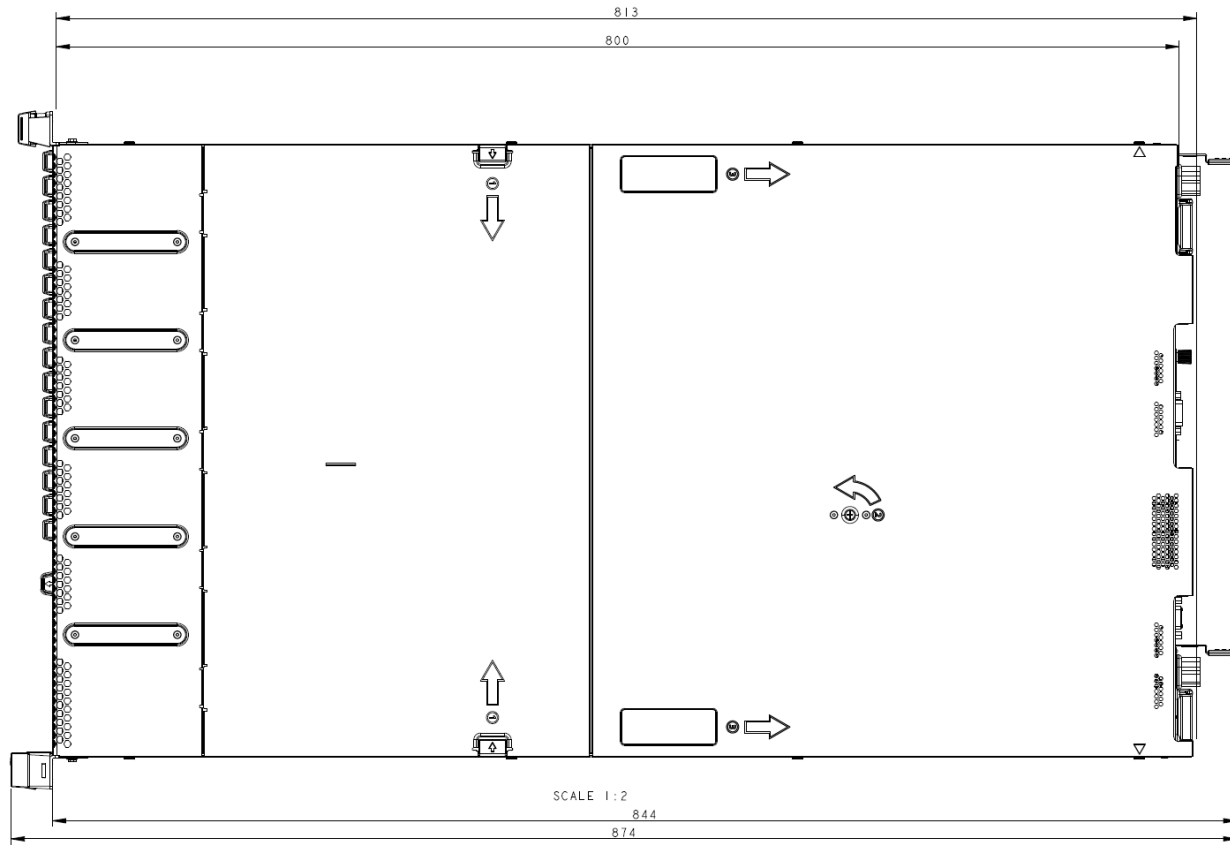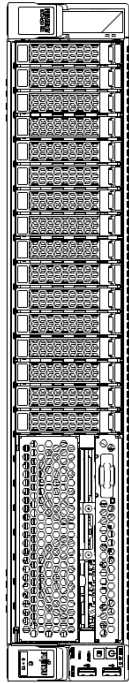    

# Fujitsu Server PRIMERGY RX2450 M2(2.5"x24) AC PSU

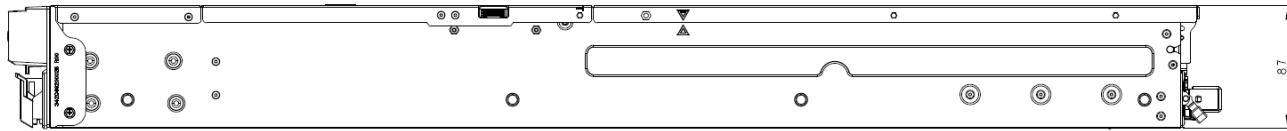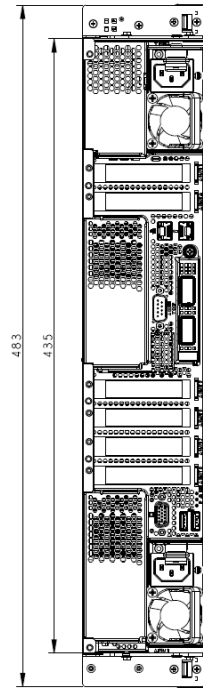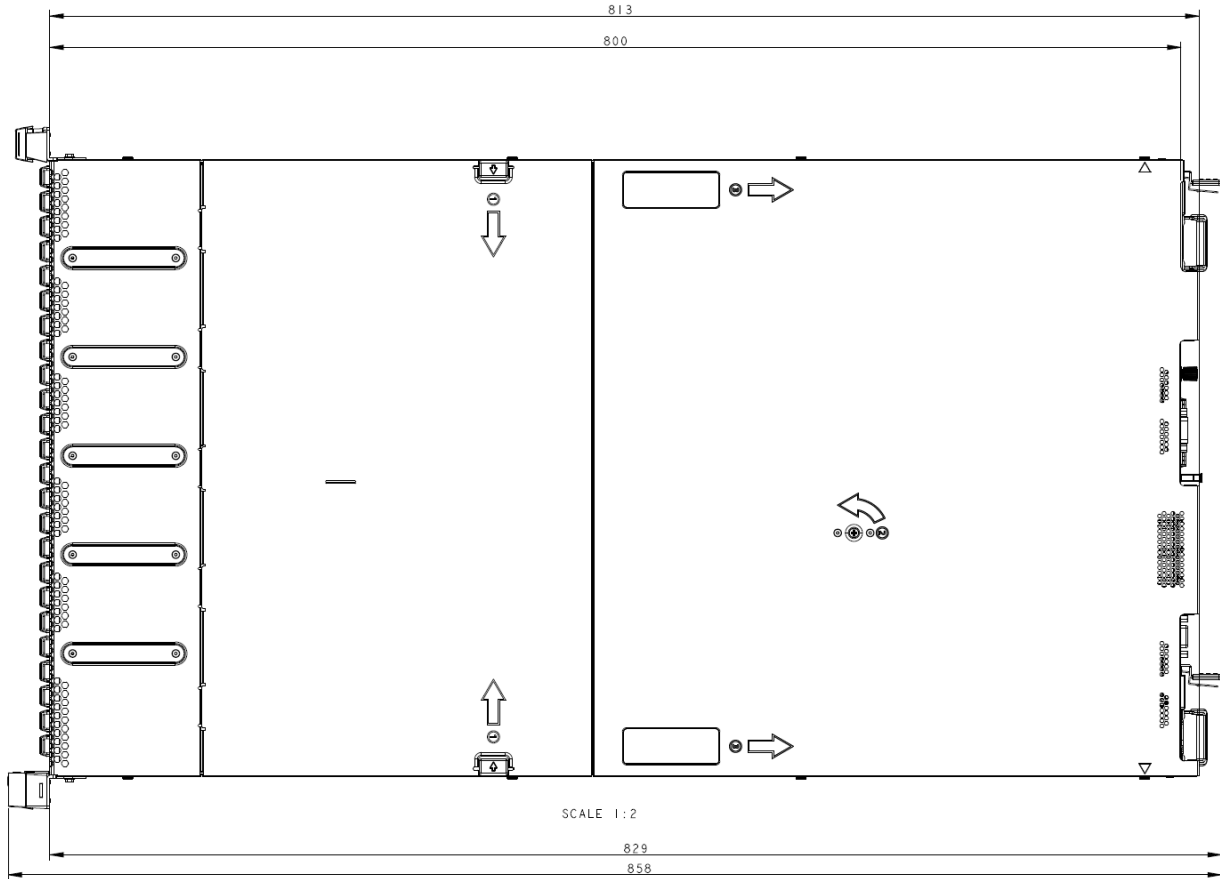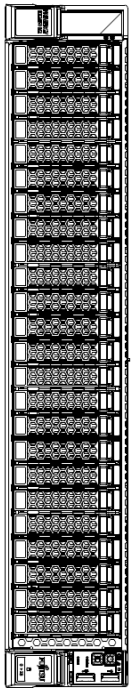    

# Fujitsu Server PRIMERGY RX2450 M2(2.5"x24)

DC PSU

