

User's Guide - English



Analog KVM Switch

User's Guide

◆ Safety and Usage environment



CAUTION

Please follow the safety notes and other important information in "Safety Notes and Regulations".

For your Safety

This manual contains important information for safely and correctly using this product. Carefully read the manual before using this product. Pay particular attention to the accompanying manual "Safety Notes and Regulations" and ensure these safety notes are understood before using the product. Keep this manual and the manual "Safety Notes and Regulations" in a safe place for easy reference while using this product.

Information on handling consumables

Please dispose of printer consumables and batteries in accordance with the applicable national regulations.

In accordance with EU directives, batteries must not be disposed of with unsorted domestic waste. They can be returned free of charge to the manufacturer, dealer or an authorized agent for recycling or disposal.

All batteries containing pollutants are marked with a symbol (a crossed-out garbage can). They are also marked with the chemical symbol for the heavy metal that causes them to be categorized as containing pollutants:

Cd Cadmium

Hg Mercury

Pb Lead

Labels on plastic casing parts

Please avoid sticking your own labels on plastic parts wherever possible, since this makes it difficult to recycle them.

Returns, recycling and disposal

Please handle returns, recycling and disposal in accordance with local regulations.



The device must not be disposed of with domestic waste. This device is labeled in compliance with European directive 2012/19/EU on waste electrical and electronic equipment (WEEE).

This directive sets the framework for returning and recycling used equipment and is valid across the EU. When returning your used device, please use the return and collection systems available to you. Further information can be found at: <http://ts.fujitsu.com/recycling>

Details regarding the return and recycling of devices and consumables within Europe can also be found in the "Returning used devices" manual, via your local Fujitsu branch, or at: <http://ts.fujitsu.com/recycling>

Radio interference

This product is a "Class A" ITE (Information Technology Equipment). In a domestic environment this product may cause radio interference, in which case the user may be required to take appropriate measures. VCCI-A

Harmonic Current Standards

This product conforms to harmonic current standard JIS C 61000-3-2.

High safety use

This product has been designed and manufactured to be used in commercial and/or industrial areas as a server.

When used as visual display workplace, it must not be placed in the direct field of view to avoid incommoding reflections (applies only to TX server systems).

The device has not been designed or manufactured for uses which demand an extremely high level of safety and carry a direct and serious risk of life or body if such safety cannot be assured.

These uses include control of nuclear reactions in nuclear power plants, automatic airplane flight control, air traffic control, traffic control in mass transport systems, medical devices for life support, and missile guidance control in weapons systems (hereafter, "high safety use").

Customers should not use this product for high safety use unless measures are in place for ensuring the level of safety demanded of such use. Please consult the sales staff of Fujitsu if intending to use this product for high safety use.

Technology controlled by the Foreign Exchange and Foreign Trade Control Law of Japan.

Documents produced by Fujitsu may contain technology controlled by the Foreign Exchange and Foreign Trade Control Law of Japan. Documents which contain such technology should not be exported from Japan or transferred to non-residents of Japan without first obtaining authorization in accordance with the above law.

Contents

General Information	1
Overview	1
Features	1
Safety	2
Accessory Inventory	3
Requirements	4
Console	4
Computers	4
KVM Server Modules (KVM Adapter Cable) and LAN cables ..	4
Maximum server connections	4
Component Identification	5
Front	5
Rear	6
Installation	7
Overview	7
Rack Mounting	7
Rack mounting	7
Rack Mounting - Rear	8
Optional KVM switch to Rack Console Mounting - Rear	8
Single Level KVM Switch Installation	9
Single level installation diagram	9
Tiering multiple KVM switches	9
To set up a Chained tiering installation:	10
Chained Tiering Installation Diagram	10
Hardware Setup	11
Cable Length Considerations	11
Hot Plugging	11
Powering Off and Restarting	12
Port ID Numbering	12

Replacement procedure for analog KVM switch	13
--	-----------

On Screen Display (OSD) Operation	14
--	-----------

Overview	14
OSD Navigation	15
OSD Main Screen Headings	16
OSD Functions	16
F1: GOTO	16
F2: LIST	17
F3: SET	17
F4: ADM	19
F5: SKP	21
F6: BRC	21
F7: SCAN	22
F8: LOGOUT	22

Hotkey Operation	23
-------------------------------	-----------

Hotkey Port Control	23
Invoking Hotkey Mode	23
[Num Lock] + [-]	23
[Ctrl] + [F12]	23
Hotkey mode environment	23
Exiting hotkey mode	23
Selecting the Active Port	24
Auto Scan Mode Switching	24
Setting the scan interval	24
Invoking Auto Scan	24
Exiting Auto Scan	24
Skip Mode Switching	25
Entering skip mode	25
Exiting skip mode	25
Setting the Hotkey Beeper ON/OFF	25

Setting the Hotkey Key Combination	26
Setting the OSD Hotkey combination	26
Setting the Port Operating System	26
Restore the Default Values.	26
Hotkey Summary Table	27
Keyboard Emulation	28
Mac Keyboard	28
Sun Keyboard	29
Troubleshooting	30
Overview	30
OSD Factory Default Settings	30
Connection Tables	31
KVM0108A	31
KVM0116A	31
Specifications	32
Radio Frequency Interference	33

Material declaration of BSMI

設備名稱：類比KVM切換器 8埠；類比KVM切換器 16埠，型號（型式）：KVM0108A; KVM0116A						
單元 Unit	限用物質及其化學符號					
	鉛Lead (Pb)	汞Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁺⁶)	多溴聯苯 Polybrominate d biphenyls (PBB)	多溴二苯醚 Polybrominate d diphenyl ethers (PBDE)
電纜線 Cable	○	○	○	○	○	○
印刷電路部件 PCBA	—	○	○	○	○	○
電源模組 Switching Power module	○	○	—	○	○	○
塑膠/其他部件 Plastic /Others parts	○	○	○	○	○	○
金屬部件 Metal parts	—	○	○	○	○	○
備考1. “超出0.1 wt %” 及 “超出0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。 備考2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。 備考3. “—” 係指該項限用物質為排除項目。						

Caution / Warning

警告使用者：

這是甲類資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當對策。

General Information

Overview

KVM0108A and KVM0116A KVM Switches

The KVM switches allow administrators to access and control multiple servers from a single USB KVM (keyboard, Video, and mouse) console. There is no software to configure.

SKU	Local Connection	Remote Connection	KVM Ports
KVM0108A	1	0	8
KVM0116A	1	0	16

- An auto-sensing function recognizes the position of each station on the installation, eliminating the need to manually set the position, and a front panel LED displays each station's position.

Features

- Simple installation and operation: Plug-and-play installation. No software required. Station positions are automatically recognized. Computer selection is done using hotkeys or multi-language On Screen Display (OSD) menus.
- Single console control: Access and control up to 8 (KVM0108A) or 16 (KVM0116A) servers from a single USB KVM (keyboard, Video, and mouse) console.
- Scalability: Connect up to 31 switches. Control up to 512 servers (KVM0116A) from the KVM console.
- Easy installation: Plug cables into their appropriate ports. No software to configure.
- Hardware independent cross-platform support.
- RJ-45 connectors and cat 5e/6 cabling: The KVM0108A or KVM0116A can be installed in a 1U system rack. Take advantage of internal network wiring in most modern commercial buildings.
- KVM adapter cables connect to servers. Mix PS/2 and USB interfaces connecting the KVM switch to the devices.
- Strong password protection prevents unauthorized access.
- Multiple user accounts: Supports up to 10 user and 1 administrator accounts.
- Auto scanning and broadcast mode: Auto scanning provides hands-free monitoring of selected devices at variable rates. Broadcast Mode sends commands from the console to all computers. Performs software installation, upgrades, and shutdowns simultaneously.
- Superior video quality: Supports the video resolutions up to 1600x1200@60hz for up to 40 meters, and 1280x1024@75hz for up to 50 meters with the KVM Cable Adapter.
- Hot pluggable: Add or remove components without powering off the KVM switch.
- Server modules (Adapter cables) with ID: The KVM switch automatically recognizes the new KVM Cable Adapter. Device ID and attributes are stored in the adapter cables allowing you to hot-swap port connections without having to reconfigure attributes.

Safety

Read all of these instructions. Save them for future reference. Follow all warnings and instructions marked on the device.

⚠ DANGER

HAZARD OF ELECTRIC SHOCK

- Do not use the device near water, Never spill liquid of any kind on the device.
- Unplug the device from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- The device should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- To prevent damage to your installation it is important that all devices are properly grounded. The device is equipped with a 3-wire grounding type plug. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace the outlet. Do not attempt to defeat the purpose of the grounding-type plug. Always follow local/national wiring codes.
- If an extension cord is used with this device make sure that the total of the ampere ratings of all products used on this cord does not exceed the extension cord ampere rating. Make sure that the total of all products plugged into the wall outlet does not exceed 15 amperes.
- To help protect your system from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or uninterruptible power supply (UPS).
- Position system cables and power cables carefully; Be sure that nothing rests on any cables.
- Never push objects of any kind into or through cabinet slots. They may touch dangerous voltage points or short out parts resulting in a risk of fire or electrical shock.
- Use the power cord(s) supplied with this package. If it becomes necessary to replace the cords supplied with this package, be sure to use cords of at least the same standard as the ones provided. Contact your dealer for information about power cords
- Do not attempt to service the device yourself. Refer all servicing to qualified service personnel.

Failure to follow these instructions can result in death or serious injury.

⚠ CAUTION

INJURY OR EQUIPMENT DAMAGE

- Do not connect the RJ-11 connector marked “UPGRADE” to a public telecommunication network.
- Before working on the rack, make sure that the stabilizers are secured to the rack, extended to the floor, and that the full weight of the rack rests on the floor. Install front and side stabilizers on a single rack or front stabilizers for joined multiple racks before working on the rack.
- Always load the rack from the bottom up, and load the heaviest item in the rack first.
- Make sure that the rack is level and stable before extending a device from the rack.
- Use caution when pressing the device rail release latches and sliding a device into or out of a rack; the slide rails can pinch your fingers.
- After a device is inserted into the rack, carefully extend the rail into a locking position, and then slide the device into the rack.
- Do not overload the AC supply branch circuit that provides power to the rack. The total rack load should not exceed 80 percent of the branch circuit rating.
- Make sure that all equipment used on the rack, including power strips and other electrical connectors, is properly grounded.
- Ensure that proper airflow is provided to devices in the rack.
- Ensure that the operating ambient temperature of the rack environment does not exceed the maximum ambient temperature specified for the equipment by the manufacturer
- Do not step on or stand on any device when servicing other devices in a rack.
- Do not place the device on an unstable surface. If the device falls, serious damage will result.
- Do not block ventilation openings. Overheating of internal components may occur.
- Route the power cord and cables so that they cannot be stepped on or tripped over.

Failure to follow these instructions can result in injury or equipment damage.

Accessory Inventory

- KVM0108A or KVM0116A KVM switch x1
- Firmware upgrade cable x1
- Rack mount bracket x1
- M5 Screw and Nut x4
- Literature Kit: First information, Quick Start Guide, Safety Notes, and China ROHS.

Requirements

Console

- VGA, SVGA, or multi-sync monitor capable of the highest resolution that you will be using on any server in the installation
- USB mouse/keyboard

Computers

The following equipment must be installed on the servers that connect to the KVM switch ports:

- VGA, SVGA, or multi-sync port
- Type A USB port and USB host controller

KVM Server Modules (KVM Adapter Cable) and LAN cables

- The Cat 5e/6 cable is required to connect the KVM switch to one of the KVM adapter cables.
- The following KVM adapter cables are required for use with the KVM switch:


Module	Function
PY-CBKAU11	USB KVM Adapter Cable
PY-CBKCC1	KVM Cable (cascade connection - 1.8 m)

Maximum server connections

Parent KVM Model	Ports	Child Tiered KVM	Ports	Max Connections (Tiered)	Chained Connections
KVM0108A	8	KVM0108A	8	256	32
KVM0116A	16	KVM0116A	16	512	32


Component Identification

Front

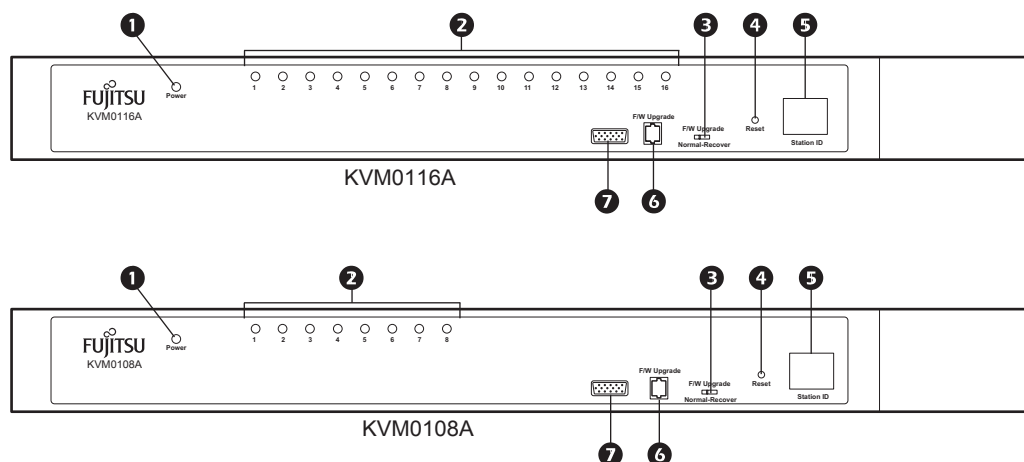

No.	Component	Description
❶	Power LED	Lights to indicate that the KVM switch is powered and ready to operate.
❷	Port LEDs	The Port LEDs provide status information about their corresponding KVM Ports <ul style="list-style-type: none"> • GREEN: The server attached to the port is On Line. • RED: The server attached to the port is Selected (has KVM focus). (Server is offline) • GREEN + RED (ORANGE): The server attached to the port is On Line and Selected. The LEDs are continuously ON under normal conditions. An LED will flash at half second intervals when its corresponding port is accessed under Auto Scan Mode or Skip Mode
❸	Firmware Upgrade Recovery Switch	During normal operation and while performing a firmware upgrade, this switch should be in the “normal (left) ” position.
❹	Reset Switch	The switch is recessed and must be pushed with a small object, such as the end of a paper clip or a ballpoint pen. To perform a system reset, press and release when the unit is running. Note: This does not clear User Account information.
❺	Station ID LED	The KVM switch's Station ID is displayed here. If this is a single station installation or the first station on the installation, the KVM switch ID is “01.” On a tiered installation, the KVM switch auto-senses its position and displays the station ID that corresponds to its place in the installation (see “Port ID Numbering” on page 12).
❻	Firmware Upgrade Port	The Firmware Upgrade Cable that transfers the firmware upgrade data from the administrator's computer to the KVM switch, plugs into this RJ-11 connector. (This function dose not operate in this device.)
❼	Console Port	This function dose not operate in this device.

Rear

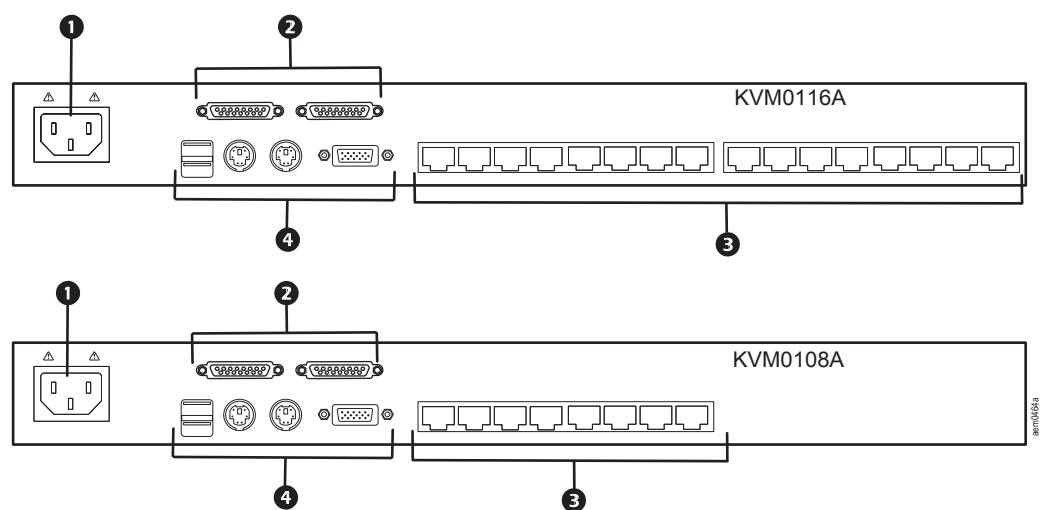


Item	Component	Description
❶	Power Socket	The power cord to the AC source plugs in here.
❷	Chain In/Out Ports	When cascading KVM switches, the cables plug in here (see “Tiering multiple KVM switches” on page 9). The port on the left is the Chain In port; the port on the right is the Chain Out port.
❸	KVM Port Section	The Cat 5e/6 cables that link to the KVM adapter cables (which link to the computers) plug in here.
❹	Console Ports	If this is a single station installation, or if this is the first station of a tiered installation, the keyboard, monitor, and mouse that make up the Local Console plug in here. Any combination of USB keyboards and mice for the console may be used.

Installation

Overview

 KVM adapter cables connect the KVM switch to the connected devices. A separate KVM adapter cable is required for each computer or device connection.

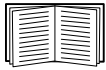

See “KVM Server Modules and cables” on page 4.



Note: 1. See “Safety” on page 2 before installing the KVM switch.
2. Power to any device must be turned off before connecting. Unplug the power cords of any computers that have the Keyboard Power On function.

Rack Mounting




Note: Allow at least 2 inches (5.1 cm) on each side for adequate ventilation and 5 inches (12.7 cm) at the rear for power cord and cable clearance.

The switch can be mounted in a 19" (1U) rack. The mounting brackets can screw into the front or the back of the unit so that it can be attached to the front or back of the rack.


Rack mounting

1. Position the KVM switch in the front of the rack. Align the mounting bracket holes with the holes in the rack.
2. Secure the mounting brackets to the rack with the screws.

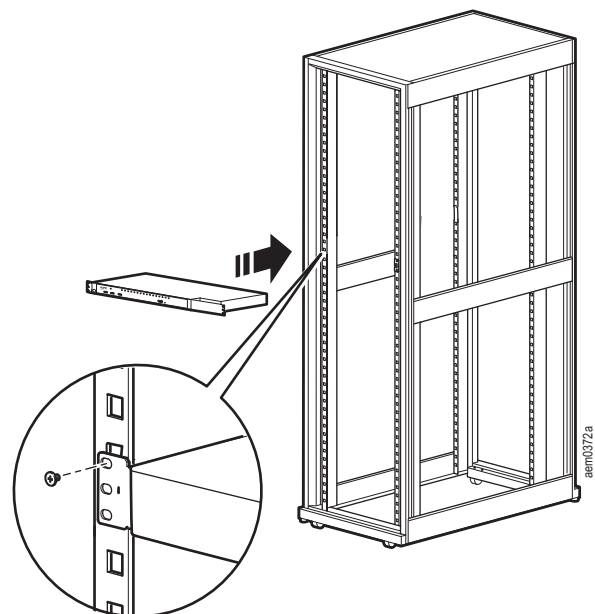


Rack Mounting - Rear


1. Remove the brackets from the front of the KVM switch.

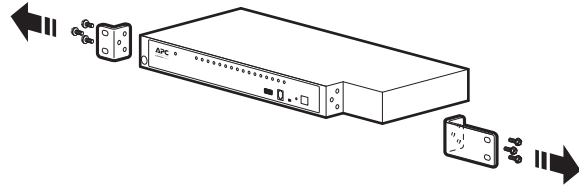

2. Install the smaller bracket from the front of the KVM switch to the back. Install the rack mounting bracket from the inventory to the other side of the rear of the KVM switch.

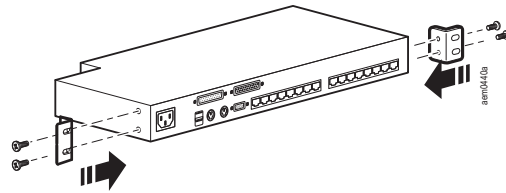

3. Slide the KVM switch into the rack. Align the mounting bracket holes with the holes in the rack.
4. Secure the mounting brackets to the rear of the rack.

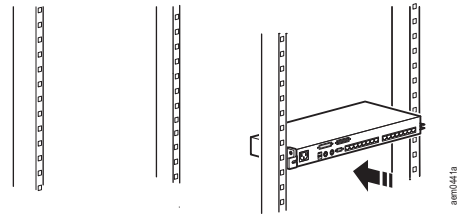

Optional KVM switch to Rack Console Mounting - Rear


The KVM switch can be mounted to a Rack Console (not included). See the installation sheet for the Rack Console KVM switch bracket kit for more information.

Single Level KVM Switch Installation

In a single level installation, there are no additional KVM switches tiered from the KVM switch. See “Cable Length Considerations” on page 11 for cable length requirements.

1. Plug the console keyboards, monitors and mice into the switch's console ports. The ports are color coded and marked with icons for easy identification.
2. Use Cat 5e/6 cable to connect any available KVM port to a KVM server module (KVM Adapter Cable) that is appropriate for the computer you are installing (see “KVM Server Modules (KVM Adapter Cable) and cables” on page 4).
3. Plug the connectors on the KVM Adapter Cable into the appropriate server ports.
4. Plug the supplied power cords into the switch's power sockets, then into an AC power source.
5. Turn on the servers.

Single level installation diagram

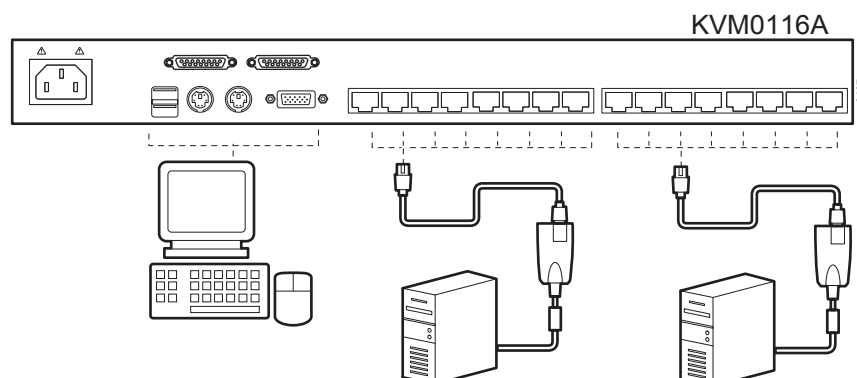

Tiering multiple KVM switches

To control even more computers, up to 31 additional KVM switches can be tiered from the original KVM switch. As many as 512 computers can be controlled from a single console in a complete installation.



See “Connection Tables” on page 31 for a list of switches that can be installed on a tiered installation and to see the relationship between the number of computers and the number of KVM switches needed to control them.

To set up a Chained tiering installation:

1. Use a cable set to connect the Chain Out port of the parent KVM switch to the Chain In port of the child KVM switch (first level out to second level in, second level out to third level in, etc.).




Note: 1. You cannot use the Chain In port of the First Level, since it is the highest level (parent) switch.

2. Cable sets for chained tiering are purchased separately.

2. Connect the KVM Adapter cables to the server and the switch according to Single Level Installation (see “Single Level KVM Switch Installation” on page 9).
3. Repeat the above steps for any other KVM switches you want to add to the chain.
4. Power up the installation as follows:
 - a. Plug in the power cord for the first level KVM switch. Wait for the KVM switch to ascertain its Station ID and display it on the Station ID LED (the Station ID for the first level is 01, the ID for the second level is 02, the ID for the third level is 03, etc.).
 - b. Power on each level on the installation in turn (second level, then third level, etc.). In each case, wait for the Station ID to be ascertained and displayed before powering on the next level switch.
 - c. After all the KVM switches are up, power on the computers.

Chained Tiering Installation Diagram

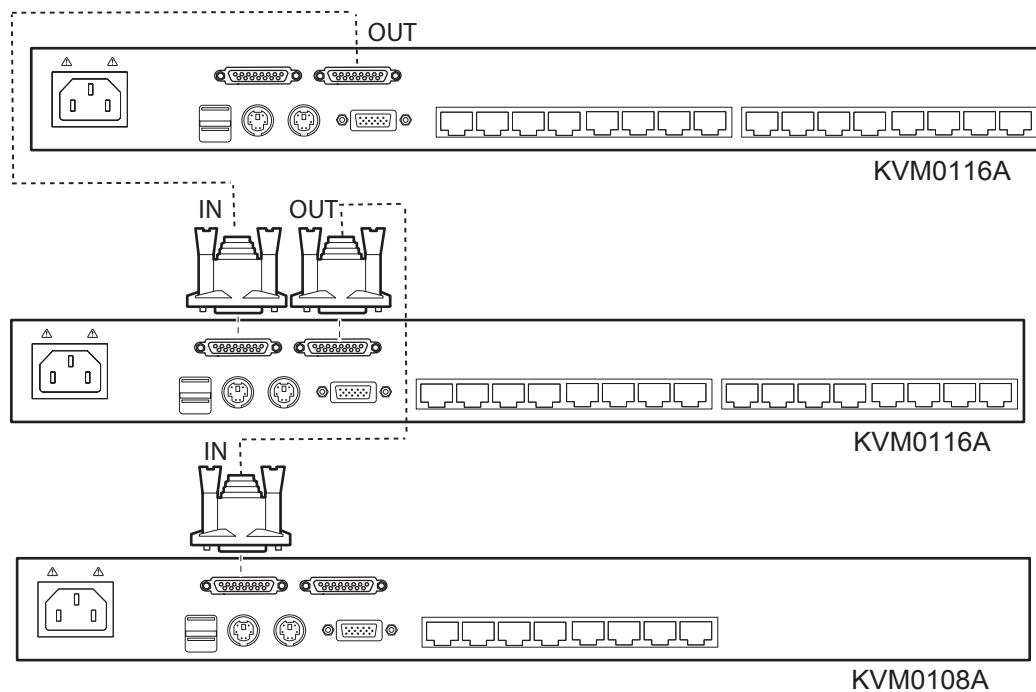

Hardware Setup

Cable Length Considerations



Note: KVM server modules are also referred to as KVM adapter cables.

- Do not exceed 66 feet (20m) between the KVM switch and the local monitor.
- To support a resolution of 1280x1024, the recommended maximum distance between the KVM switch and the KVM server module is 164 feet (50m).

Hot Plugging

KVM Adapter Cable can be removed and added to the installation by unplugging and re-plugging their cables without the need to shut down KVM switch.

Change KVM Switch positions by unplugging from the old parent KVM switch and plugging into a new parent KVM switch. Afterwards, in order for the OSD menus to correspond to the change, reset the station ID. See “Reset Station IDs” on page 20.

Hot plugging KVM ports. After switching KVM ports, in order for the OSD menus to correspond to the change, you may need to reconfigure the OSD information for the new port information. The settings of the port name, operating system, and keyboard language will be restored to the KVM switch from any previously used adapter cables after they are plugged in. See “F3: SET” on page 17 and see “F4: ADM” on page 19 for port setting selections.



Note: 1. If a server operating system doesn't support hot plugging, this function may not work properly.
2. Empty ports that previously were connected to an KVM Adapter Cable will retain their prior configuration data.

Hot plugging console ports. The keyboard, monitor, and mouse can be hot plugged. When hot plugging the mouse, however, be aware of the following:

- If you unplug the mouse (to reset the mouse, for example), you must use the same mouse when you plug back in.
- If you plug in a different mouse, all the KVM switches and all the server on the installation must be shut down for 10 seconds, then restarted (see “Powering Off and Restarting” on page 12).
- Some older operating systems may not support hot-plugging.



Note: If, after hot plugging or normal operation, there is no response to keyboard and/or mouse input, perform a keyboard and mouse reset by pressing in the Reset switch. See “Reset Switch” on page 5.

Powering Off and Restarting

If it becomes necessary to power off the KVM switch, or if the KVM switch loses power and needs to be restarted, before starting it back up, follow these procedures to prevent possible equipment issues:

1. Disconnect the Cat 5e/6 cable adapters (connecting the servers) from the back of the KVM switch.
2. Wait 10 seconds then power the KVM switch on. If you have shut down more than one KVM switch, power up the highest level first and work your way down to the lowest level. Wait for each KVM switch to display its station ID on the front panel LED before powering on the next one.
3. After power is on to all KVM switches, plug in the Cat 5e/6 cables or power the computers on.

Port ID Numbering

Each server on the installation is assigned a unique port ID. The port ID is a one or two segment number that is determined by the level and port number of the switch that is connected to the server.

The first segment represents the level of the switch, the second segment represents the number of the port that the server is plugged into. For example, if a server is connected to KVM port 3 of a switch that is in the 12th position of the tier, it would have a port ID of 12-03.

 


Note: Single digit numbers (1-9) have a preceding zero (0).

Replacement procedure for analog KVM switch

(working time: 30 minutes)

Tools Required (not provided)

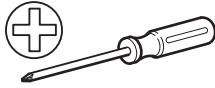

Phillips Screwdriver

* After replacement work of KVM switch, System administrator will need to reconfigure.
Refer to "On Screen Display (OSD) Operation (Page 14)" for setting method.

1. Remove the cables other than the power cord connected to the KVM switch to be replaced.
There is no need to power off on the server.
(To disconnect and reconnect the KVM adapter cable on the server, it is necessary to power off.)

2. Remove the power cord connected to the KVM switch to be replaced.

3. Remove the two screws on each side of the mounting bracket and remove it from the rack.

*Note : Please remove screws while supporting firmly so as not to drop at the time of removal.

4. If mounting on the back of the rack, remove the mounting bracket from the KVM switch.

5. Install the replacement KVM switch in the rack.

For mounting on the front of the rack, refer to "Rack mounting (page 7)".

For mounting on the back of the rack, refer to "Rack mounting - Rear (page 8)" .

For the mounting bracket, use the bracket removed in [Procedure 4].

6. Connect the cable removed in [Procedure 1] to the KVM switch.

7. Connect the power cord to the KVM switch and boot up the KVM switch.

(For the power cord is connected, the power turns on automatically and boot up the KVM switch.)

8. Confirm that the connected server can be referred to from the OSD of the KVM switch.

Initial user name : **admin**

Initial password : **admin**

9. In case of multiple hierarchical structure, reset the station ID.

└ Top view of OSD

└ F4:ADM

└ Select "RESET STATION IDS"

└ Execution

For details, please refer to "Reset Station IDs (page 20)".

10. For changing the setting of the KVM switch from the initial value, set the KVM switch.

(System administrator work) Please refer to "On screen display (OSD) operation (page 14)" for setting method.

On Screen Display (OSD) Operation


Overview

The On Screen Display (OSD) is menu driven to handle server control and switching operations. All procedures start from the OSD Main Screen. To display the Main Screen, tap the OSD hotkey twice. The default hotkey is [SCROLL LOCK]. The hotkey can be changed to the [CTRL] key or the [ALT] key (see “OSD Hotkey” on page 17).



Note: 1. If the [CTRL] or [ALT] key is used, the same [CTRL] or [ALT] key must be pressed both times.
2. The number lock and caps lock will always be on when the OSD is running.

The OSD uses a two-level (administrator/user) password system. A valid username and password is required before the OSD Main Screen opens. The default username (**admin**) and password (**admin**) is used the first time that the OSD is accessed. For security purposes, change these to something unique after you log in the first time.

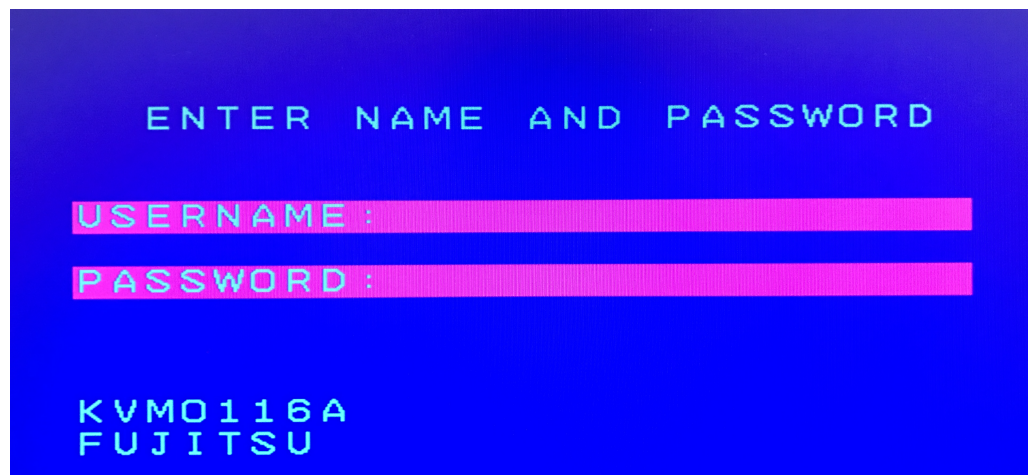

The OSD Main Screen opens in “administrator” mode after logging in with the default username and password. The administrator has access to all administrator and user functions, and can set up operations (including password authorization for the future).

OSD Main Screen “Administrator” mode



Note: 1. The User Main Screen does not show the F4 and F6 functions, since these are reserved for the administrator and cannot be accessed by standard users.
2. Only ports that the Administrator has set to “accessible” are visible on the User Main Screen. See “Set Accessible Ports” on page 20.

OSD Navigation

- To close the OSD, press “X” (Close) at the upper right corner of the OSD Window or press [ESC].
- To Logout, press F8 or click the “ZZZ” symbol at the top of the Main Screen.
- To see the ports for a particular station, press the plus sign [+] in front of the station number. The port number list opens. To close the list, press the circle minus sign [-] in front of the station number.
- To move up or down through the list one line at a time, press the up and down triangle symbols or use the up and down arrow keys. If there are more list entries than room on the Main Screen, the list will scroll.
- To move up or down the list one screen at a time, press the up and down arrow symbols or use the [PAGE UP] and [PAGE DOWN] keys. If there are more list entries than room on the Main Screen, the screen will scroll.
- To focus on a port, double-click it, or move the highlight bar to it and then press [ENTER].

OSD Main Screen Headings


Heading	Explanation
SN-PN	This column lists the port ID numbers (station number-port number) for all the KVM ports on the installation. The simplest method to access a particular computer is to click it, or move the highlight bar to it, and then press [ENTER].
QV	If a port has been selected for Quick View scanning, an arrowhead displays in this column.
Sun Symbol	The computers that are powered on and are online have a sun symbol in this column.
Name	If a port has been given a name, its name appears in this column.

OSD Functions

OSD functions are used for control and configuration. To access an OSD function:

1. Click on a function key at the top of the Main Screen, or press a function key on the keyboard.
2. Double-click or move the highlight bar over the choice in the submenu that opens and press [ENTER].
3. Press [ESC] to return to the previous menu level.

F1: GOTO

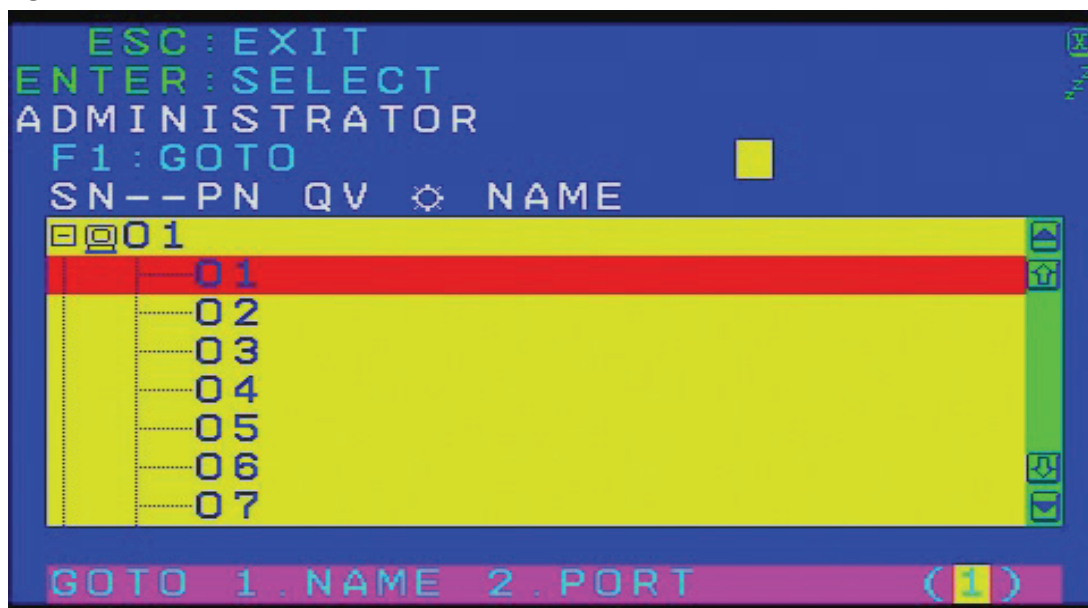

Use the GOTO function to switch directly to a port by entering the port's name or its port ID.

- To use the Name method, enter “1”, the port's name, and then press [ENTER].
- To use the Port ID method, enter “2”, the port ID, and then press [ENTER].




Note: You can enter a partial name or port ID. The screen will show all the computers to which the user has View rights that match the name or port ID pattern, regardless of the current List settings.

- To return to the OSD Main Menu without making a choice, press [ESC].

F2: LIST

Many of the KVM switch's OSD functions only operate on the server currently selected for listing on the Main Screen. Use this function to broaden or narrow the scope of ports that are listed.

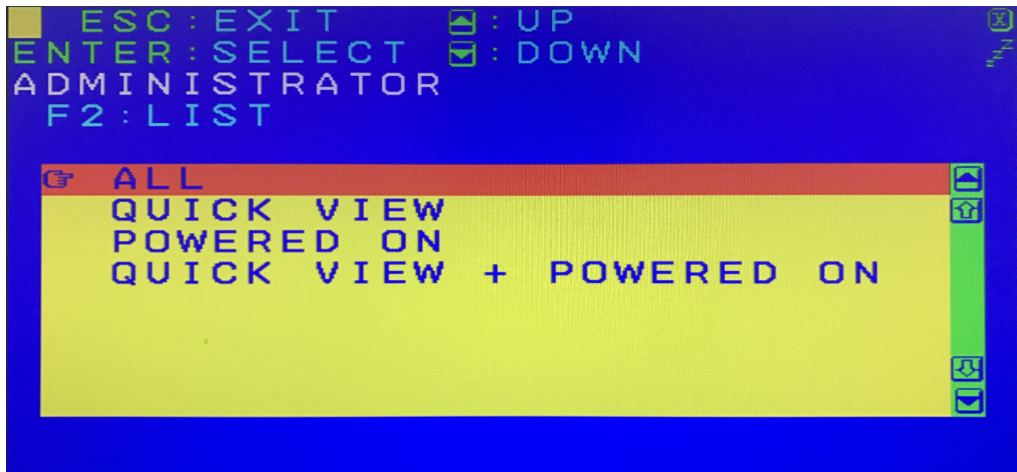

List	Meaning
All	Lists all of the ports on the installation
Quick View	Lists only the ports that have been selected as Quick View Ports
Powered On	Lists only the ports that have attached computers Powered On
Quick View + Powered On	Lists only the ports that have been selected as Quick View Ports and that have their attached Powered On server

Move the highlight bar to the desired list, then press [ENTER]. An icon appears before the list to indicate that it is currently selected.

F3: SET



The administrator and each user can set up an individual working environment. A separate profile for each operator is stored by the OSD and is activated according to the username provided during login.

To change a setting:


1. Double-click or move the highlight bar to the setting, then press [ENTER].
2. After you select an item, a submenu with further choices opens. To make a selection, double-click it or move the highlight bar to it, then press [ENTER]. An icon appears before the selected choice.

Setting	Function
OSD Hotkey	Selects which hotkey activates the OSD function: [SCROLL LOCK] [SCROLL LOCK]; [CTRL] [CTRL] or [ALT] [ALT]. Since the [CTRL] or [ALT] key combinations may conflict with programs running on the server, the default is the [SCROLL LOCK] combination.
Port ID Display Position	Location of the port ID on the monitor. The default is the upper left corner. To change the location: Use the mouse or the arrow keys plus PAGE UP, PAGE DOWN, HOME, END, and 5 (on the numeric keypad with NUM LOCK off), to position the port ID display, then press [ENTER] to lock the position and return to the Set submenu.
Port ID Display Duration	Determines how long a port ID displays on the monitor after a port change has taken place. There are two choices: 3 seconds and Off.
Port ID Display Mode	Selects how the port ID is displayed: the port number alone (PORT NUMBER), the port name alone (PORT NAME), or the port number plus the port name (PORT NUMBER + PORT NAME). The default is PORT NUMBER + PORT NAME.
Scan Duration	Determines how long the focus dwells on each port as it cycles through the selected ports in Auto Scan mode. Enter a value from 1-255 seconds, then press [ENTER]. The default is 5 seconds. A setting of 0 (zero) disables the Scan function.
Scan/Skip Mode	Selects which server will be accessed under Skip mode, and Auto Scan mode. Choices are: <ul style="list-style-type: none"> • ALL - All the ports which have been set Accessible • QUICK VIEW - Only those ports which have been set Accessible and selected as Quick View Ports • POWERED ON - Only ports which have been set Accessible and are Powered On; • QUICK VIEW + POWERED ON - Only those ports which have been set Accessible, selected as Quick View Ports, are Powered On. The default is ALL.
Screenblanker	If there is no input from the console for the amount of time set with this function, the screen becomes blank. Enter a value from 1-30 minutes, then press [ENTER]. A setting of 0 (zero) disables the function. The default is OFF.
Hotkey Command Mode	Enables / Disables the Hotkey function (see “Hotkey Operation” on page 23), in case a conflict with programs running on the computers occurs. The default is ON.
Hotkey	Selects the Hotkey invocation keys (see “Hotkey Operation” on page 23). Choices are [NUM LOCK] + [-], OR [CTRL] + [F12]. The default is [NUM LOCK] + [-].
Set OSD Language	Sets the language for the OSD display. The default is English.
Set Console Keyboard	Sets the keyboard language mapping of the console keyboard. The default is Auto.
Set Logout Timeout	If there is no input from the console for the amount of time set with this function, the operator is automatically logged out. A login is necessary before the console can be used again. This enables other operators to gain access to the server when the original operator is no longer accessing them, but has forgotten to log out. To set the timeout value, enter a number from 1-180 minutes, then press [ENTER]. If the number is 0 (zero), this function is disabled. Default is Off. Note: This feature does not function if Set Login Mode is disabled (see page 20).

Activate Beeper	Choices are [Y] (Yes), or [N] (No). When activated, the beeper sounds when a port is changed, when activating the Auto Scan function, or an invalid entry is made on an OSD menu. The default is ON.
Set Quick View Ports	The administrator can select which ports to include as Quick View ports. To select/deselect a port as a Quick View Port, use the navigation keys to move the highlight bar to the selection, then press the [SPACEBAR]. When a port has been selected as a Quick View Port, an arrowhead displays in the QV column of the List on the Main Screen to indicate selection. When a port is deselected, the arrowhead disappears. If one of the Quick View options is chosen for the List view, only a port that has been selected here will display on the List. If one of the Quick View options is chosen for Auto Scanning, only a port that has been selected here will be Auto Scanned. The default is for no ports to be selected.

F4: ADM

F4 is an administrator only function. Accessing this function allows the administrator to configure and control the overall operation of the OSD. To change a setting double-click it; or use the up and down arrow keys to move the highlight bar to the setting, then press [ENTER].

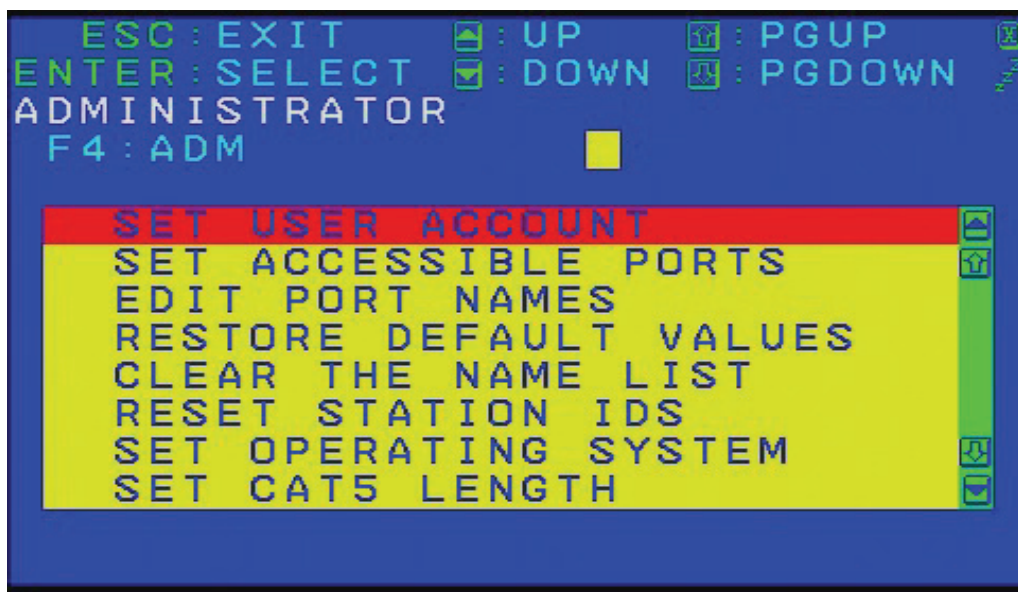

After you select an item, a submenu with further choices opens. Double-click the choice, or move the highlight bar to it, then press [ENTER]. An icon appears before the selected choice.

Setting	Function
Set User Account	<p>This function is used to set usernames and passwords for the administrator and users: one Administrator account and ten user accounts can be set.</p> <p>After the administrator field or one of the user fields is selected, a screen that allows you to enter your username and password opens.</p> <p>For each user, enter the username and password, then press [ENTER]. To abort the change, press [ESC].</p> <p>The username and password may be up to 16 characters long.</p> <p>The following characters are allowed : A-Z 0-9 ():+-/:?,[]</p> <p>The Sun icon indicates data is stored in the account.</p> <p>To modify or delete a previous username and/or password, use the backspace key to erase the letters or numbers. Can't delete user accounts.</p>

Set Accessible Ports	<p>This function allows the administrator to define user access to the servers on the installation on a port-by-port basis.</p> <p>For each user, select the target port, then press the [Spacebar] to cycle through the choices: F (Full Access), V (View Only), or N (No Access). Repeat until all access rights have been set, then press [ESC]. The default is F for all users on all ports.</p> <p>Note: An “N” setting means that no access rights are granted. The port will not show up on the user's list on the Main Screen.</p>
Edit Port Names	<p>To identify which server is attached to a particular port, every port can be assigned a name. This function allows the administrator to create, modify, or delete port names.</p> <p>To assign a port name: Click on the port, or use the navigation keys to move the highlight bar to it, then press [ENTER].</p> <p>When you have finished editing, press [ENTER] to have the change take effect. To abort the change, press [ESC].</p> <p>The username and password may be up to 15 characters long.</p> <p>The following characters are allowed : A-Z 0-9 ():+-/:?,[]</p>
Restore Default Values	<p>This function will undo all changes and return the setup to the original factory default settings except for the account and port names settings that were assigned to the ports.</p>
Clear the Name List	<p>This function clears the port name list.</p>
Reset Station IDs	<p>This function directs the OSD to re-scan the station positions of the entire installation and updates the OSD so that the OSD station information corresponds to the new physical layout.</p>
Set Operating System	<p>OS of the server attached to each port. You must configure each port on the installation. For each port, press the [SPACEBAR] to cycle through the choices (WIN, Mac or Sun). Repeat until all the ports have been set, then press [ESC]. The default is WIN. (WIN:Windows OS)</p> <p>Note: A Sun or Mac computer may not boot when you run it for the first time unless the correct operating system is set for the port to which it is connected.</p>
Set Cat 5 Length	<p>Lets you specify how long the Cat 5e/6 cable between the port and the KVM adapter cable is. Press [SPACEBAR] to cycle through the cable length settings:</p> <ul style="list-style-type: none"> • S: Short - for up to 25 m • M: Medium - for between 20 and 35 m • L: Long - for above 35 m <p>An S, M, or L appears next to the port to indicate the choice.</p>
Set Keyboard Language	<p>Sets the keyboard language layout for the server attached to each port. Press [SPACEBAR] to cycle through the choices. The default is English (US).</p>
Firmware Upgrade	<p>Unused in this device.</p> <p>If Firmware Upgrade Utility is enable, press reset switch to reboot the derive. In case of chained tiering connections. it is necessary to reboot all device.</p>
Adapter Upgrade	<p>Unused in this device.</p> <p>If Firmware Upgrade Utility is enable, press reset switch to reboot the derive. In case of chained tiering connections. it is necessary to reboot all device.</p>
Set Login Mode	<p>This function allows the administrator to request users to login or not. When the login dialog box is disabled, the system disables the login/ logout function. If the system is re-started, the login/logout function remains disabled.</p>

F5: SKP

Skip backward or forward, switching the console focus from the currently active KVM Port to the previous or next available port.

- The selection of servers to be available for Skip mode switching is made with the Scan/Skip mode setting under the F3: SET function.
- When you are in Skip mode, press:
 - Left arrow to skip to the previous accessible port
 - Right arrow to skip to the next accessible port
 - Up arrow to skip to the last accessible port of the each hierarchy station
 - Down arrow to skip to the first accessible port of the each hierarchy station



Note: When you skip, you only skip to the previous or next available server that is in the Scan/Skip mode selection (see “Scan/Skip Mode” on page 18).

- If a port has been selected for Scan/Skip mode, when the focus switches to that port a left/right triangle symbol appears before its port ID display.
- To exit Skip mode, press the [SPACEBAR] or [ESC].

F6: BRC

F6 is an administrator only function. When this function is in effect, commands sent from the console are broadcast to all available server on the installation.

This function is particularly useful for operations that need to be performed on multiple servers (such as performing a system wide shutdown, installing or upgrading software, etc.).

BRC works in conjunction with the F2: LIST function. The List function (see “F2: LIST” on page 17), is used to broaden or narrow the focus of which ports appear on the OSD Main Screen. When you broadcast a command, it is to the ports currently displayed on the OSD Main Screen.

- While BRC mode is in effect, a speaker symbol appears before the port ID display of the port that currently has the console focus.
- While BRC mode is in effect, the mouse will not function normally. Exit BRC mode in order to regain control of the mouse.
- To exit BRC mode, invoke the OSD (with the OSD Hotkey), then click the F6 field, or press [F6].

F7: SCAN

This function automatically switches among the available server at regular intervals so that their activity can be monitored without switching manually.

- The selection of server to be included for Auto Scanning is made with the Scan/Skip mode setting under the F3: SET function (see “F3: SET” on page 17).
- The amount of time that each port displays is set with the Scan Duration setting under the F3: SET function (see “F3: SET” on page 17).
- As each server is accessed, an “S” appears in front of the port ID display to indicate that it is being accessed under Auto Scan mode.
- While you are in Auto Scan mode, you can pause the scanning in order to keep the focus on a particular server either by pressing [P], or with a left-click of the mouse. To resume scanning, press any key or left-click again.
- While Auto Scan mode is in effect, the console will not function normally. Exit Auto Scan mode in order to regain control of the console.
- To exit Auto Scan mode, press the [SPACEBAR] or [ESC].

F8: LOGOUT

Click in the F8 field, or press [F8] to log out of the OSD and blank the console screen. This is different from deactivating the OSD when from the Main Screen by pressing [ESC].

With this function you must log in all over again to regain access to the OSD. (When [ESC] is pressed, you just tap the OSD Hotkey a to re-enter the OSD.)



Note: 1. When you reenter the OSD after logging out, the screen stays blank except for the login dialog box. Before continuing, enter your username and password (see “On Screen Display (OSD) Operation” on page 13). If your login has been disabled by the administrator, the F8 function is also disabled.

2. If you re-enter the OSD after logging out, and immediately use [ESC] to deactivate the OSD without selecting a port from the OSD menu, a Null Port message displays on the screen. The OSD hotkey will open the OSD Main Screen.

Hotkey Operation

Hotkey Port Control

Hotkey port control allows you to provide KVM focus to a particular server directly from the keyboard. The KVM switch has the following Hotkey port control features:

- Selecting the Active Port
- Auto Scan Mode Switching
- Skip Mode Switching

The following settings can also be controlled in Hotkey mode:

- Setting the Beeper
- Setting the Quick Hotkey
- Setting the OSD Hotkey
- Setting the Port Operating System
- Restoring the OSD Default Values

Invoking Hotkey Mode

All Hotkey operations begin by invoking Hotkey mode (see “Hotkey Command Mode” on page 18). To invoke Hotkey mode two possible keystroke sequences shown below can be used (see “Hotkey” on page 18). Only one of the key sequences below can be operational.

[NUM LOCK] + [-]

1. Hold down the [NUM LOCK] key.
2. Press and release the [MINUS] key.
3. Release the [NUM LOCK] key.

[CTRL] + [F12]

1. Hold down the [CTRL] key.
2. Press and release the [F12] key.
3. Release the [CTRL] key.

Hotkey mode environment

When Hotkey mode is active:

- A command line appears on the monitor screen. The command line prompt is the word Hotkey in white text on a blue background, and displays the subsequent Hotkey information that you enter.
- Ordinary keyboard and mouse functions are suspended. Only Hotkey compliant keystrokes can be input.

Exiting hotkey mode

Press [ESC] to exit Hotkey mode.

Selecting the Active Port

Each server port is assigned a port ID (see “Port ID Numbering” on page 12). Any server can be directly accessed with a Hotkey combination that specifies the port ID that the server is connected to. To select the active port:

1. Invoke Hotkey mode: [NUM LOCK] + [-] OR [CTRL] + [F12].
2. Enter the port ID. The port ID numbers display on the command line as you enter them. Use [BACKSPACE] to erase any mistakes.
3. Press [ENTER] to focus the KVM switches to the designated computer and automatically exits Hotkey mode.



Note: In Hotkey mode, the KVM focus will not switch to a port if an invalid switch or port number is entered. The Hotkey command line will continue to display until a valid switch and port number combination is entered, or Hotkey mode is exited.

Auto Scan Mode Switching

Auto Scan automatically switches at regular intervals through all the active computer ports accessible to the currently logged on user. This allows activity to be monitored automatically. See “F7: SCAN” on page 22 for more information.

Setting the scan interval

The amount of time Auto Scan stays focused on each port is set with the “Scan Duration” setting of the OSD F3: SET function (see “F3: SET” on page 17). The scan interval can be changed before activating Hotkey Auto Scanning by entering the following Hotkey combination:

1. Invoke Hotkey mode: [NUM LOCK] + [-] or [CTRL] + [F12].
2. Enter [A][N]: Where [A] is the letter A, and [N] is a number from 1-255 that represents the length of the focus time in seconds.
3. Press [ENTER] to exit Hotkey mode. Auto Scanning can now be started.

Invoking Auto Scan

To invoke Auto Scanning mode, enter the following Hotkey combination:

1. Invoke Hotkey mode: [NUM LOCK] + [-] or [CTRL] + [F12].
2. Press [A] + [ENTER]: To start Auto Scanning mood.

Exiting Auto Scan

To exit Auto Scan press [ESC] or [SPACEBAR]. Scanning stops when Auto Scan is exited.

Skip Mode Switching

Switch between servers to manually monitor them. Focus on a particular port for as long as you like, as opposed to auto-scanning, which automatically switches the port focus after a fixed interval. See “F5: SKIP” on page 21 for more information.

Entering skip mode

To enter Skip mode, enter the following Hotkey combination:

1. Invoke Hotkey mode: [NUM LOCK] + [-] or [CTRL] + [F12].
2. You press the arrow keys, Hotkey mode is automatically exited and Skip mode entered. Switch ports as follows:
 - **Left** arrow to skip to the previous accessible port
 - **Right** arrow to skip to the next accessible port
 - **Up** arrow to skip to the last accessible port of the each hierarchy station
 - **Down** arrow to skip to the first accessible port of the each hierarchy station
3. Once in Skip mode, continue skipping by pressing the arrow keys. The [NUM LOCK] + [-] combination does not have to be used again.
4. While Skip mode is engaged, ordinary keyboard and mouse functions are suspended. Only Skip mode compliant keystrokes can be input. Exit Skip mode to regain normal control of the console.

Exiting skip mode

To exit Skip mode, press [ESC] or [SPACEBAR].

Setting the Hotkey Beeper ON/OFF

Turn the beeper (see “Activate Beeper” on page 19) on and off with Hotkeys:

1. Invoke Hotkey mode: [NUM LOCK] + [-] or [CTRL] + [F12].
2. Press [B] to turn the beeper on or off. The command line displays “Beeper On” or “Beeper Off” for one second; then the message disappears Hotkey mode is automatically exited.

Setting the Hotkey Key Combination

Switch the keys used to enter the Hotkey Mode (see “Hotkey Operation” on page 23)

1. Invoke Hotkey mode: [NUM LOCK] + [-] or [CTRL] + [F12].
2. Press [H] to display the command line “Hotkey has Been Changed” for one second, then the message closes and Hotkey mode is automatically exited.

Setting the OSD Hotkey combination

Hotkeys used to access the OSD (see “OSD Hotkey” on page 18) can be switched between [SCROLL LOCK], [SCROLL LOCK], [CTRL], [CTRL], and [ALT], [ALT].

1. Invoke Hotkey mode: [NUM LOCK] + [-] or [CTRL] + [F12].
2. Press [T] to display the command line “Hotkey has Been Changed” for one second then the message closes and Hotkey mode is automatically exited.

Setting the Port Operating System

Match a port's operating system configuration to that of the computer attached to the port.

1. Invoke Hotkey mode: [NUM LOCK] + [-] or [CTRL] + [F12].
2. Press one of the following function keys:

Key	Description
F1	Sets the Port OS to Windows
F2	Sets the Port OS to Mac
F3	Sets the Port OS to Sun

After pressing a function key, Hotkey mode is automatically exited.

Restore the Default Values

Restore the KVM switch default values (see “Restore Default Values” on page 20) using this administrator-only Hotkey.

1. Invoke Hotkey mode: [NUM LOCK] + [-] or [CTRL] + [F12].
2. Press [R].
3. Press [ENTER] to display the command line “Reset to Default Setting” for three seconds, then the message closes and Hotkey mode is automatically exited.


 






Hotkey Summary Table

[NUM LOCK] + [-] OR [CTRL] + [F12]	[A] [N] [ENTER] [N] is a scan interval: 1-255 (Omissible)	Invokes Auto Scan mode. When Auto Scan mode is in effect, [P] or left-click pauses auto-scanning. When auto-scanning is paused, pressing any key or another left-click resumes auto-scanning
	[B]	Toggles the Beeper On or Off.
	[ESC] or [SPACEBAR]	Exits hotkey mode.
	[F1]	Sets the Operating System to Windows
	[F2]	Sets the Operating System to Mac
	[F3]	Sets the Operating System to Sun
	[H]	Toggles the Hotkey invocation keys.
	[Port ID] [ENTER]	Switches access to the computer that corresponds to the Port ID.
	[R] [ENTER]	Administrator-only Hotkey. It returns the switch's settings to their default values.
	[T]	Toggles the OSD Hotkey between [CTRL] [CTRL] and [SCROLL LOCK] [SCROLL LOCK].
	◀	Invokes Skip Mode and skips from the current port to the first accessible port previous to it.
	▶	Invokes Skip Mode and skips from the current port to the next accessible port.
	▲	Invokes Skip Mode and skips from the current port to the last accessible port of the previous Station.
	▼	Invokes Skip Mode and skips from the current port to the first accessible port of the next Station.

Keyboard Emulation

Mac Keyboard

The PC compatible (101/104 key) keyboard can emulate the functions of the Mac keyboard. The emulation mappings are listed in the table below.










PC Keyboard	Mac Keyboard
[SHIFT]	SHIFT
[CTRL]	CTRL
	
[CTRL] [1]	
[CTRL] [2]	
[CTRL] [3]	
[CTRL] [4]	
[ALT]	ALT
[PRINT SCREEN]	F13
[SCROLL LOCK]	F14
	=
[ENTER]	RETURN
[BACKSPACE]	DELETE
[INSERT]	HELP
[CTRL] 	F15



Note: When using key combinations, press and release the first key [CTRL], then press and release the activation key.

Sun Keyboard

The PC compatible (101/104 key) keyboard can emulate the functions of the Sun keyboard when the Control key [CTRL] is used in conjunction with other keys. The corresponding functions are shown below.

PC Keyboard	Sun Keyboard
[CTRL] [T]	Stop
[CTRL] [F2]	Again
[CTRL] [F3]	Props
[CTRL] [F4]	Undo
[CTRL] [F5]	Front
[CTRL] [F6]	Copy
[CTRL] [F7]	Open
[CTRL] [F8]	Paste
[CTRL] [F9]	Find
[CTRL] [F10]	Cut
[CTRL] [1]	 
[CTRL] [2]	 
[CTRL] [3]	 
[CTRL] [4]	
[CTRL] [H]	Help
	Compose
	Meta



Note: When using key combinations, press and release the first key (CTRL), then press and release the activation key.

Troubleshooting

Overview

Operation problems can be due to a variety of causes. The first step in solving them is to make sure that all cables are securely attached and seated completely in their sockets.

Symptom	Action
Mouse and/or Keyboard not responding	Unplug the cable from the console port, then plug it back in.
All Station IDs display as 01	Station 1 suddenly lost power. Wait a few seconds for the system to re-initialize the station sequence and display the proper IDs. <ul style="list-style-type: none">• Perform a reset on station ID (see “Reset Station IDs” on page 20).• Unplug the chaining cable, then plug it back in.

OSD Factory Default Settings

Setting	Default
OSD Hotkey	[SCROLL LOCK] [SCROLL LOCK]
Port ID Display Position	Upper Left Corner
Port ID Display Duration	3 Seconds
Port ID Display Mode	The Port Number plus the Port Name
Scan Duration	5 Seconds
Scan/Skip Mode	All
Screen Blanker	OFF
Hotkey Command Mode	ON
Hotkey	[NUM LOCK] + [-]
Logout Timeout	OFF
Beeper	ON
Accessible Ports	F (Full Access) For all Users on all Ports
Operation Mode	Share
OSD Language	English

Connection Tables

The following table indicates the relationship between the number of KVM0108A / KVM0116A units and the number of computers that they control

KVM0108A

No.	Server	No.	Server	No.	Server	No.	Server
1	1-8	9	65 - 72	17	129 - 136	25	193 - 200
2	9 - 16	10	73 - 80	18	137 - 144	26	201- 208
3	17 - 24	11	81 - 88	19	145 - 152	27	209 - 216
4	25 - 32	12	89 - 96	20	153 - 160	28	217 - 224
5	33 - 40	13	97 - 104	21	161 - 168	29	225 - 232
6	41 - 48	14	105 - 112	22	169 - 176	30	233 - 240
7	49- 56	15	113 - 120	23	177- 184	31	241 - 248
8	57 - 64	16	121 - 128	24	185 - 192	32	249 - 256

KVM0116A

No.	Server	No.	Server	No.	Server	No.	Server
1	1 - 16	9	129 - 144	17	257 - 272	25	385 - 400
2	17 - 32	10	145 - 160	18	273 - 288	26	401 - 416
3	33 - 48	11	161 - 176	19	289 - 304	27	417 - 432
4	49 - 64	12	177 - 192	20	305 - 320	28	433 - 448
5	65 - 80	13	193 - 208	21	321 - 336	29	449 - 464
6	81 - 96	14	209 - 224	22	337 - 352	30	465 - 480
7	97- 112	15	225 - 240	23	353 - 368	31	481 - 496
8	113 - 128	16	241 - 256	24	369 - 384	32	497 - 512

Specifications

Function			KVM0108A	KVM0116A
Computer Connections	Direct		8	16
	Max		256	512
Connectors	Console Ports (back)	Keyboard	2 x 6-pin Mini-DIN Female (Purple) 2 x USB (Black)	2 x 6-pin Mini-DIN Female (Purple) 2 x USB T (Black)
		Video	2 x HDB-15 Female (Blue)	2 x HDB-15 Female (Blue)
		Mouse	2 x 6-pin Mini-DIN Female (Green) 2 x USB (Black)	2 x 6-pin Mini-DIN Female (Green) 2 x USB (Black)
	Console Ports (front)	Rack LCD Console	15 pin DIN Female	15 pin DIN Female
	KVM Port		8 x RJ-45 (Black)	16 x RJ-45 (Black)
	Power		1 x IEC C14	1 x IEC C14
	Chain In/Out		Serial Female	Serial Female
Switches	Reset		1 x Recessed Pushbutton	1 x Recessed Pushbutton
LEDs	Port		16 (Green/Red/Orange)	16 (Green/Red/Orange)
	Power		1 (Blue)	1 (Blue)
	Station ID		1 (Orange)	1 (Orange)
Video			1600x1200 @ 60Hz	1600x1200 @ 60Hz
I/P Rating			100-240VAC, 50/60Hz; 1.0A	100-240VAC, 50/60Hz; 1.0A
Power Consumption			20.6 W Max.	20.6 W Max.
Environment	Operating Temp.		32°F - 122°F (0 - 50°C)	32°F - 122°F (0 - 50°C)
	Storage Temp.		-4°F - 140°F (-20°C to 60°C)	-4°F - 140°F (-20°C to 60°C)
	Humidity		0 - 80% RH, Non-condensing	0 - 80% RH, Non-condensing
Physical Properties	Housing		Metal	Metal
	Weight / Shipping Weight		7 lbs. (3.2 kg) / 10.4 lbs. (4.7 kg)	7 lbs. (3.2 kg) / 10.4 lbs. (4.7 kg)
	Dimensions L x W x H		16.6 in (42.4cm) x 9.4 in (23.8cm) x 1.67 in (4.25 cm) (19" 1U)	16.6 in (42.4cm) x 9.4 in (23.8cm) x 1.67 in (4.25 cm) (19" 1U)

Radio Frequency Interference



Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

USA—FCC

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this user manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference. The user will bear sole responsibility for correcting such interference.

Canada—ICES

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Japan—VCCI

This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may occur, in which case, the user may be required to take corrective actions.

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラス A 情報技術装置です。この装置を家庭環境で使用すると、電波妨害を引き起こすことがあります。この場合には、使用者が適切な対策を講ずるよう要求されることがあります。

Taiwan—BSMI

警告使用者：
這是甲類的資訊產品，在居住的
環境中使用時，可能會造成射頻
干擾，在這種情況下，使用者會
被要求採取某些適當的對策。

Korean 한국

A 급 기기 (업무용 방송통신기기)

이 기기는 업무용 (A 급) 으로 전자파적합등록을 한 기기이오니판매자 또는 사용자는 이 점을 주의하시
기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다 .

Australia and New Zealand

Warning: This is a Class A product. In a domestic environment this product may cause radio interference, in which case the user may be required to take adequate measures.

European Union

This product is in conformity with the protection requirements of EU Council Directive 2014/30/EU on the approximation of the laws of the Member States relating to electromagnetic compatibility.



This product has been tested and found to comply with the limits for Class A Information Technology Equipment according to CISPR 32/European Standard EN 55032. The limits for Class A equipment were derived for commercial and industrial environments to provide a reasonable protection against interference with licensed communication equipment.

Warning: This is a Class A product. In a domestic environment this product may cause radio interference, in which case the user may be required to take adequate measures.