




FUJITSU Server PRIMERGY CX1640 M1 ご使用上の注意

このたびは、弊社の製品をお買い上げいただきまして、誠にありがとうございます。ご使用になる上での注意事項がございますので、本書をよくお読みの上、ご使用くださいますようお願いいたします。

2016 年 12 月
富士通株式会社

1. 型名・シリアル番号ラベルについて

シャーシにサーバノードを増設する場合、以下の手順に従ってサーバノードの型名・シリアル番号ラベルをシャーシの ID カードに貼付してください。

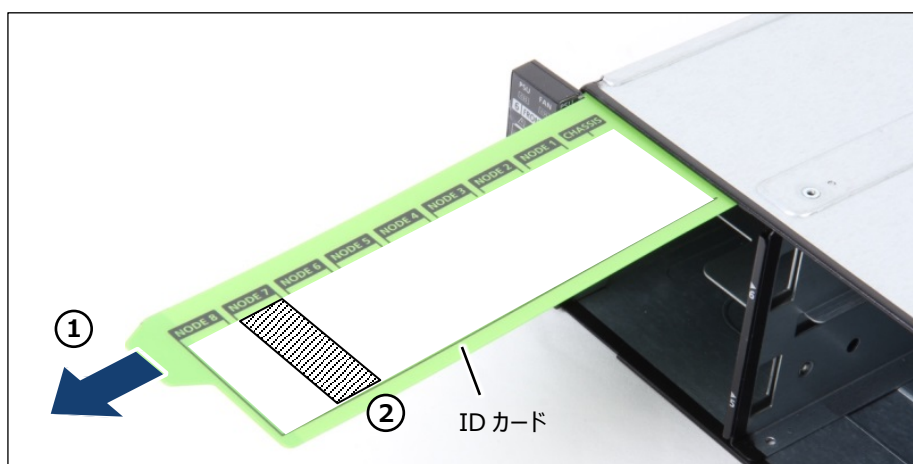

- ▶ ID カードをシャーシから引き出します (1)。
- ▶ サーバノードの製品型名とシリアル番号を記載したラベルを ID カードに貼ります (2)。
 - i** ● 製品型名とシリアル番号を記載したラベルは、サーバノードの納品物に含まれます。
 - ラベルは、該当するノード番号の所に貼ります。
上図では、例としてサーバノード 7 のラベル貼付位置を示しています。
 - ラベルが ID カードに貼付していない場合、保守サービスを受けられない可能性があります。
- ▶ ID カードをシャーシに押し込みます。

以上


Notes on using the FUJITSU Server PRIMERGY CX1640 M1

Thank you for purchasing the PRIMERGY product from us. Before using the server, please carefully read and follow the note and instruction described below.

December, 2016
FUJITSU LIMITED

1. Regarding the serial number label

When you added the server node into the server enclosure, stick the serial number label of the server node to the ID card of server enclosure in accordance with the following steps.

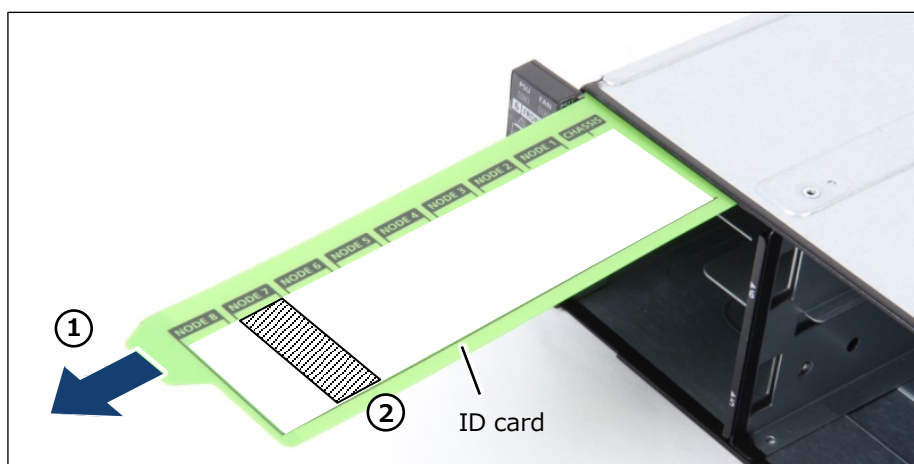

- ▶ Pull out the ID card from the server enclosure (1).
- ▶ Stick the label that describes the serial number of the server node on the ID card (2).



- The label that describes the serial number is included in the delivery pack of the server node.
- Stick the label on the place of the corresponding node number.
In the figure above, it shows the label sticking position of the server node 7 as an example.
- If you don't stick the label on the ID card, you may not be able to receive the maintenance service.

- ▶ Push the ID card into the server enclosure.

(End)